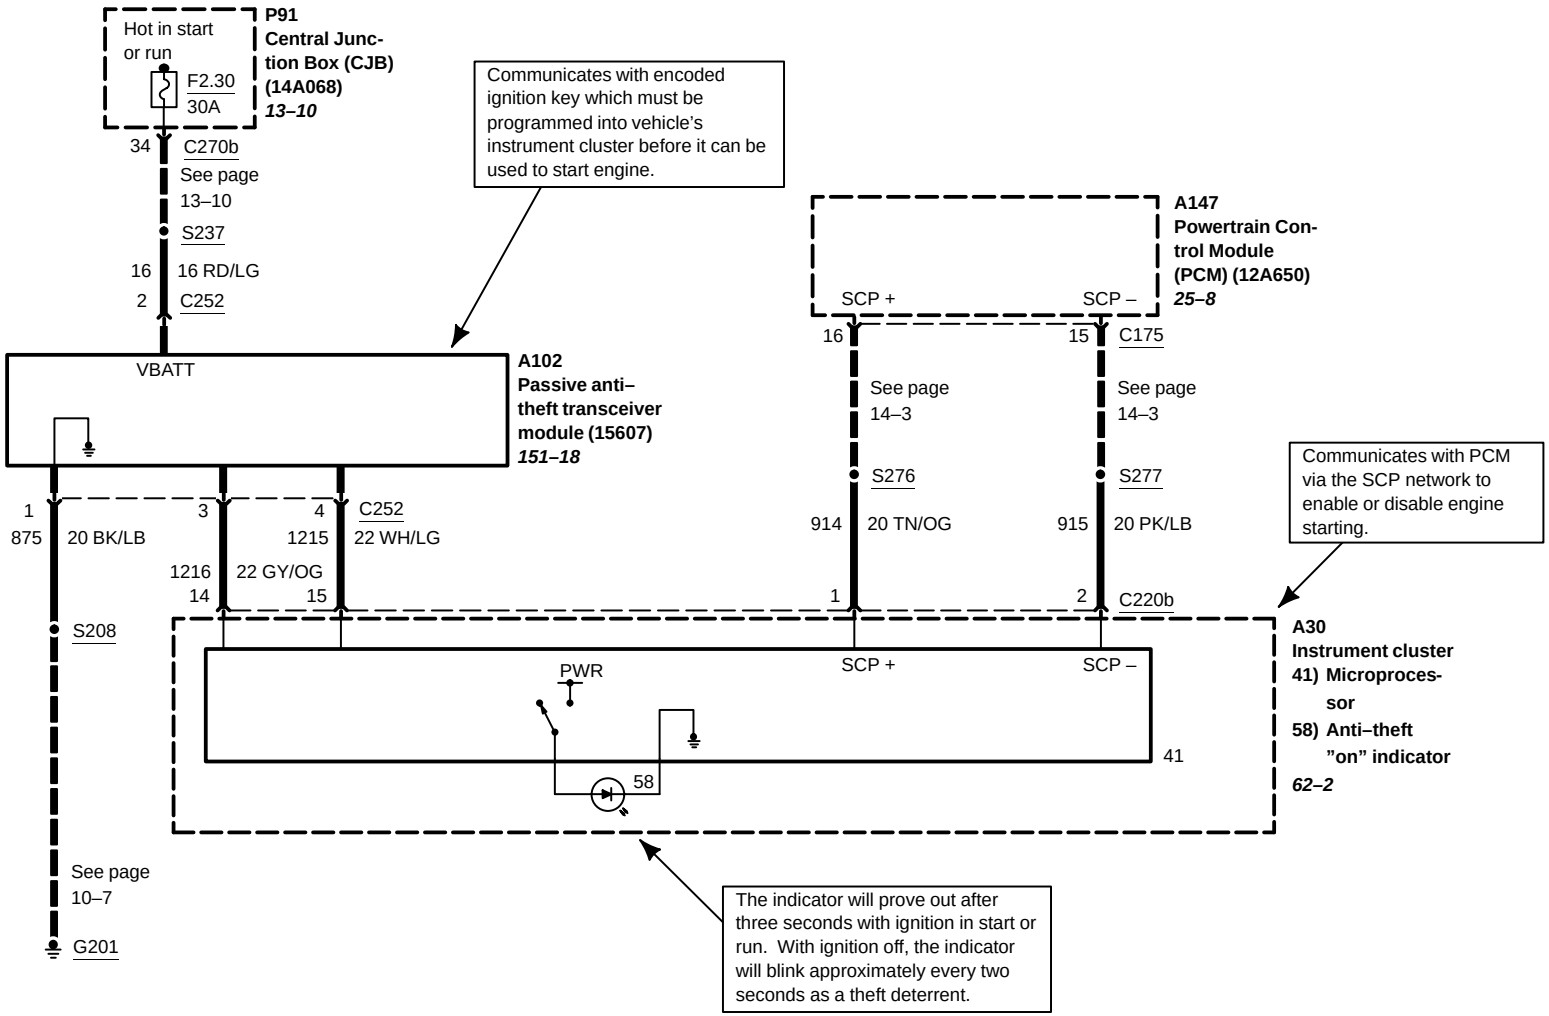
Hot in start or run
F2.30
30A
P91
Central Junction Box (CJB) (14A068)
13–10
34
C270b
See page 13–10
S237
16
16 RD/LG
2
C252
Communicates with encoded ignition key which must be programmed into vehicle's instrument cluster before it can be used to start engine.
A147
Powertrain Control Module (PCM) (12A650)
25–8
SCP +
SCP –
16
15
C175
See page 14–3
See page 14–3
S276
S277
914
20 TN/OG
915
20 PK/LB
Communicates with PCM via the SCP network to enable or disable engine starting.
VBATT
A102
Passive anti–theft transceiver module (15607)
151–18
1
875
20 BK/LB
3
1216
22 GY/OG
14
4
C252
1215
22 WH/LG
15
1
2
C220b
A30
Instrument cluster
41) Microprocessor
58) Anti–theft "on" indicator
62–2
S208
PWR
SCP +
SCP –
41
58
See page 10–7
G201
The indicator will prove out after three seconds with ignition in start or run. With ignition off, the indicator will blink approximately every two seconds as a theft deterrent.