C800

14A488



D3AB-14A459-FB (M)

14683 (RH)



D3AB-14489-UB (F)

(1) 882 (BN/YE)
(2) 881 (BN)

C801

14A488

Window adjust switch, right rear

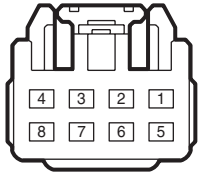

YF1T-14489-EA (F)

Pin	Circuit	Circuit Function
1	1205 (BK)	Illumination ground
2	320 (RD/BK)	Window switch feed, down
3	882 (BN/YE)	Window motor feed, down
4	170 (RD/LB)	Window lockout, control
5	1011 (TN/OG)	Illumination, power
6	—	not used
7	881 (BN)	Window motor feed, up
8	319 (YE/BK)	Window switch feed, up

C802

14A488

Speaker, right rear

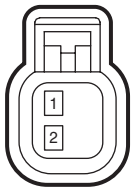

XR3T-14A464-BA (F)

Pin	Circuit	Circuit Function
1	802 (OG/RD)	Amplifier/speaker switch feed to right rear speaker
2	803 (BN/PK)	Amplifier/speaker switch ground to right rear speaker

C803

14683

Power window motor, right rear

XS71-14A464-LBA (F)

Pin	Circuit	Circuit Function
1	881 (BN)	Window motor feed, up
2	882 (BN/YE)	Window motor feed, down

C804

14A488

Door lock actuator, right rear

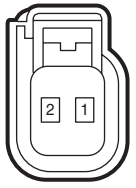

YF1T-14A464-FA (F)

Pin	Circuit	Circuit Function
1	117 (PK/BK)	Door lock motor (lock)
2	118 (PK/OG)	Door lock motor (unlock)