C225

14401

A13
Remote amplifier, front

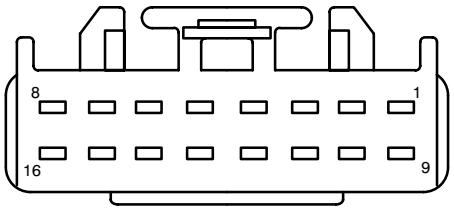

F16029

Pin	Circuit	Circuit Function
1	1-MD12 (WH)	Audio signal positive
2	2-MD12 (GY)	Audio signal negative
3	48-MD12	Drain wire
4	–	not used
5	8-MD31 (WH/GN)	Sensor signal
6	10-MD31 (GY/OG)	Signal 2 (Y–direction, reverse, downward)
7	8-MD30 (WH/BU)	Sensor signal
8	10-MD30 (GY/VT)	Signal 2 (Y–direction, reverse, downward)
9	–	not used
10	–	not used
11	–	not used
12	–	not used
13	7-MD12 (YE)	Voltage D.C. supplied at all times (sensor)
14	–	not used
15	31-MD12 (BK/YE)	Ground
16	29-MD12 (OG/YE)	Voltage supplied at all times (overload protected)

C226

14401

B36
Steering position sensor



F04027

Pin	Circuit	Circuit Function
1	15-CC16 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected)
2	10-CC17 (GY)	Signal 2 (Y–direction, reverse, downward)
3	8-CC18 (WH/RD)	Sensor signal
4	9-CC16 (BN/YE)	Sensor signal return (reference/ ground)

C227

14401

M223
Steering column position motor

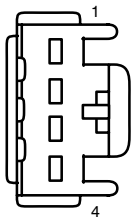

F04155

Pin	Circuit	Circuit Function
1	33-AL6 (YE/BU)	Switched between: Battery voltage, Ground or Open
2	32-AL6 (WH/BU)	Switched between: Battery voltage, Ground or Open
3	35-AL7 (VT/BK)	Switched between: Battery voltage, Ground or Open
4	34-AL7 (BU/BK)	Switched between: Battery voltage, Ground or Open