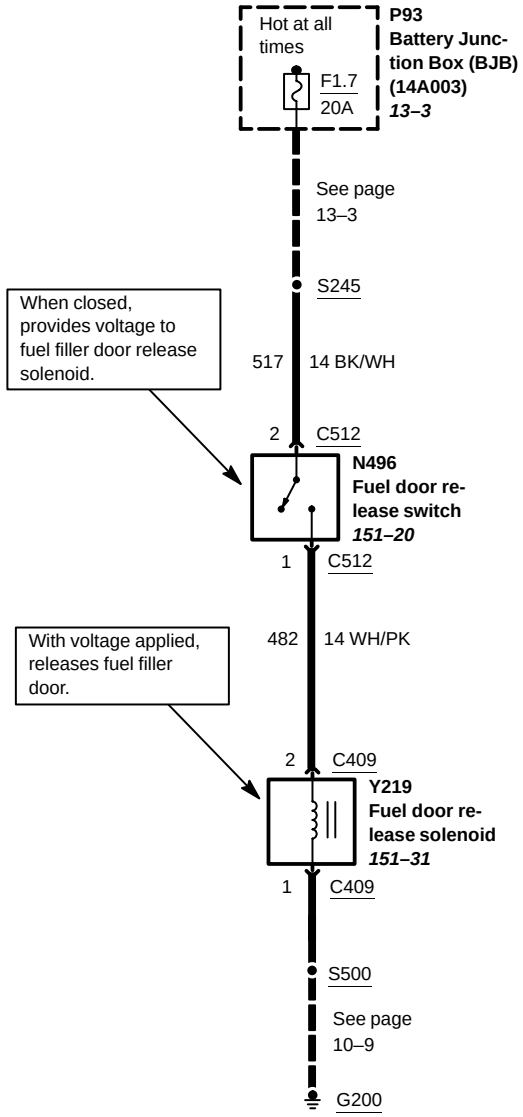
Hot at all times
F1.7
20A
P93
Battery Junction Box (BJB)
(14A003)
13–3
See page 13–3
S245
When closed, provides voltage to fuel filler door release solenoid.
517
14 BK/WH
2
C512
N496
Fuel door release switch
151–20
1
C512
With voltage applied, releases fuel filler door.
482
14 WH/PK
2
C409
Y219
Fuel door release solenoid
151–31
1
C409
S500
See page 10–9
G200