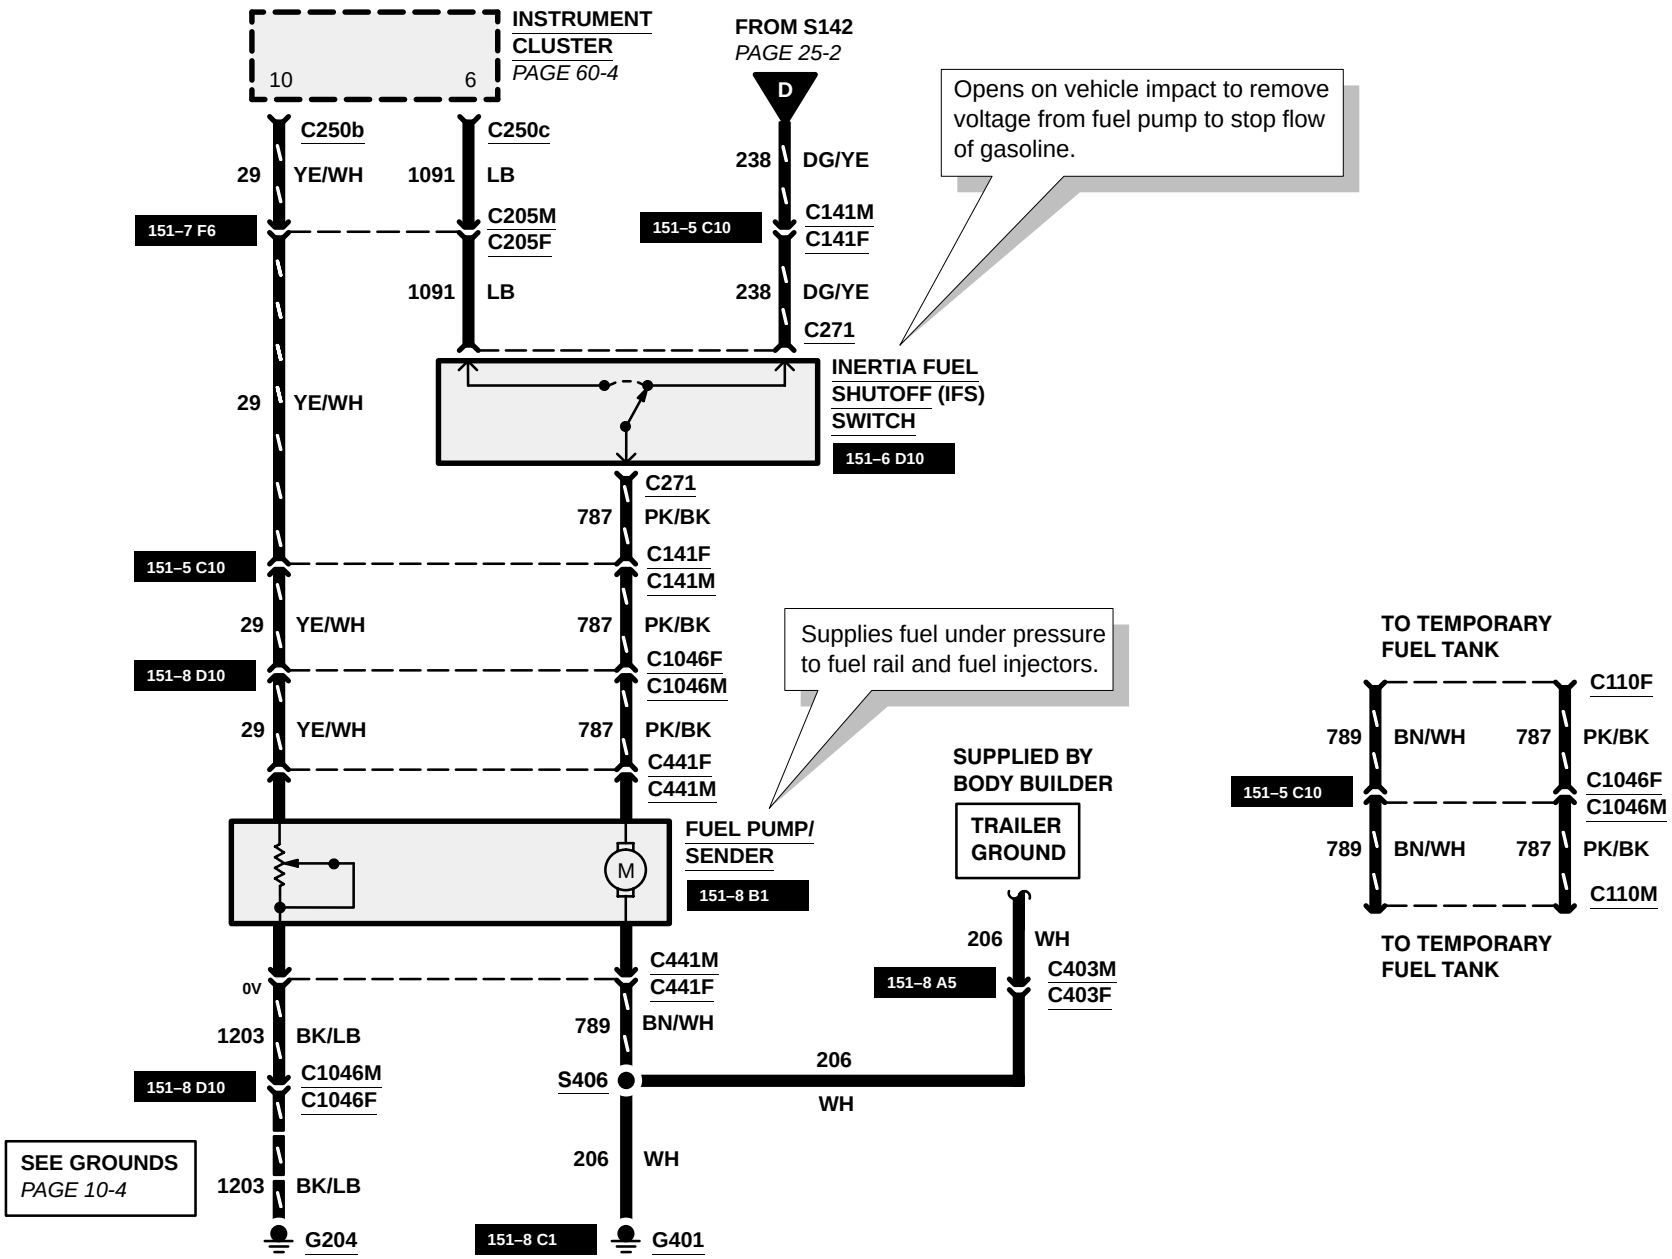
INSTRUMENT CLUSTER
PAGE 60-4
10
6
FROM S142
PAGE 25-2
D
Opens on vehicle impact to remove voltage from fuel pump to stop flow of gasoline.
C250b
29 YE/WH
C250c
1091 LB
238 DG/YE
151–7 F6
C205M
C205F
151–5 C10
C141M
C141F
1091 LB
238 DG/YE
C271
INERTIA FUEL SHUTOFF (IFS) SWITCH
151–6 D10
29 YE/WH
C271
787 PK/BK
C141F
C141M
151–5 C10
29 YE/WH
787 PK/BK
C1046F
C1046M
151–8 D10
29 YE/WH
787 PK/BK
C441F
C441M
Supplies fuel under pressure to fuel rail and fuel injectors.
SUPPLIED BY BODY BUILDER
TRAILER GROUND
FUEL PUMP/ SENDER
M
151–8 B1
206 WH
C403M
C403F
151–8 A5
C441M
C441F
0V
789 BN/WH
1203 BK/LB
206 WH
S406
C1046M
C1046F
151–8 D10
SEE GROUNDS
PAGE 10-4
1203 BK/LB
206 WH
G204
151–8 C1
G401
TO TEMPORARY FUEL TANK
C110F
789 BN/WH
787 PK/BK
151–5 C10
C1046F
C1046M
789 BN/WH
787 PK/BK
C110M
TO TEMPORARY FUEL TANK