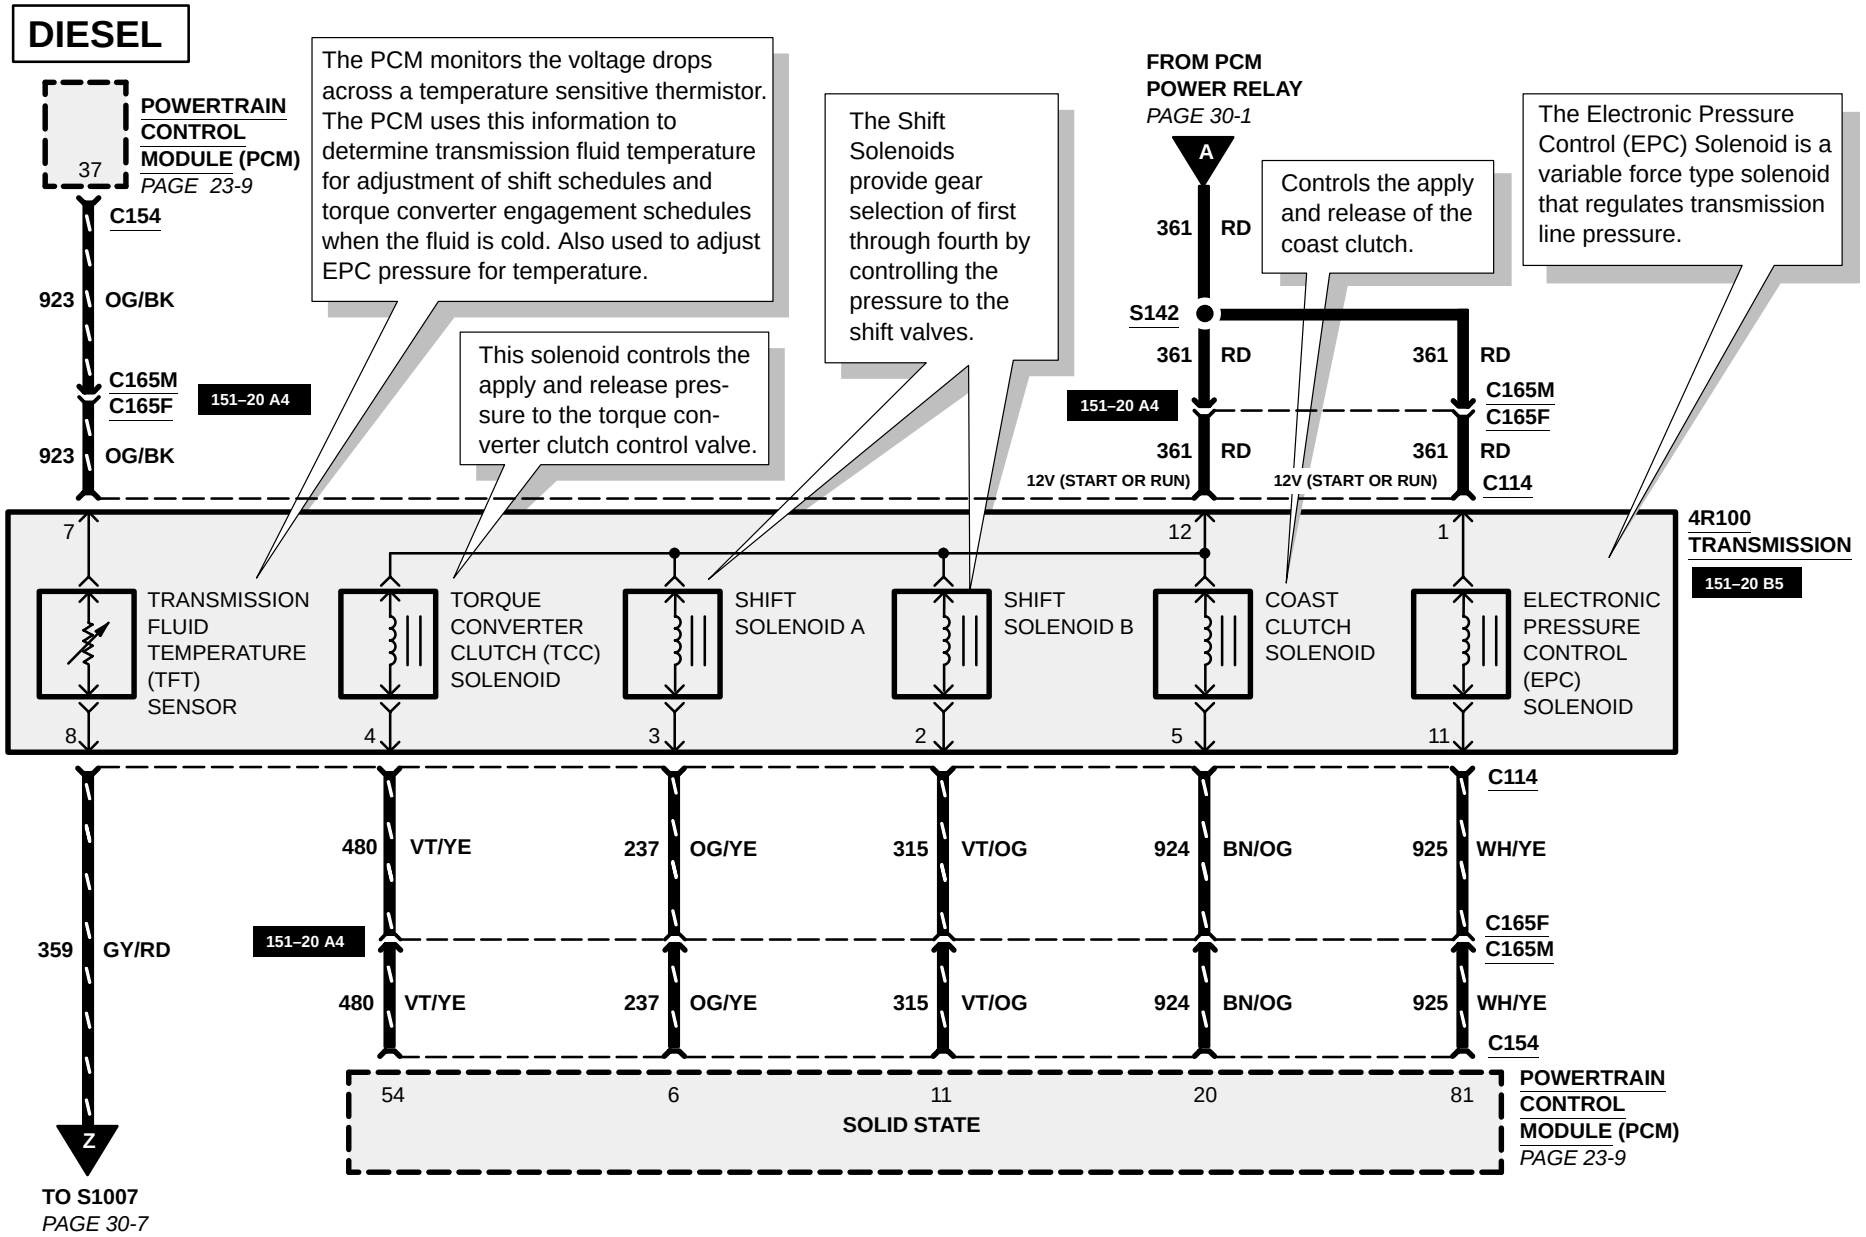
DIESEL
POWERTRAIN CONTROL MODULE (PCM)
PAGE 23-9
37
C154
923 OG/BK
C165M
C165F
151–20 A4
923 OG/BK
The PCM monitors the voltage drops across a temperature sensitive thermistor. The PCM uses this information to determine transmission fluid temperature for adjustment of shift schedules and torque converter engagement schedules when the fluid is cold. Also used to adjust EPC pressure for temperature.
This solenoid controls the apply and release pressure to the torque converter clutch control valve.
The Shift Solenoids provide gear selection of first through fourth by controlling the pressure to the shift valves.
FROM PCM POWER RELAY
PAGE 30-1
A
361 RD
S142
361 RD
151–20 A4
361 RD
12V (START OR RUN)
Controls the apply and release of the coast clutch.
361 RD
C165M
C165F
361 RD
12V (START OR RUN)
C114
The Electronic Pressure Control (EPC) Solenoid is a variable force type solenoid that regulates transmission line pressure.
4R100 TRANSMISSION
151–20 B5
7
12
1
TRANSMISSION FLUID TEMPERATURE (TFT) SENSOR
TORQUE CONVERTER CLUTCH (TCC) SOLENOID
SHIFT SOLENOID A
SHIFT SOLENOID B
COAST CLUTCH SOLENOID
ELECTRONIC PRESSURE CONTROL (EPC) SOLENOID
8
4
3
2
5
11
C114
480 VT/YE
237 OG/YE
315 VT/OG
924 BN/OG
925 WH/YE
C165F
C165M
359 GY/RD
151–20 A4
480 VT/YE
237 OG/YE
315 VT/OG
924 BN/OG
925 WH/YE
C154
54
6
11
20
81
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
PAGE 23-9
Z
TO S1007
PAGE 30-7