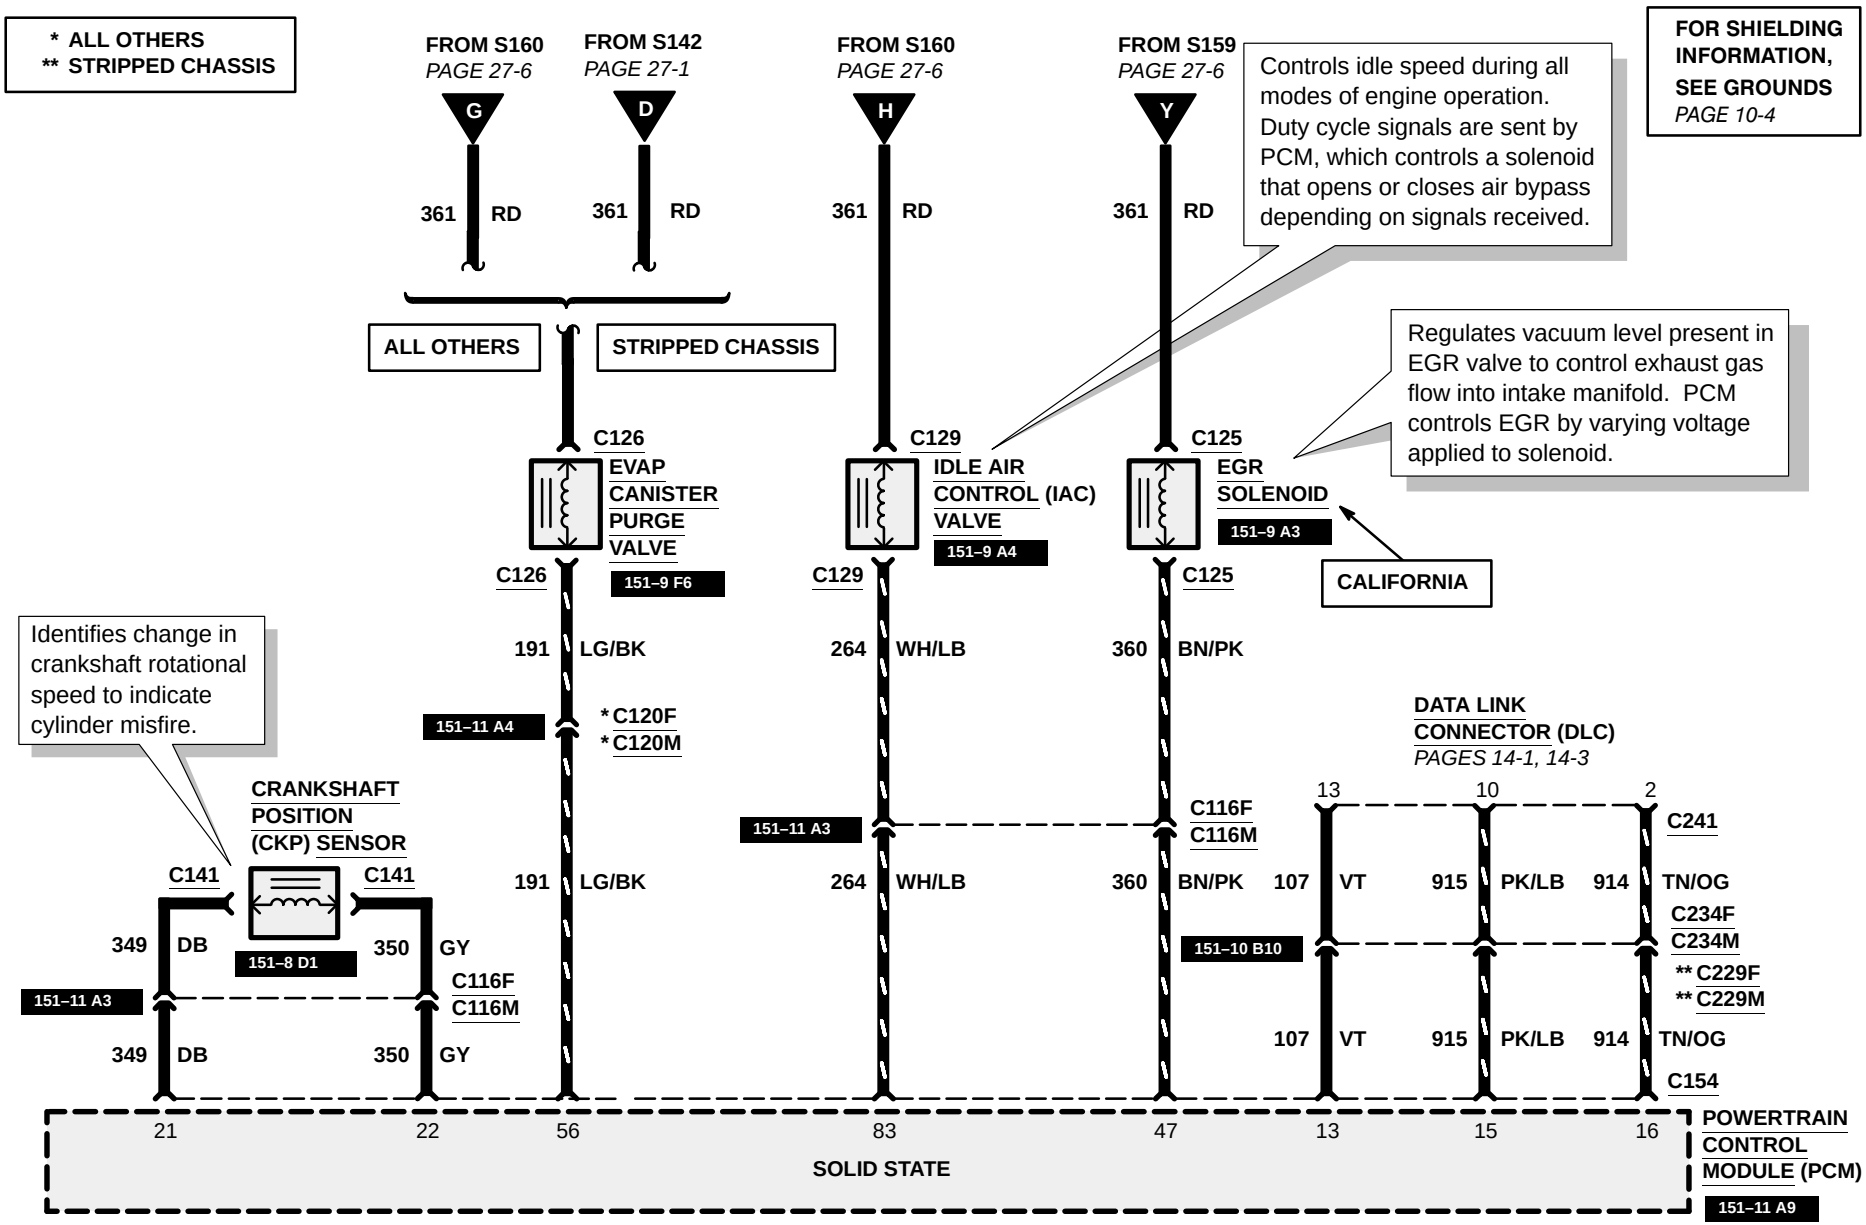
* ALL OTHERS
** STRIPPED CHASSIS
FROM S160
PAGE 27-6
FROM S142
PAGE 27-1
FROM S160
PAGE 27-6
FROM S159
PAGE 27-6
FOR SHIELDING INFORMATION, SEE GROUNDS
PAGE 10-4
G
D
H
Y
361 RD
361 RD
361 RD
361 RD
Controls idle speed during all modes of engine operation. Duty cycle signals are sent by PCM, which controls a solenoid that opens or closes air bypass depending on signals received.
ALL OTHERS
STRIPPED CHASSIS
Regulates vacuum level present in EGR valve to control exhaust gas flow into intake manifold. PCM controls EGR by varying voltage applied to solenoid.
C126
EVAP CANISTER PURGE VALVE
151–9 F6
C129
IDLE AIR CONTROL (IAC) VALVE
151–9 A4
C125
EGR SOLENOID
151–9 A3
CALIFORNIA
C126
C129
C125
191 LG/BK
264 WH/LB
360 BN/PK
151–11 A4
*C120F
*C120M
Identifies change in crankshaft rotational speed to indicate cylinder misfire.
DATA LINK CONNECTOR (DLC)
PAGES 14-1, 14-3
13
10
2
C241
C116F
C116M
151–11 A3
CRANKSHAFT POSITION (CKP) SENSOR
C141
C141
191 LG/BK
264 WH/LB
360 BN/PK
107 VT
915 PK/LB
914 TN/OG
C234F
C234M
151–10 B10
**C229F
**C229M
349 DB
350 GY
151–8 D1
151–11 A3
C116F
C116M
349 DB
350 GY
107 VT
915 PK/LB
914 TN/OG
C154
21
22
56
83
47
13
15
16
POWERTRAIN CONTROL MODULE (PCM)
SOLID STATE
151–11 A9