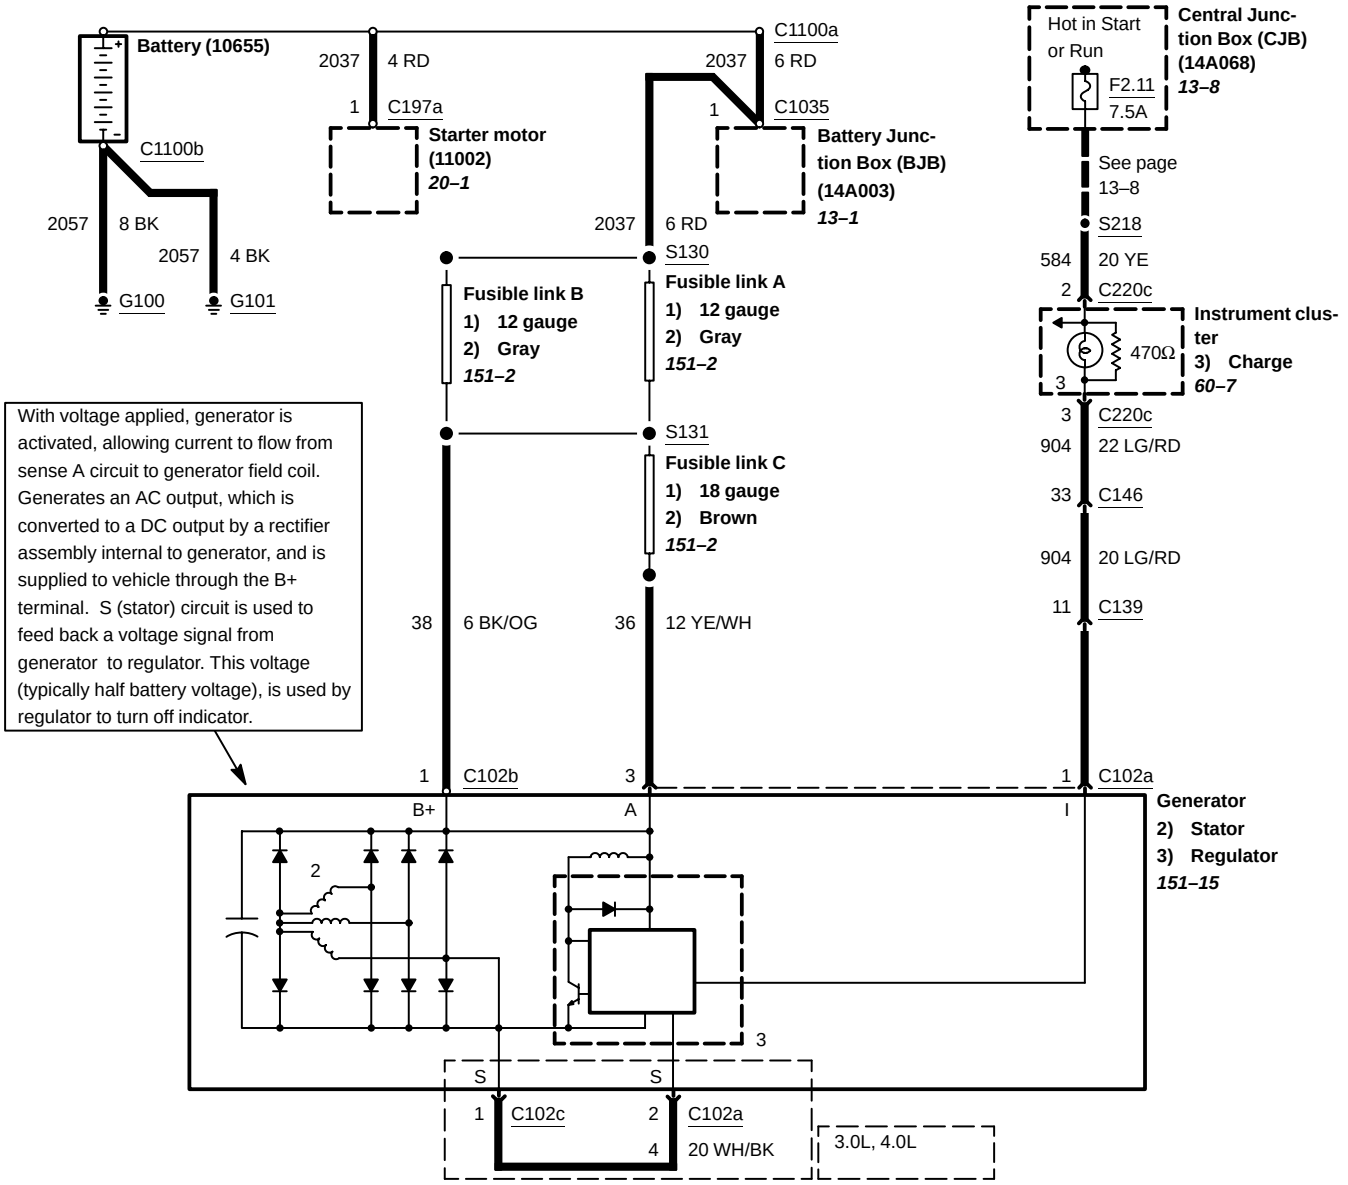
Battery (10655)
C1100b
2057 8 BK
G100
2057 4 BK
G101
2037 4 RD
1 C197a
Starter motor (11002) 20–1
C1100a
2037 6 RD
1 C1035
Battery Junction Box (BJB) (14A003) 13–1
2037 6 RD
S130
Fusible link A 1) 12 gauge 2) Gray 151–2
Fusible link B 1) 12 gauge 2) Gray 151–2
S131
Fusible link C 1) 18 gauge 2) Brown 151–2
38 6 BK/OG
36 12 YE/WH
With voltage applied, generator is activated, allowing current to flow from sense A circuit to generator field coil. Generates an AC output, which is converted to a DC output by a rectifier assembly internal to generator, and is supplied to vehicle through the B+ terminal. S (stator) circuit is used to feed back a voltage signal from generator to regulator. This voltage (typically half battery voltage), is used by regulator to turn off indicator.
1 C102b
3
B+
A
2
3
S
S
1 C102c
2 C102a
4 20 WH/BK
3.0L, 4.0L
Hot in Start or Run
F2.11 7.5A
Central Junction Box (CJB) (14A068) 13–8
See page 13–8
S218
584 20 YE
2 C220c
470Ω
3
Instrument cluster 3) Charge 60–7
3 C220c
904 22 LG/RD
33 C146
904 20 LG/RD
11 C139
1 C102a
I
Generator 2) Stator 3) Regulator 151–15