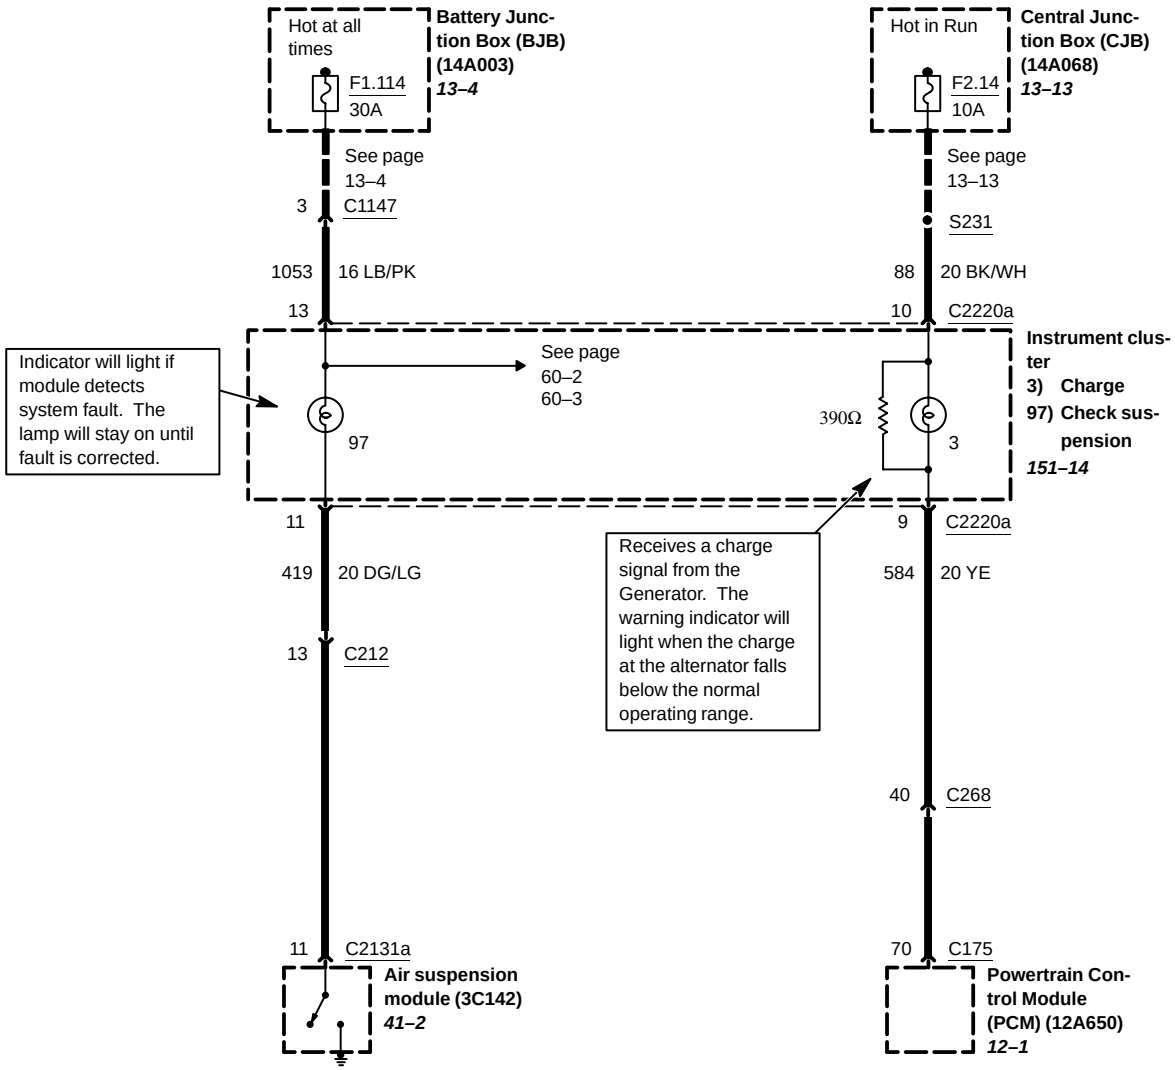
Hot at all times
F1.114
30A
Battery Junction Box (BJB) (14A003)
13–4
Hot in Run
F2.14
10A
Central Junction Box (CJB) (14A068)
13–13
See page 13–4
3
C1147
1053
16 LB/PK
13
See page 13–13
S231
88
20 BK/WH
10
C2220a
Indicator will light if module detects system fault. The lamp will stay on until fault is corrected.
See page 60–2 60–3
97
390Ω
3
Instrument cluster
3) Charge
97) Check suspension
151–14
11
419
20 DG/LG
13
C212
9
C2220a
584
20 YE
Receives a charge signal from the Generator. The warning indicator will light when the charge at the alternator falls below the normal operating range.
40
C268
11
C2131a
Air suspension module (3C142)
41–2
70
C175
Powertrain Control Module (PCM) (12A650)
12–1