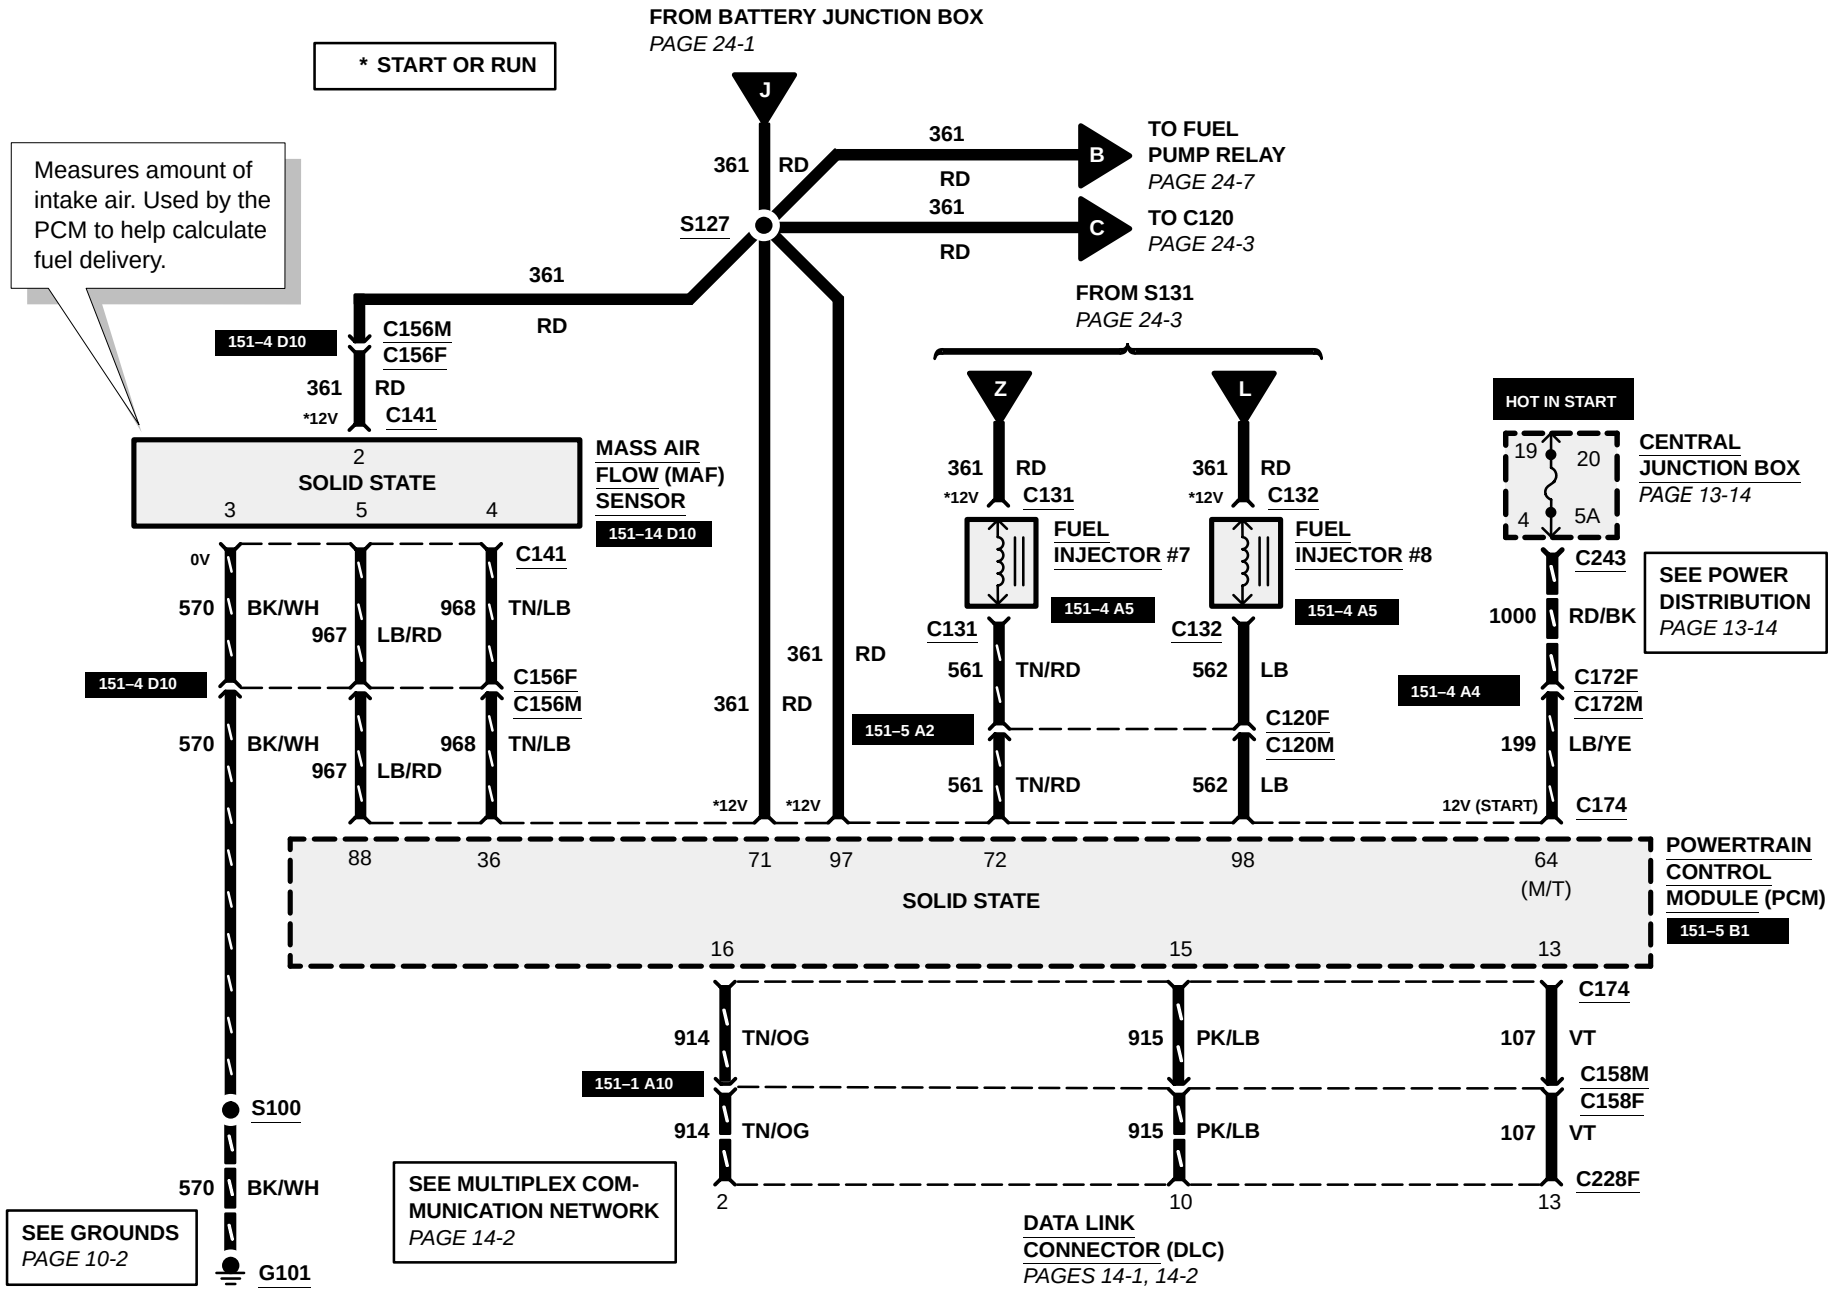
FROM BATTERY JUNCTION BOX
PAGE 24-1
* START OR RUN
J
361 RD
S127
361 RD
B
TO FUEL PUMP RELAY
PAGE 24-7
361 RD
C
TO C120
PAGE 24-3
Measures amount of intake air. Used by the PCM to help calculate fuel delivery.
361 RD
FROM S131
PAGE 24-3
151–4 D10
C156M
C156F
361 RD *12V
C141
2
SOLID STATE
3 5 4
MASS AIR FLOW (MAF) SENSOR
151–14 D10
Z
L
HOT IN START
361 RD *12V
C131
361 RD *12V
C132
19 20 4 5A
CENTRAL JUNCTION BOX
PAGE 13-14
FUEL INJECTOR #7
FUEL INJECTOR #8
151–4 A5
151–4 A5
C243
SEE POWER DISTRIBUTION
PAGE 13-14
0V
570 BK/WH
967 LB/RD
968 TN/LB
C141
151–4 D10
C156F
C156M
361 RD
C131
561 TN/RD
C132
562 LB
1000 RD/BK
C172F
C172M
151–4 A4
570 BK/WH
967 LB/RD
968 TN/LB
361 RD
151–5 A2
C120F
C120M
199 LB/YE
*12V
*12V
561 TN/RD
562 LB
12V (START)
C174
88 36 71 97 72 98 64 (M/T)
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–5 B1
16 15 13
C174
914 TN/OG
915 PK/LB
107 VT
151–1 A10
C158M
C158F
914 TN/OG
915 PK/LB
107 VT
S100
570 BK/WH
C228F
2 10 13
SEE GROUNDS
PAGE 10-2
G101
SEE MULTIPLEX COMMUNICATION NETWORK
PAGE 14-2
DATA LINK CONNECTOR (DLC)
PAGES 14-1, 14-2