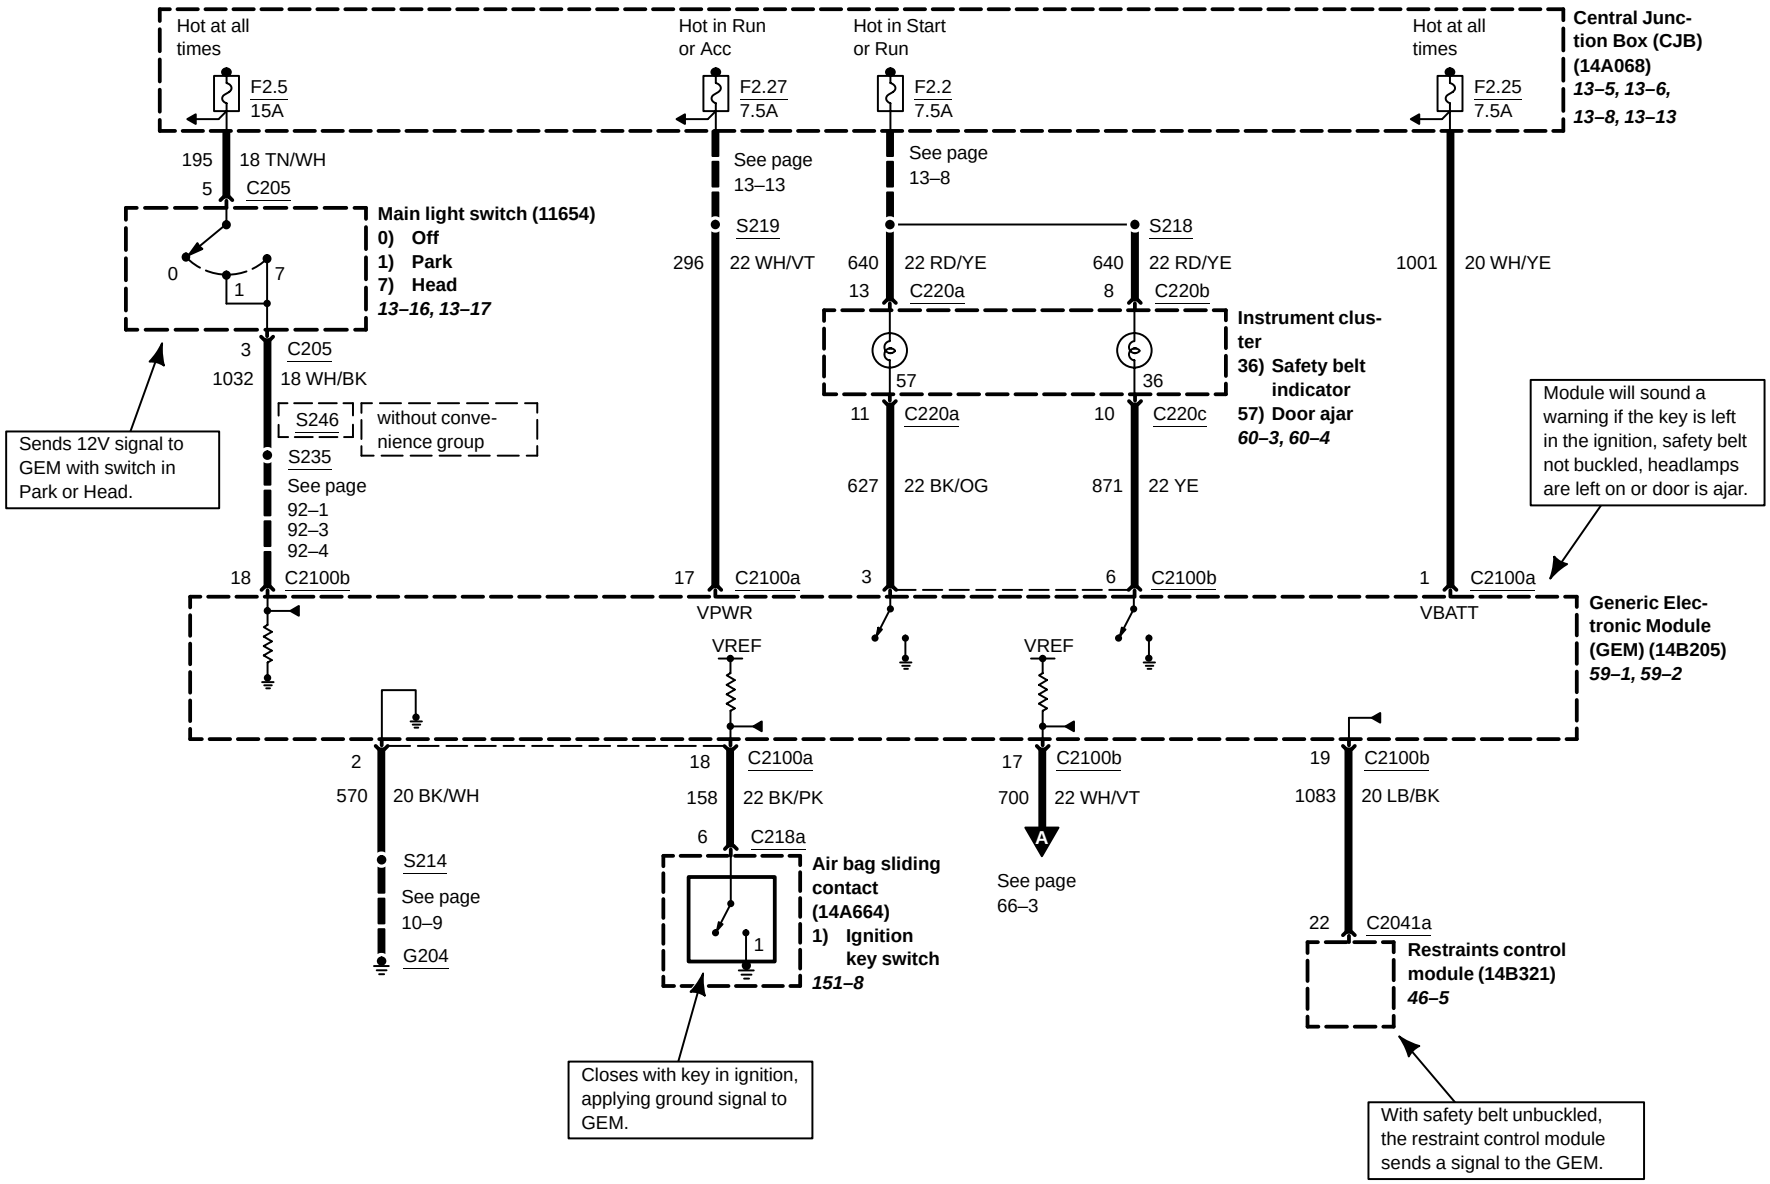
Hot at all times
F2.5 15A
Hot in Run or Acc
F2.27 7.5A
Hot in Start or Run
F2.2 7.5A
Hot at all times
F2.25 7.5A
Central Junction Box (CJB) (14A068)
13–5, 13–6, 13–8, 13–13
195 18 TN/WH
5 C205
See page 13–13
See page 13–8
S219
296 22 WH/VT
S218
640 22 RD/YE
13 C220a
640 22 RD/YE
8 C220b
1001 20 WH/YE
Main light switch (11654)
0) Off
1) Park
7) Head
13–16, 13–17
0
1
7
3 C205
1032 18 WH/BK
S246
without convenience group
S235
See page 92–1 92–3 92–4
Instrument cluster
36) Safety belt indicator
57) Door ajar
60–3, 60–4
57
36
11 C220a
10 C220c
627 22 BK/OG
871 22 YE
Sends 12V signal to GEM with switch in Park or Head.
Module will sound a warning if the key is left in the ignition, safety belt not buckled, headlamps are left on or door is ajar.
18 C2100b
17 C2100a
3
6 C2100b
1 C2100a
VPWR
VBATT
Generic Electronic Module (GEM) (14B205)
59–1, 59–2
VREF
VREF
2 570 20 BK/WH
18 C2100a 158 22 BK/PK
17 C2100b 700 22 WH/VT
19 C2100b 1083 20 LB/BK
S214
See page 10–9
G204
6 C218a
Air bag sliding contact (14A664)
1) Ignition key switch
151–8
1
A
See page 66–3
22 C2041a
Restraints control module (14B321)
46–5
Closes with key in ignition, applying ground signal to GEM.
With safety belt unbuckled, the restraint control module sends a signal to the GEM.