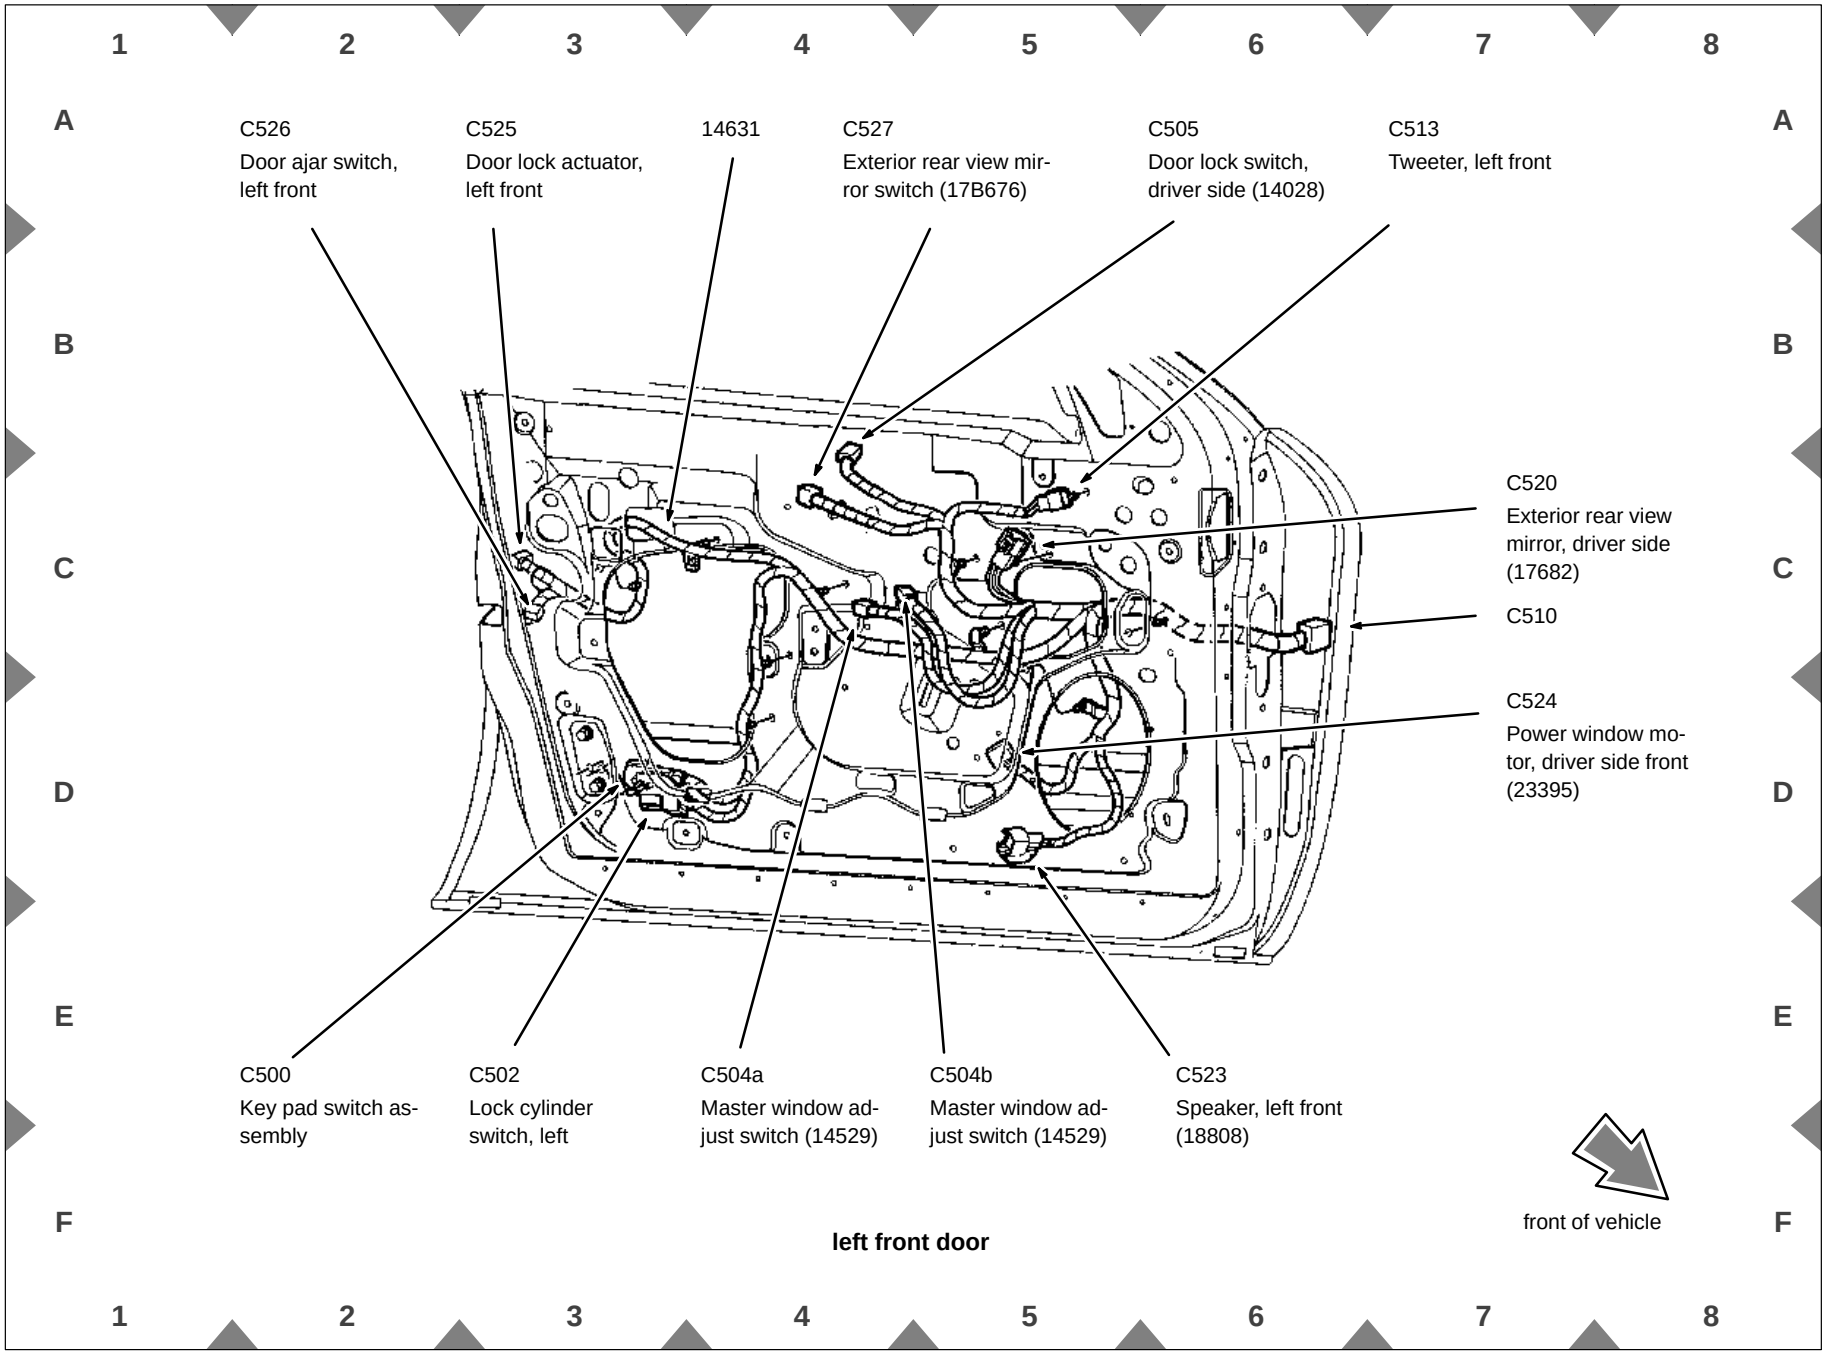
1 2 3 4 5 6 7 8
A B C D E F
C526
Door ajar switch, left front
C525
Door lock actuator, left front
14631
C527
Exterior rear view mirror switch (17B676)
C505
Door lock switch, driver side (14028)
C513
Tweeter, left front
C520
Exterior rear view mirror, driver side (17682)
C510
C524
Power window motor, driver side front (23395)
C500
Key pad switch assembly
C502
Lock cylinder switch, left
C504a
Master window adjust switch (14529)
C504b
Master window adjust switch (14529)
C523
Speaker, left front (18808)
front of vehicle
left front door