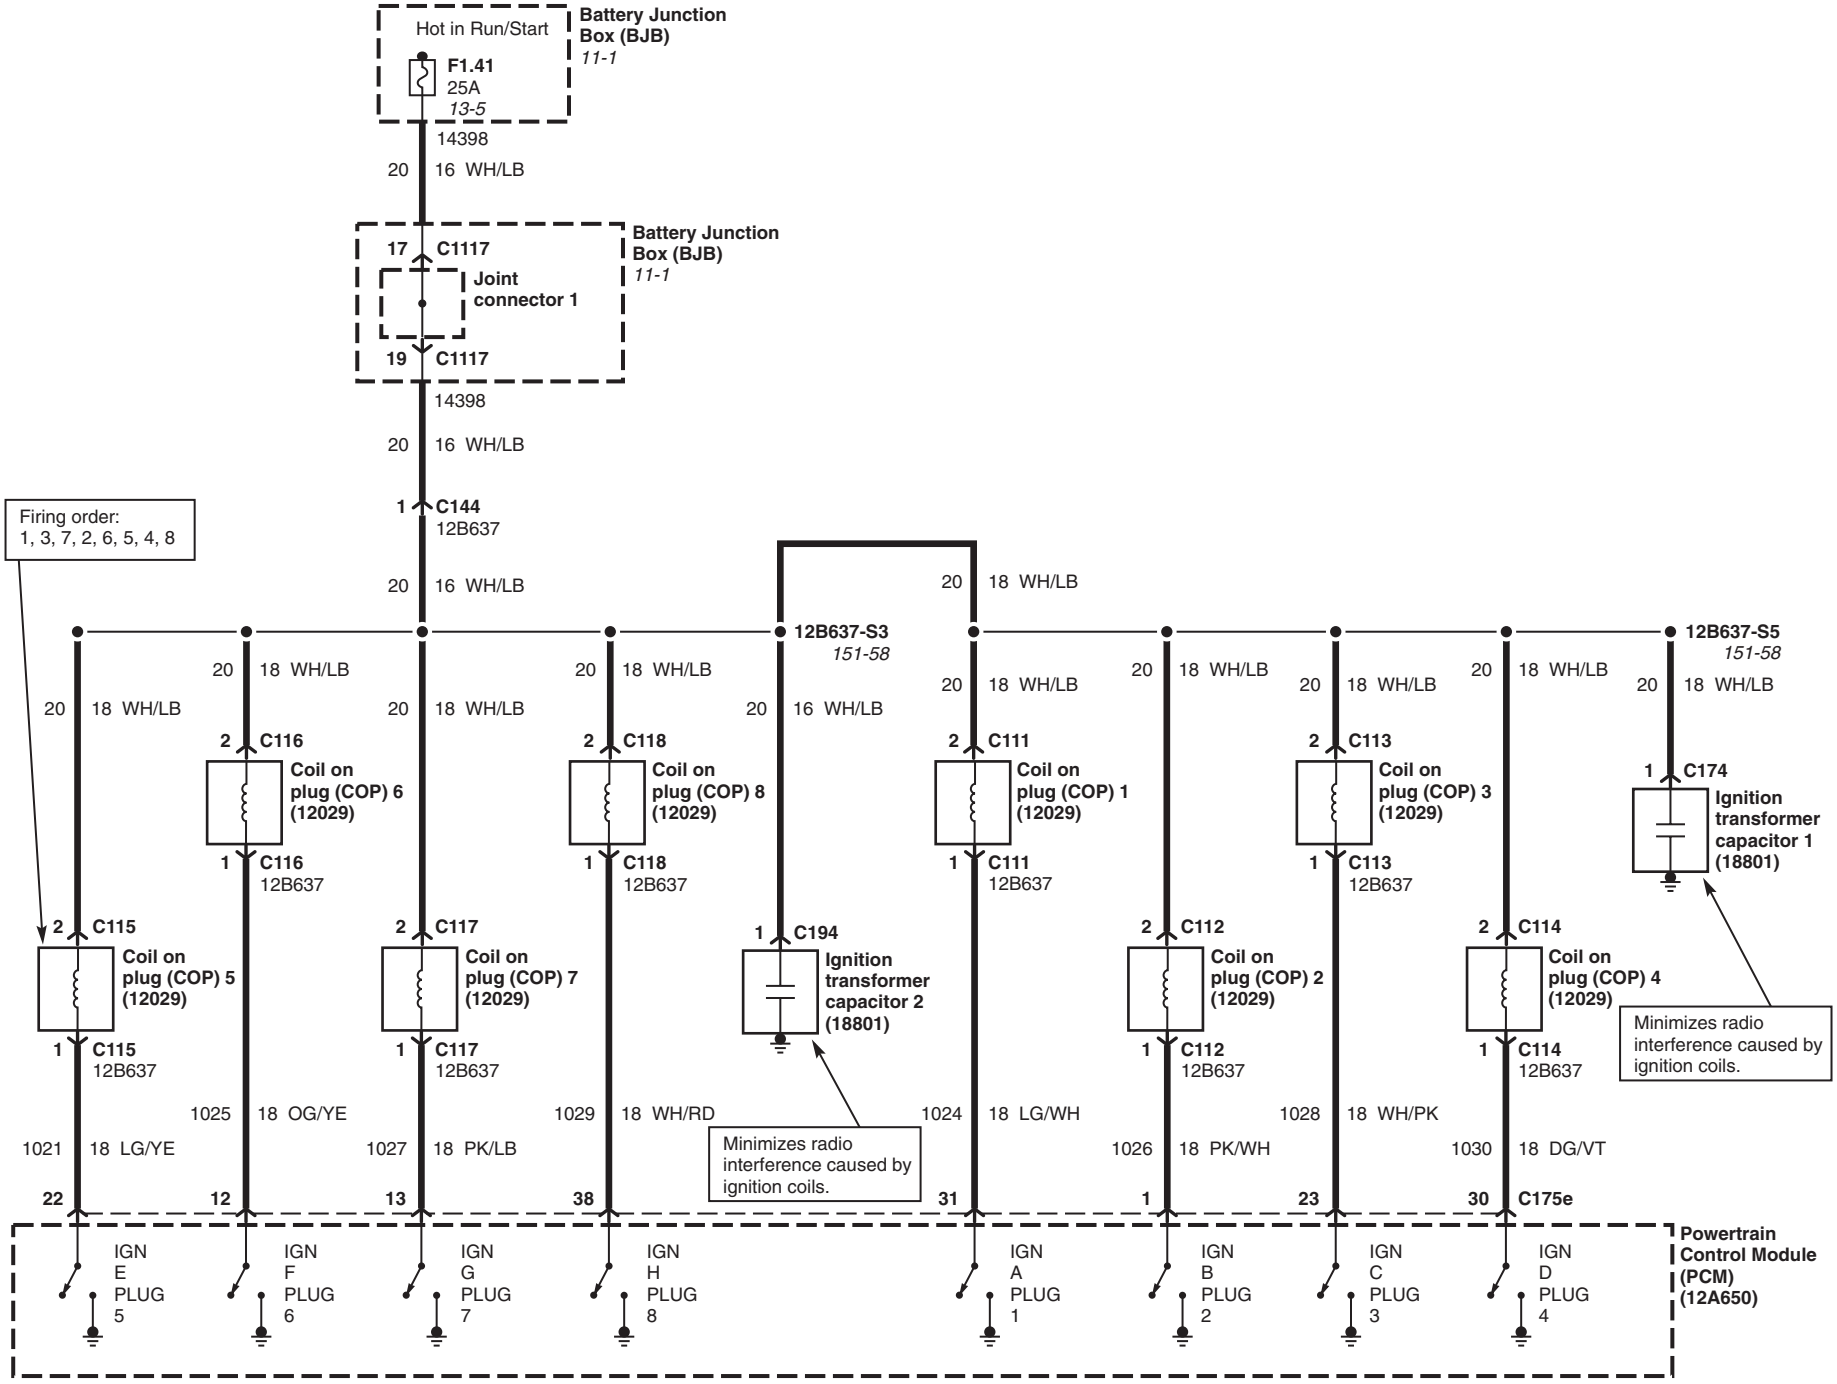
Hot in Run/Start
Battery Junction Box (BJB)
11-1
F1.41
25A
13-5
14398
20 16 WH/LB
17 C1117
Joint connector 1
19 C1117
Battery Junction Box (BJB)
11-1
14398
20 16 WH/LB
1 C144
12B637
20 16 WH/LB
Firing order:
1, 3, 7, 2, 6, 5, 4, 8
12B637-S3
151-58
12B637-S5
151-58
20 18 WH/LB
2 C116
Coil on plug (COP) 6 (12029)
1 C116
12B637
2 C118
Coil on plug (COP) 8 (12029)
1 C118
12B637
2 C111
Coil on plug (COP) 1 (12029)
1 C111
12B637
2 C113
Coil on plug (COP) 3 (12029)
1 C113
12B637
1 C174
Ignition transformer capacitor 1 (18801)
2 C115
Coil on plug (COP) 5 (12029)
1 C115
12B637
2 C117
Coil on plug (COP) 7 (12029)
1 C117
12B637
1 C194
Ignition transformer capacitor 2 (18801)
2 C112
Coil on plug (COP) 2 (12029)
1 C112
12B637
2 C114
Coil on plug (COP) 4 (12029)
1 C114
12B637
Minimizes radio interference caused by ignition coils.
Minimizes radio interference caused by ignition coils.
1025 18 OG/YE
1029 18 WH/RD
1024 18 LG/WH
1028 18 WH/PK
1021 18 LG/YE
1027 18 PK/LB
1026 18 PK/WH
1030 18 DG/VT
22
12
13
38
31
1
23
30 C175e
IGN E PLUG 5
IGN F PLUG 6
IGN G PLUG 7
IGN H PLUG 8
IGN A PLUG 1
IGN B PLUG 2
IGN C PLUG 3
IGN D PLUG 4
Powertrain Control Module (PCM) (12A650)