Marauder

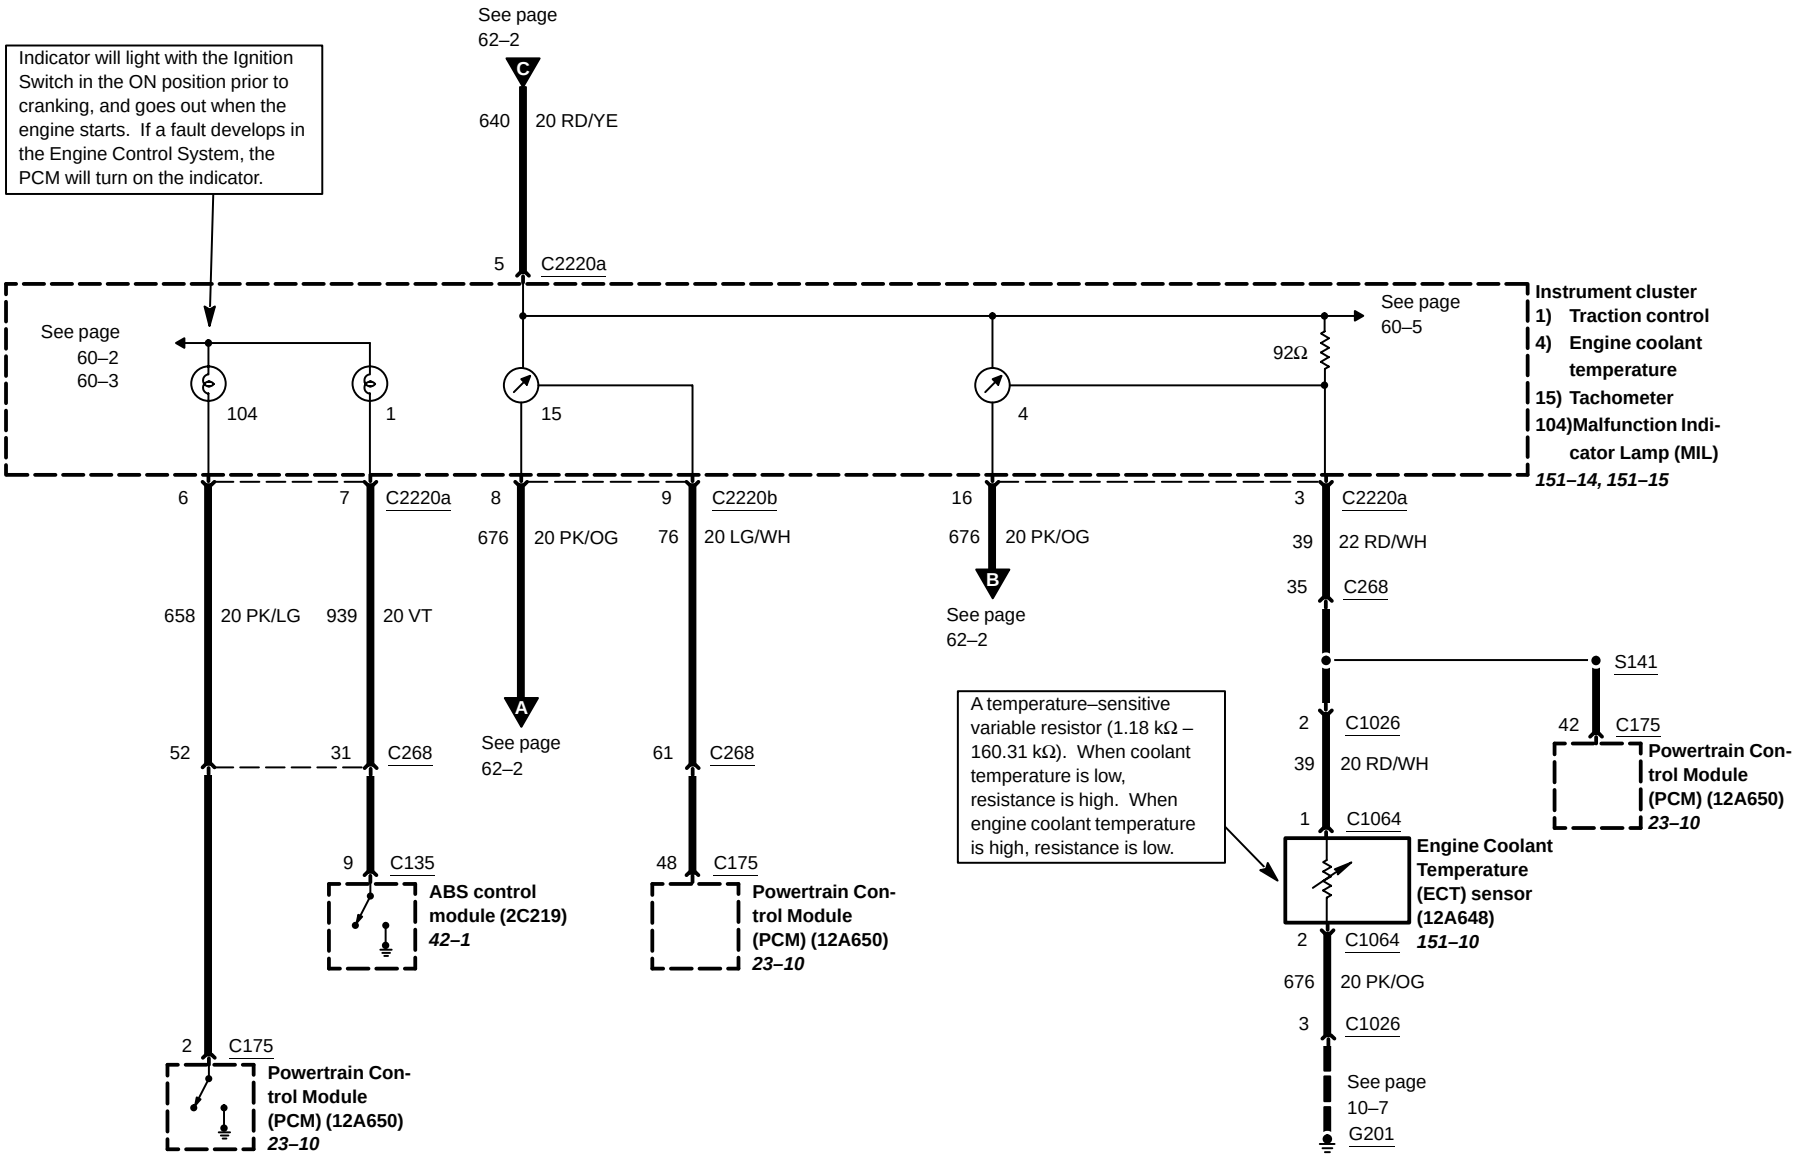
See page 62–2
Indicator will light with the Ignition Switch in the ON position prior to cranking, and goes out when the engine starts. If a fault develops in the Engine Control System, the PCM will turn on the indicator.
C
640 20 RD/YE
5 C2220a
See page 60–2 60–3
See page 60–5
92Ω
Instrument cluster
1) Traction control
4) Engine coolant temperature
15) Tachometer
104) Malfunction Indicator Lamp (MIL)
151–14, 151–15
104
1
15
4
6
7 C2220a
8
9 C2220b
16
3 C2220a
676 20 PK/OG
76 20 LG/WH
676 20 PK/OG
39 22 RD/WH
35 C268
658 20 PK/LG
939 20 VT
B
See page 62–2
A
See page 62–2
S141
A temperature–sensitive variable resistor (1.18 kΩ – 160.31 kΩ). When coolant temperature is low, resistance is high. When engine coolant temperature is high, resistance is low.
2 C1026
42 C175
39 20 RD/WH
Powertrain Control Module (PCM) (12A650) 23–10
1 C1064
52
31 C268
61 C268
Engine Coolant Temperature (ECT) sensor (12A648) 151–10
9 C135
48 C175
2 C1064
676 20 PK/OG
3 C1026
ABS control module (2C219) 42–1
Powertrain Control Module (PCM) (12A650) 23–10
2 C175
Powertrain Control Module (PCM) (12A650) 23–10
See page 10–7
G201