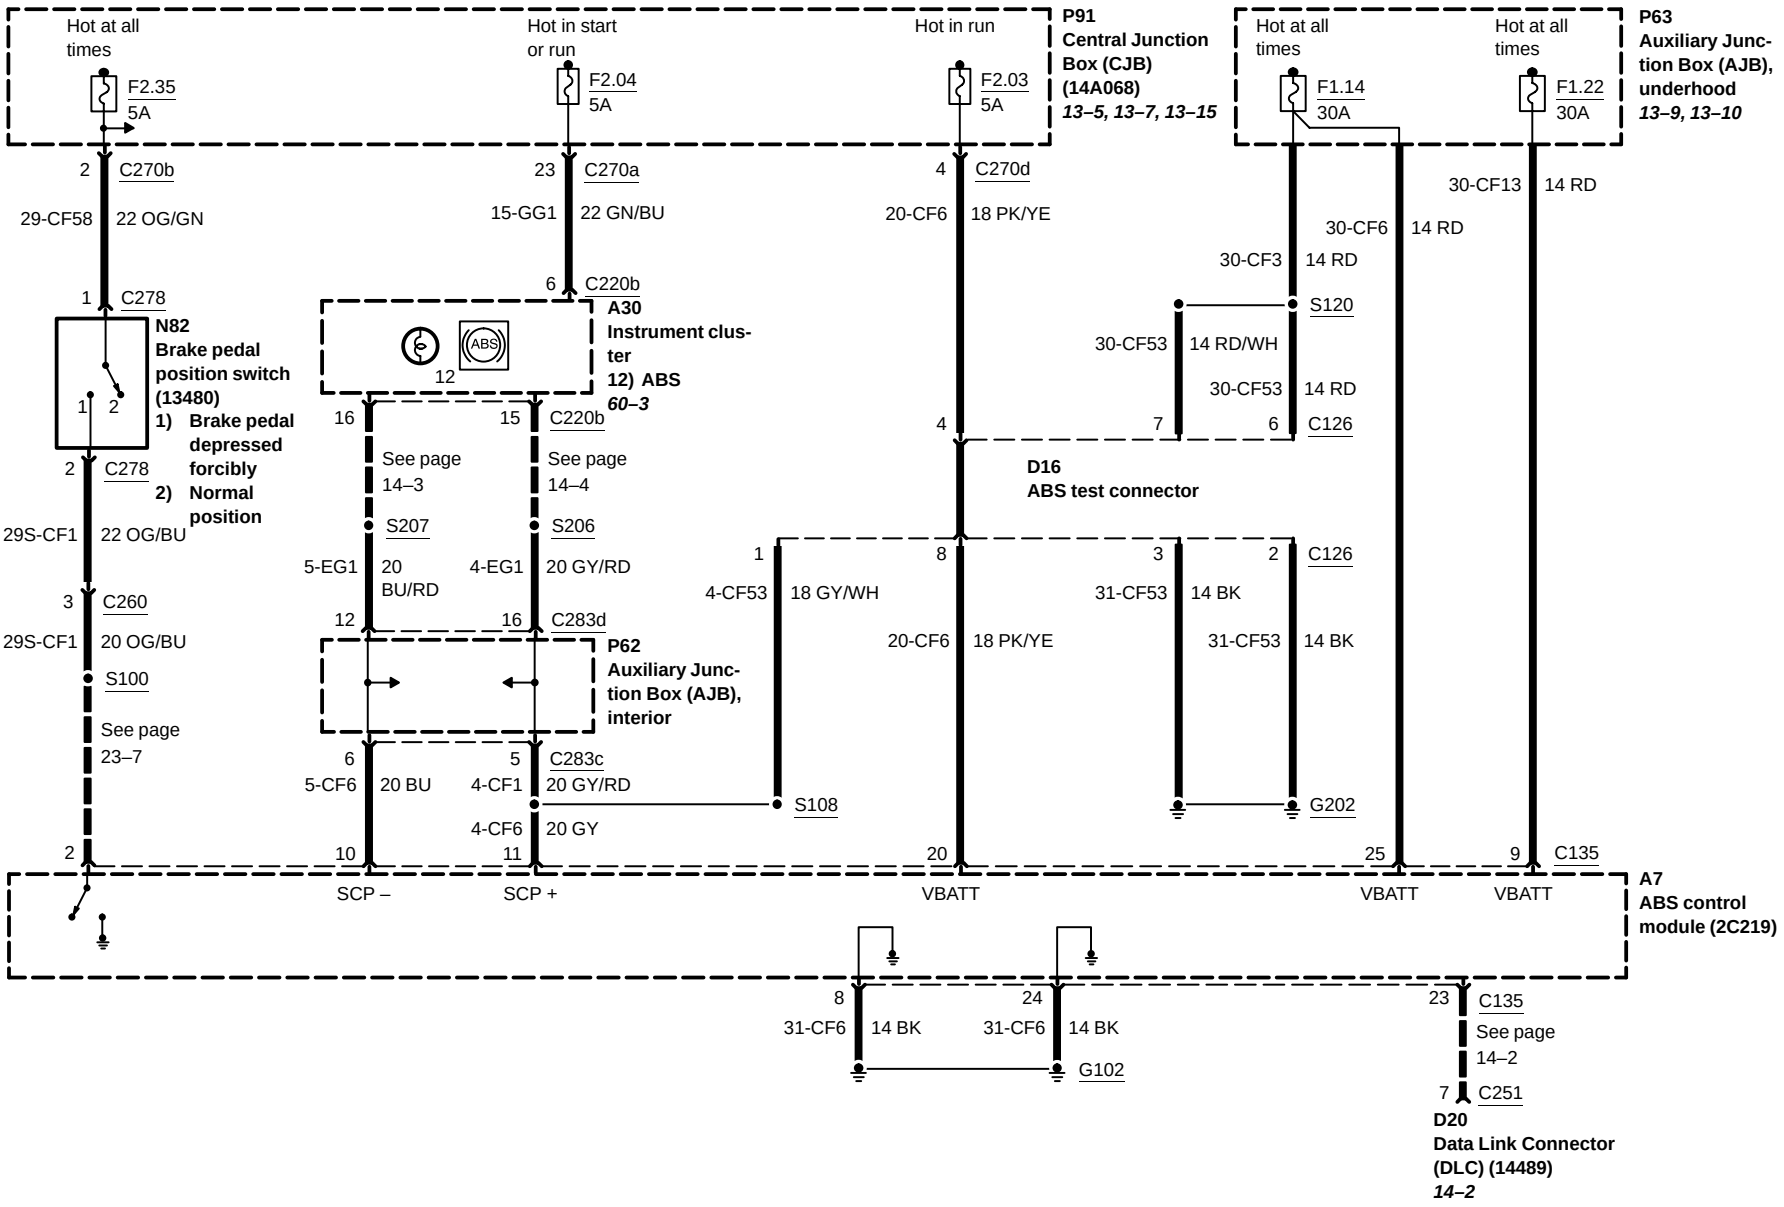
Hot at all times
F2.35
5A
Hot in start or run
F2.04
5A
Hot in run
F2.03
5A
P91
Central Junction Box (CJB) (14A068)
13–5, 13–7, 13–15
Hot at all times
F1.14
30A
Hot at all times
F1.22
30A
P63
Auxiliary Junction Box (AJB), underhood
13–9, 13–10
2 C270b
29-CF58 22 OG/GN
23 C270a
15-GG1 22 GN/BU
4 C270d
20-CF6 18 PK/YE
30-CF13 14 RD
30-CF6 14 RD
30-CF3 14 RD
1 C278
6 C220b
N82
Brake pedal position switch (13480)
1) Brake pedal depressed forcibly
2) Normal position
A30
Instrument cluster
12) ABS
60–3
30-CF53 14 RD/WH
S120
30-CF53 14 RD
7 6 C126
D16
ABS test connector
16 15 C220b
See page 14–3
See page 14–4
S207
S206
5-EG1 20 BU/RD
4-EG1 20 GY/RD
1 8 3 2 C126
4-CF53 18 GY/WH
31-CF53 14 BK
20-CF6 18 PK/YE
31-CF53 14 BK
29S-CF1 22 OG/BU
3 C260
29S-CF1 20 OG/BU
12 16 C283d
P62
Auxiliary Junction Box (AJB), interior
S100
See page 23–7
6 5 C283c
5-CF6 20 BU
4-CF1 20 GY/RD
4-CF6 20 GY
S108
G202
2 10 11 20 25 9 C135
SCP – SCP + VBATT VBATT VBATT
A7
ABS control module (2C219)
8 24 23 C135
31-CF6 14 BK
31-CF6 14 BK
See page 14–2
G102
7 C251
D20
Data Link Connector (DLC) (14489)
14–2