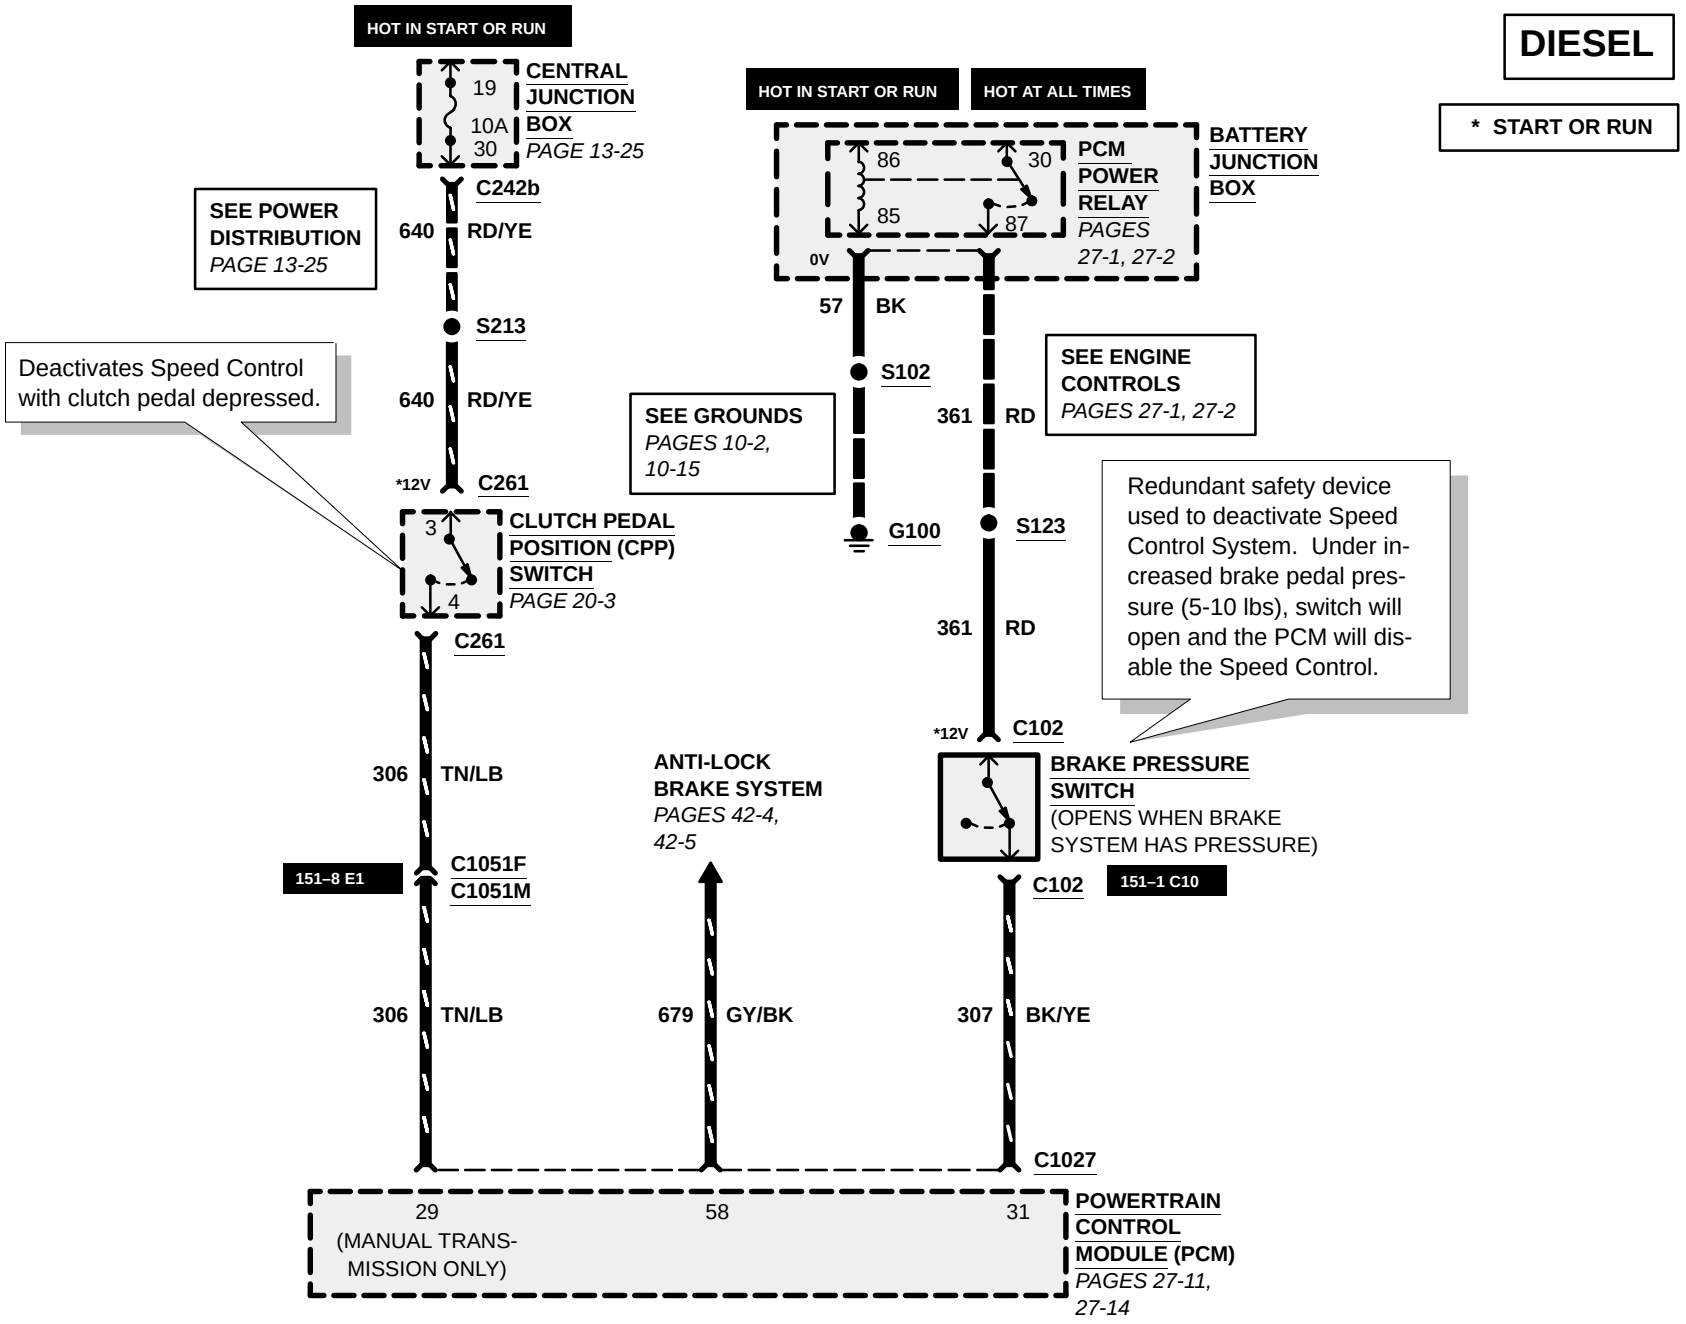
DIESEL
* START OR RUN
HOT IN START OR RUN
HOT IN START OR RUN
HOT AT ALL TIMES
CENTRAL JUNCTION BOX
PAGE 13-25
19
10A
30
BATTERY JUNCTION BOX
PCM POWER RELAY
PAGES 27-1, 27-2
86
85
30
87
0V
SEE POWER DISTRIBUTION
PAGE 13-25
C242b
640 RD/YE
S213
640 RD/YE
57 BK
S102
361 RD
SEE ENGINE CONTROLS
PAGES 27-1, 27-2
Deactivates Speed Control with clutch pedal depressed.
SEE GROUNDS
PAGES 10-2, 10-15
*12V
C261
CLUTCH PEDAL POSITION (CPP) SWITCH
PAGE 20-3
3
4
G100
S123
361 RD
Redundant safety device used to deactivate Speed Control System. Under increased brake pedal pressure (5-10 lbs), switch will open and the PCM will disable the Speed Control.
C261
306 TN/LB
ANTI-LOCK BRAKE SYSTEM
PAGES 42-4, 42-5
*12V
C102
BRAKE PRESSURE SWITCH
(OPENS WHEN BRAKE SYSTEM HAS PRESSURE)
151–8 E1
C1051F
C1051M
C102
151–1 C10
306 TN/LB
679 GY/BK
307 BK/YE
C1027
29
(MANUAL TRANS-MISSION ONLY)
58
31
POWERTRAIN CONTROL MODULE (PCM)
PAGES 27-11, 27-14