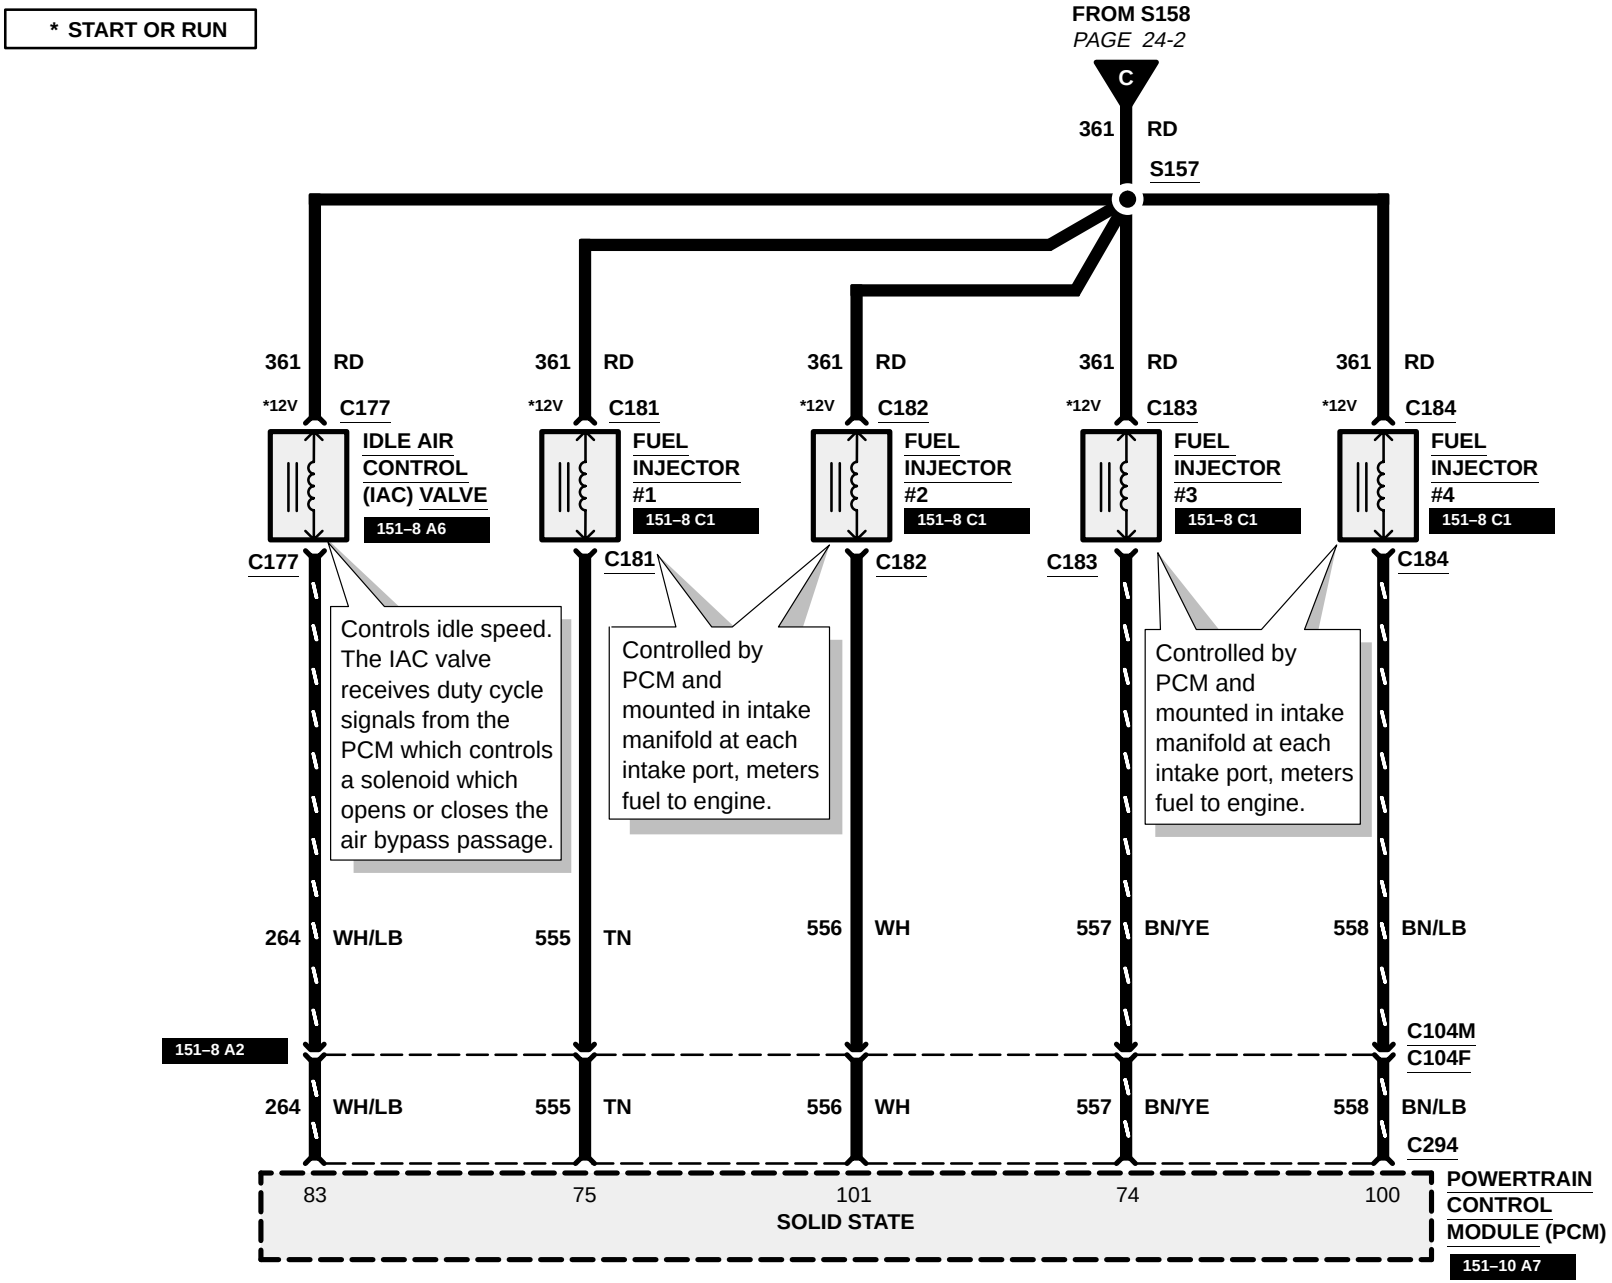
* START OR RUN
FROM S158
PAGE 24-2
C
361 RD
S157
361 RD
*12V
C177
IDLE AIR CONTROL (IAC) VALVE
151–8 A6
C177
Controls idle speed. The IAC valve receives duty cycle signals from the PCM which controls a solenoid which opens or closes the air bypass passage.
361 RD
*12V
C181
FUEL INJECTOR #1
151–8 C1
C181
Controlled by PCM and mounted in intake manifold at each intake port, meters fuel to engine.
361 RD
*12V
C182
FUEL INJECTOR #2
151–8 C1
C182
Controlled by PCM and mounted in intake manifold at each intake port, meters fuel to engine.
361 RD
*12V
C183
FUEL INJECTOR #3
151–8 C1
C183
361 RD
*12V
C184
FUEL INJECTOR #4
151–8 C1
C184
264 WH/LB
555 TN
556 WH
557 BN/YE
558 BN/LB
151–8 A2
C104M
C104F
264 WH/LB
555 TN
556 WH
557 BN/YE
558 BN/LB
C294
83
75
101
74
100
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–10 A7