C692 (BK)

12A522

N75
A/C compressor
cycling switch

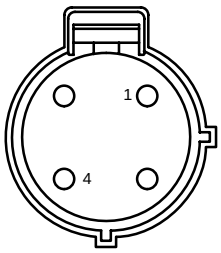

F04083

Pin	Circuit	Circuit Function
1	15S-FA17 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected), switched
	15S-FA38 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected), switched
2	–	not used
3	–	not used
4	15S-RE8 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected), switched
	15S-FA17 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected), switched

C694 (WH)

14014

N27
Left front seat heat-
er switch

F08060

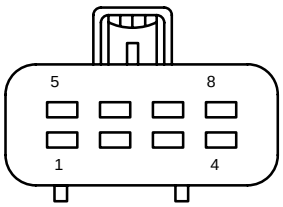

Pin	Circuit	Circuit Function
1	15S-HC8 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected), switched
	15S-HC6 (GN/YE)	Battery voltage, hot in Start and Run only (not overload protected), switched
2	15-HC6 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected)
3	–	not used
4	31-LH29 (BK)	Ground
5	–	not used
6	–	not used
7	–	not used
8	29S-LH29 (OG/YE) +	Voltage supplied at all times (overload protected)
	29S-LA43 (OG/BU)	Voltage supplied at all times (overload protected)

C695 (BU)

14014

F08110

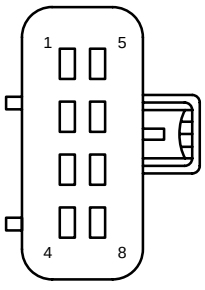

N28
Right front seat
heater switch

Pin	Circuit	Circuit Function
1	15S-HC11 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected), switched
	15S-HC9 (GN/BK)	Battery voltage, hot in Start and Run only (not overload protected), switched
2	15-HC9 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected)
3	–	not used
4	31-LH43 (BK)	Ground
5	–	not used
6	–	not used
7	–	not used
8	29S-LH43 (OG/BU)	Voltage supplied at all times (overload protected)