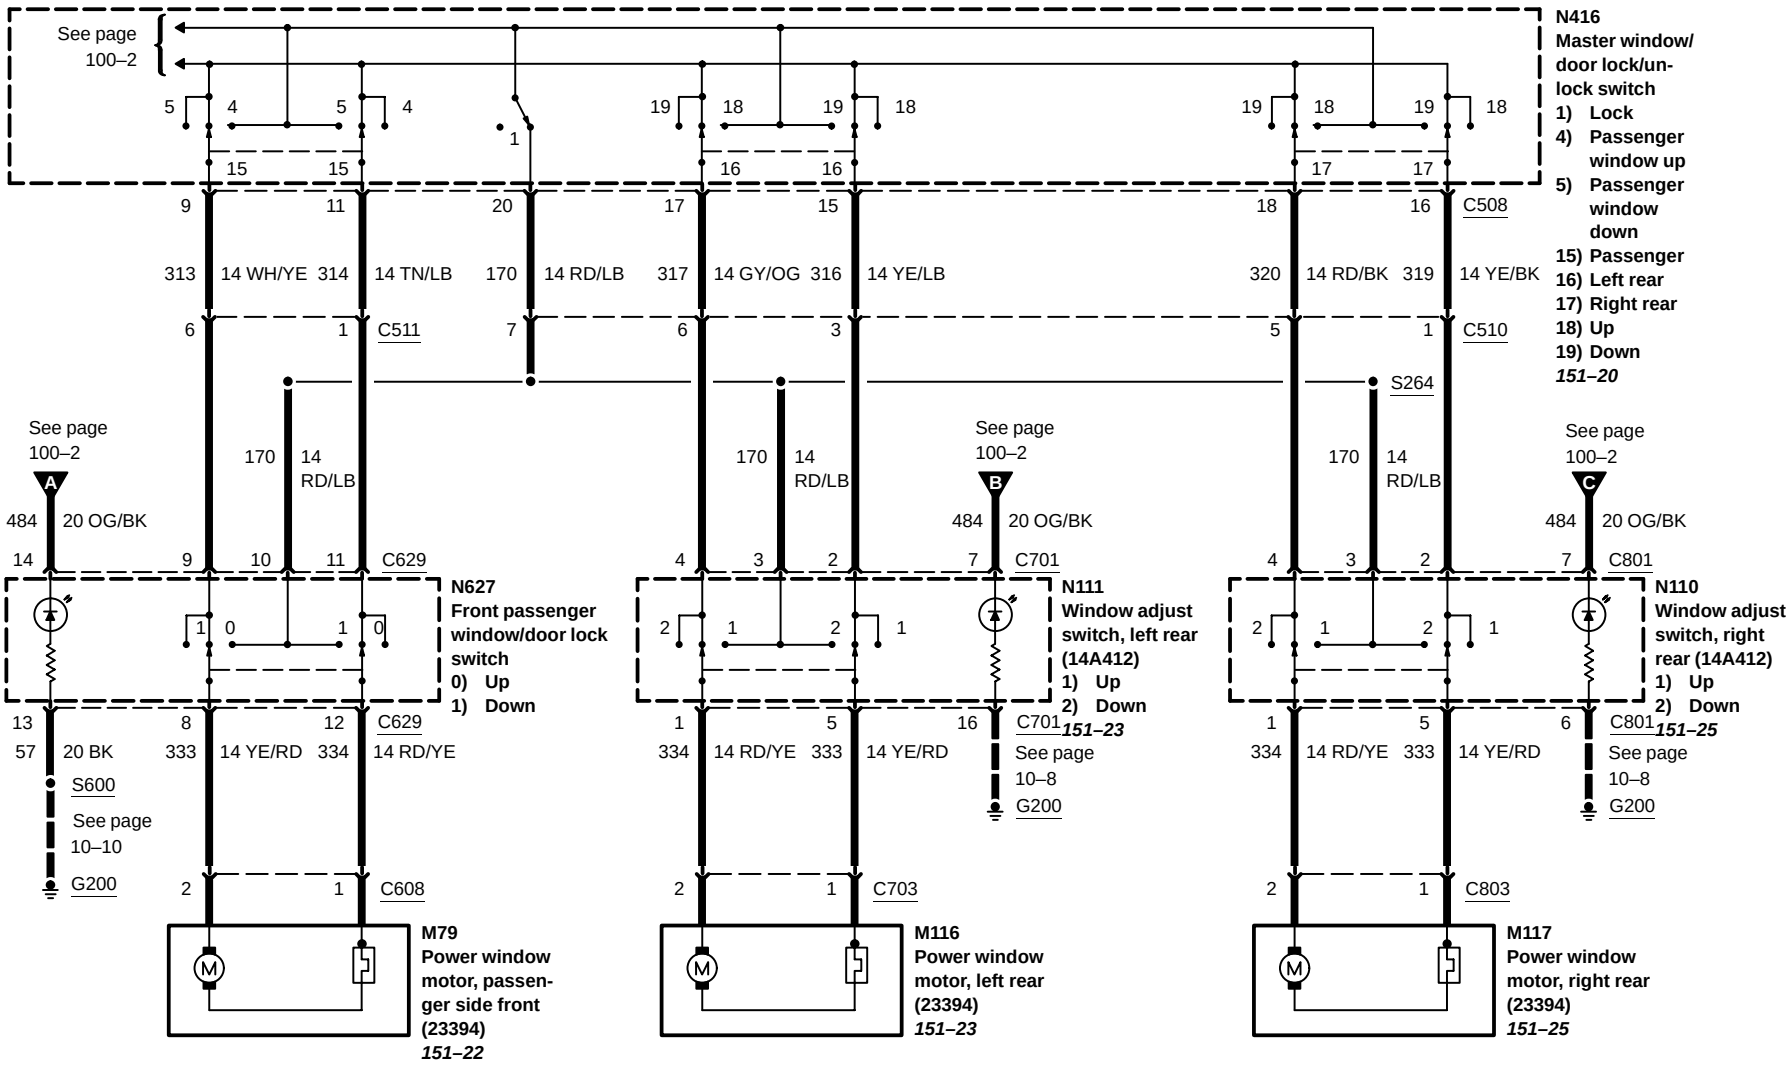
See page 100–2
N416
Master window/ door lock/un- lock switch
1) Lock
4) Passenger window up
5) Passenger window down
15) Passenger
16) Left rear
17) Right rear
18) Up
19) Down
151–20
C508
C510
C511
S264
313 14 WH/YE 314 14 TN/LB
170 14 RD/LB
317 14 GY/OG 316 14 YE/LB
320 14 RD/BK 319 14 YE/BK
See page 100–2
484 20 OG/BK
C629
C701
C801
N627
Front passenger window/door lock switch
0) Up
1) Down
N111
Window adjust switch, left rear (14A412)
1) Up
2) Down
151–23
N110
Window adjust switch, right rear (14A412)
1) Up
2) Down
151–25
57 20 BK
S600
See page 10–10
G200
333 14 YE/RD 334 14 RD/YE
See page 10–8
334 14 RD/YE 333 14 YE/RD
C608
C703
C803
M79
Power window motor, passen- ger side front (23394)
151–22
M116
Power window motor, left rear (23394)
151–23
M117
Power window motor, right rear (23394)
151–25