C152

14A103

E43
Fog lamp, left front



F02359

Pin	Circuit	Circuit Function
1	LG02 (OG/BK)	Fog lamp relay, switched power
2	LGE2 (BK)	Ground

C153 (BK)

12A522

Y31
A/C clutch solenoid

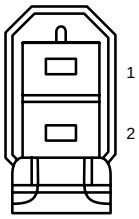

F02231

Pin	Circuit	Circuit Function
1	HAE4 (BK)	Ground
2	HA43 (WH/OG)	A/C clutch relay, switched output

C154 (BK)

12A522

N76
Dual pressure switch

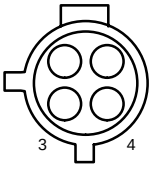

F04161

Pin	Circuit	Circuit Function
1	HA46 (BN)	A/C pressure switch, to A/C cycling switch
2	HXE1 (BK)	Ground
3	HA45 (WH/RD)	A/C high pressure switch, input
4	HX01 (BU/BK)	A/C high pressure switch, input

C155 (BK)

12B637

Y109
Injector 2

F02137

Pin	Circuit	Circuit Function
1	AV60 (GN)	Fuel injector 2, control
2	AV82 (YE)	Voltage supplied at all times (overload protected)

C156 (GN)

12B637

Y111
Injector 4

F02137

Pin	Circuit	Circuit Function
1	AV62 (YE/VT)	Fuel injector 4, control
2	AV84 (YE)	Voltage supplied at all times (overload protected)

C157 (BK)

12B637

Y113
Injector 6

F02137

Pin	Circuit	Circuit Function
1	AV64 (GY/BU)	Fuel injector 6, control
2	AV86 (YE)	Voltage supplied at all times (overload protected)

C159 (GY)

7A488

B22
Mass Air Flow (MAF) sensor



F04044

Pin	Circuit	Circuit Function
1	AV16 (WH/BU)	Mass Air Flow (MAF) sensor, signal, return
2	AV17 (BU/OG)	Mass Air Flow (MAF) sensor, output
3	AV74 (BK/WH)	Voltage supplied in Start and Run (overload protected)
4	–	not used