C117 (BK)

12B637

Coil On Plug (COP)
7 (12029)

F02109

Pin	Circuit	Circuit function
1	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
2	1027 (PK/LB)	Coil On Plug (COP) 7 (12029), control

C118 (BK)

12B637

Coil On Plug (COP)
8 (12029)

F02109

Pin	Circuit	Circuit function
1	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
2	1029 (WH/RD)	Coil On Plug (COP) 8 (12029), control

*Supercrew, Harley Davidson

C122 (BK)

12A581

Speed control servo
(9C735)

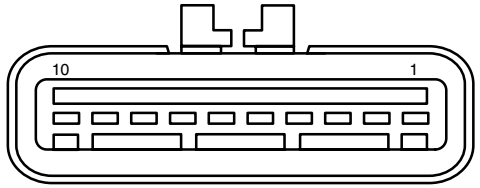

F10113

Pin	Circuit	Circuit function
1	203 (OG/LB)	speed control, indicator, control
2	–	not used
3	679 (GY/BK)	vehicle speed signal
4	306 (TN/LB)	Brake pedal position switch (13480), output
	*810 (RD/LG)	Brake pedal position switch (13480), output
5	151 (LB/BK)	Speed control switch, signal
6	848 (DG/OG)	Speed control switch, Signal return
7	295 (LB/PK)	Voltage in Run (overload protected)
8	–	not used
9	307 (BK/YE)	Brake pressure switch (2B264), input
10	57 (BK)	Ground

C123 (BK)

12A581

EVAP canister
purge valve

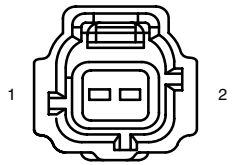

F02105

Pin	Circuit	Circuit function
1	391 (RD/YE)	Voltage supplied in Start and Run (overload protected)
2	191 (LG/BK)	EVAP canister purge valve, control