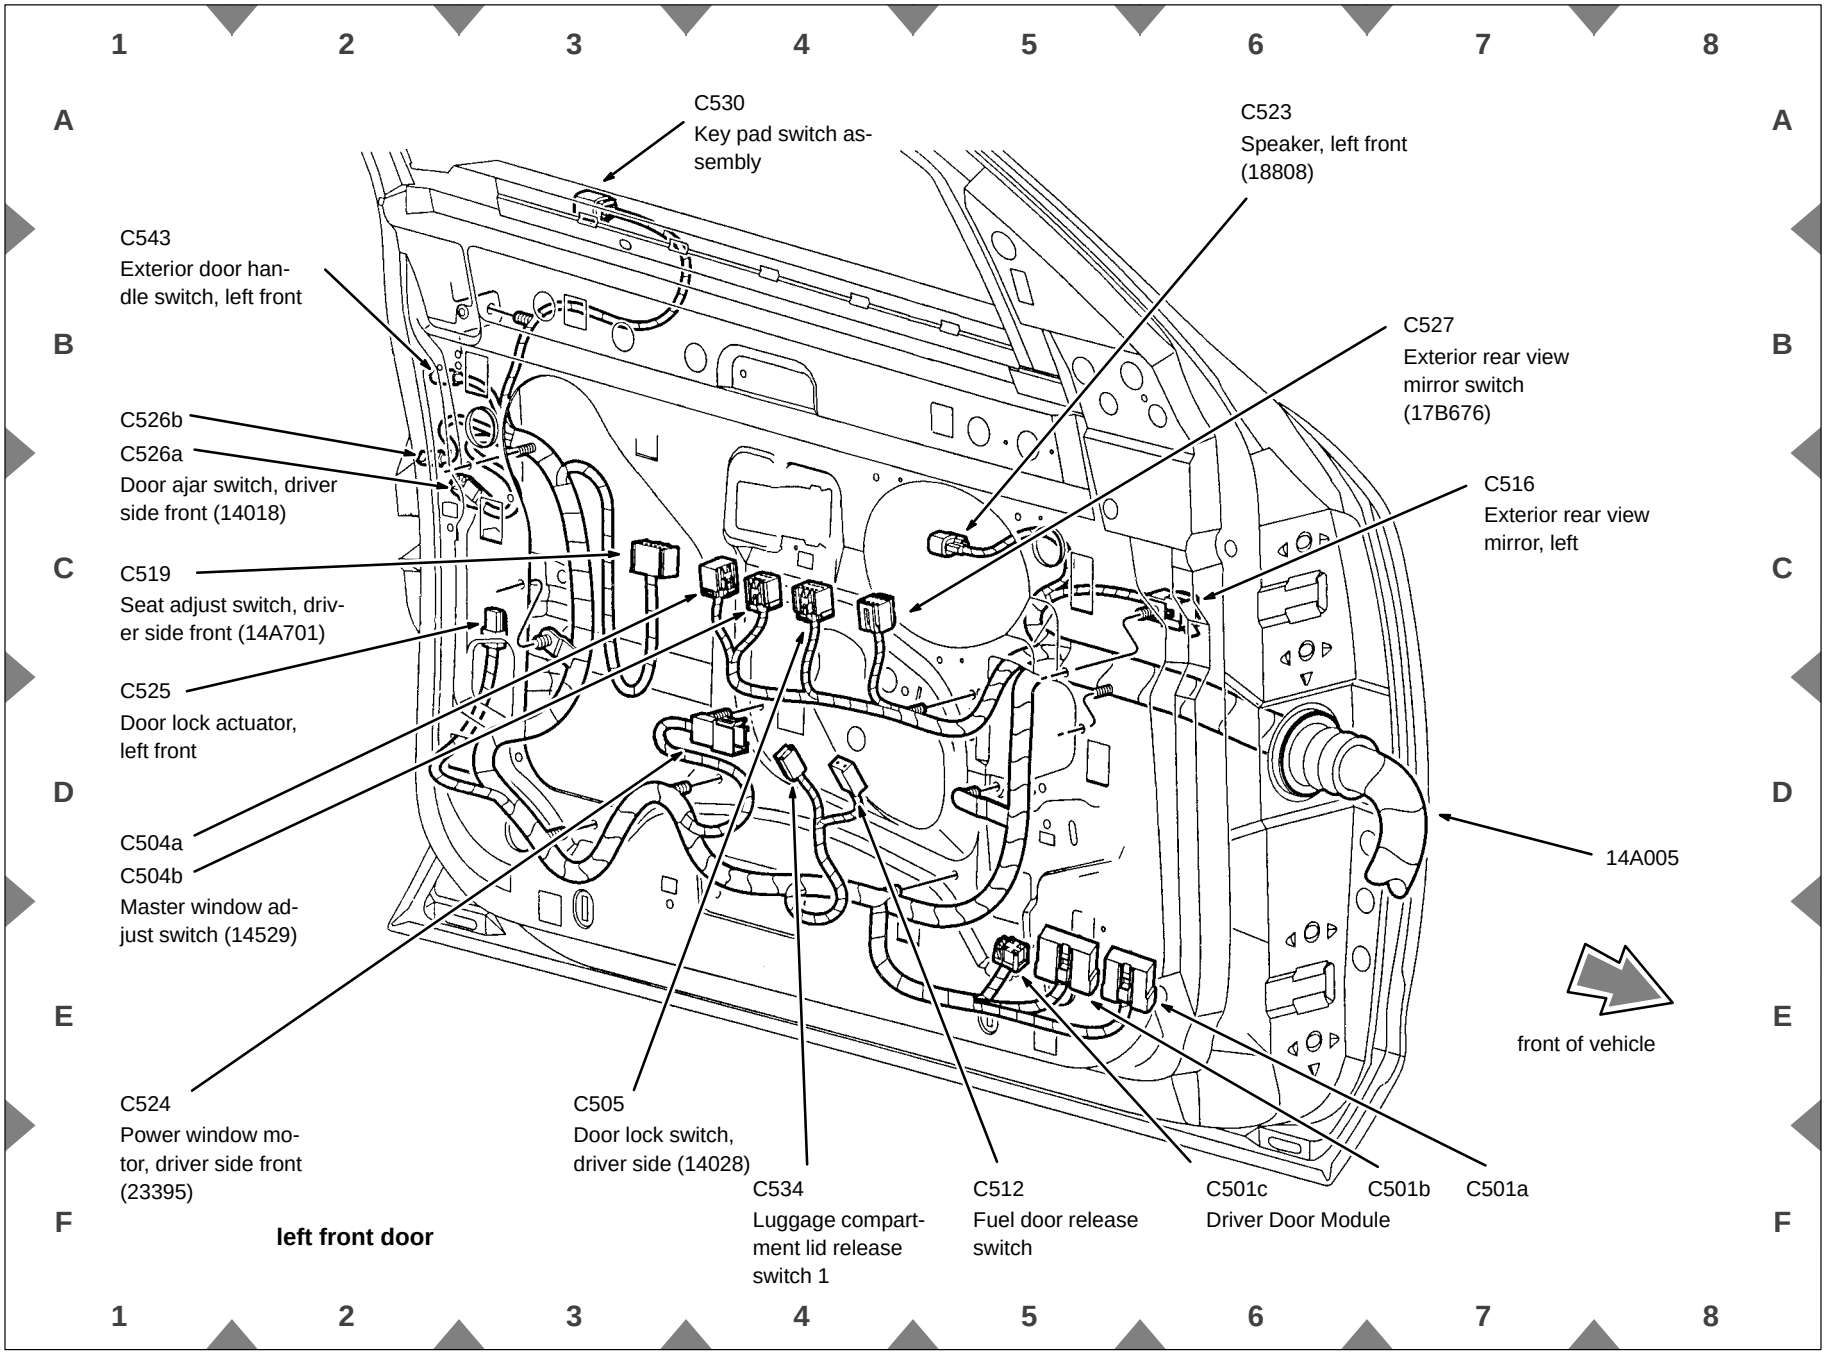
1
2
3
4
5
6
7
8
A
B
C
D
E
F
C530
Key pad switch assembly
C523
Speaker, left front (18808)
C543
Exterior door handle switch, left front
C527
Exterior rear view mirror switch (17B676)
C526b
C526a
Door ajar switch, driver side front (14018)
C516
Exterior rear view mirror, left
C519
Seat adjust switch, driver side front (14A701)
C525
Door lock actuator, left front
C504a
C504b
Master window adjust switch (14529)
14A005
front of vehicle
C524
Power window motor, driver side front (23395)
C505
Door lock switch, driver side (14028)
C534
Luggage compartment lid release switch 1
C512
Fuel door release switch
C501c
C501b
C501a
Driver Door Module
left front door