C175e

12B637

Powertrain
Control Module
(PCM)

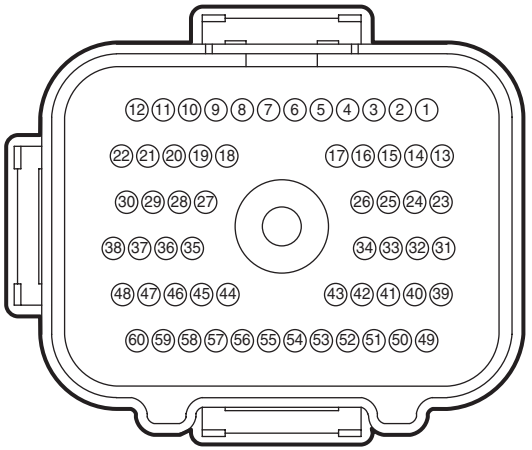

XW43-14A464-EA (F)

Pin	Circuit	Circuit Function
1	1026 (PK/WH)	PCM to integrated coil-on plug/ cylinder #2
2	555 (TN)	PCM to fuel injector #1 cylinder or bank #1
3	1023 (DB/LG)	Intake manifold comm. control monitor
4	—	not used
5	—	not used
6	—	not used
7	387 (RD/WH)	PCM to hego sensor, heater voltage monitor #1
8	388 (YE/LB)	PCM to hego sensor, heater voltage monitor #2
9	264 (WH/LB)	PCM to idle speed control motor #1
10	—	not used
11	559 (TN/BK)	PCM to fuel injector #5 cylinder
12	1025 (OG/YE)	PCM to integrated coil-on plug/ cylinder #6
13	1027 (PK/LB)	PCM to integrated coil-on plug/ cylinder #7
14	556 (WH)	PCM to fuel injector #2 cylinder or bank #2
15	—	not used
16	360 (BN/PK)	PCM to electronic vacuum regulator - constant current
17	359 (GY/RD)	Sensor, signal return
18	—	not used
19	—	not used
20	351 (BN/WH)	Power to engine sensors
21	560 (LG/OG)	PCM to fuel injector #6 cylinder
22	1021 (LG/YE)	PCM to integrated coil-on plug/ cylinder #5
23	1028 (WH/PK)	PCM to integrated coil-on plug/ cylinder #3
24	557 (BN/YE)	PCM to fuel injector #3 cylinder
25	—	not used
26	—	not used
27	—	not used
28	—	not used
29	561 (TN/RD)	PCM to fuel injector #7 cylinder
30	1030 (DG/VT)	PCM to integrated coil-on plug/ cylinder #4
31	1024 (LG/WH)	PCM to integrated coil-on plug/ cylinder #1
32	558 (BN/LB)	PCM to fuel injector #4 cylinder
33	—	not used
34	—	not used
35	—	not used
36	—	not used
37	562 (LB)	PCM to fuel injector #8 cylinder
38	1029 (WH/RD)	PCM to integrated coil-on plug/ cylinder #8
39	—	not used
40	1102 (YE/LG)	PCM - cylinder head temperature (CHT) sensor
41	352 (BN/LG)	PCM to delta exhaust pressure transducer
42	1273 (YE)	PCM to knock sensor, #1, negative
43	1274 (DG/WH)	PCM to knock sensor, #2, negative
44	94 (RD/BK)	PCM - heated exhaust gas oxygen sensor, #2
45	74 (GY/LB)	PCM - heated exhaust gas oxygen sensor, #1
46	354 (LG/RD)	PCM to engine coolant temperature sensor,
47	—	not used
48	—	not used
49	141 (RD/PK)	Fuel rail pressure transducer
50	—	not used
51	310 (YE/RD)	PCM to knock sensor, #1, positive
52	311 (DG/VT)	PCM to knock sensor, #2, positive
53	282 (DB/OG)	PCM to cylinder identification sensor, #1
54	—	not used
55	349 (DB)	PCM to crankshaft position sensor, feed
56	350 (GY)	PCM to crankshaft sensor, signal return
57	355 (GY/WH)	PCM to throttle position sensor, #1
58	1106 (LG/WH)	Intake manifold communicator control sensor, (IMCC) to PCM
59	358 (LG/BK)	PCM to manifold absolute pressure
60	—	not used