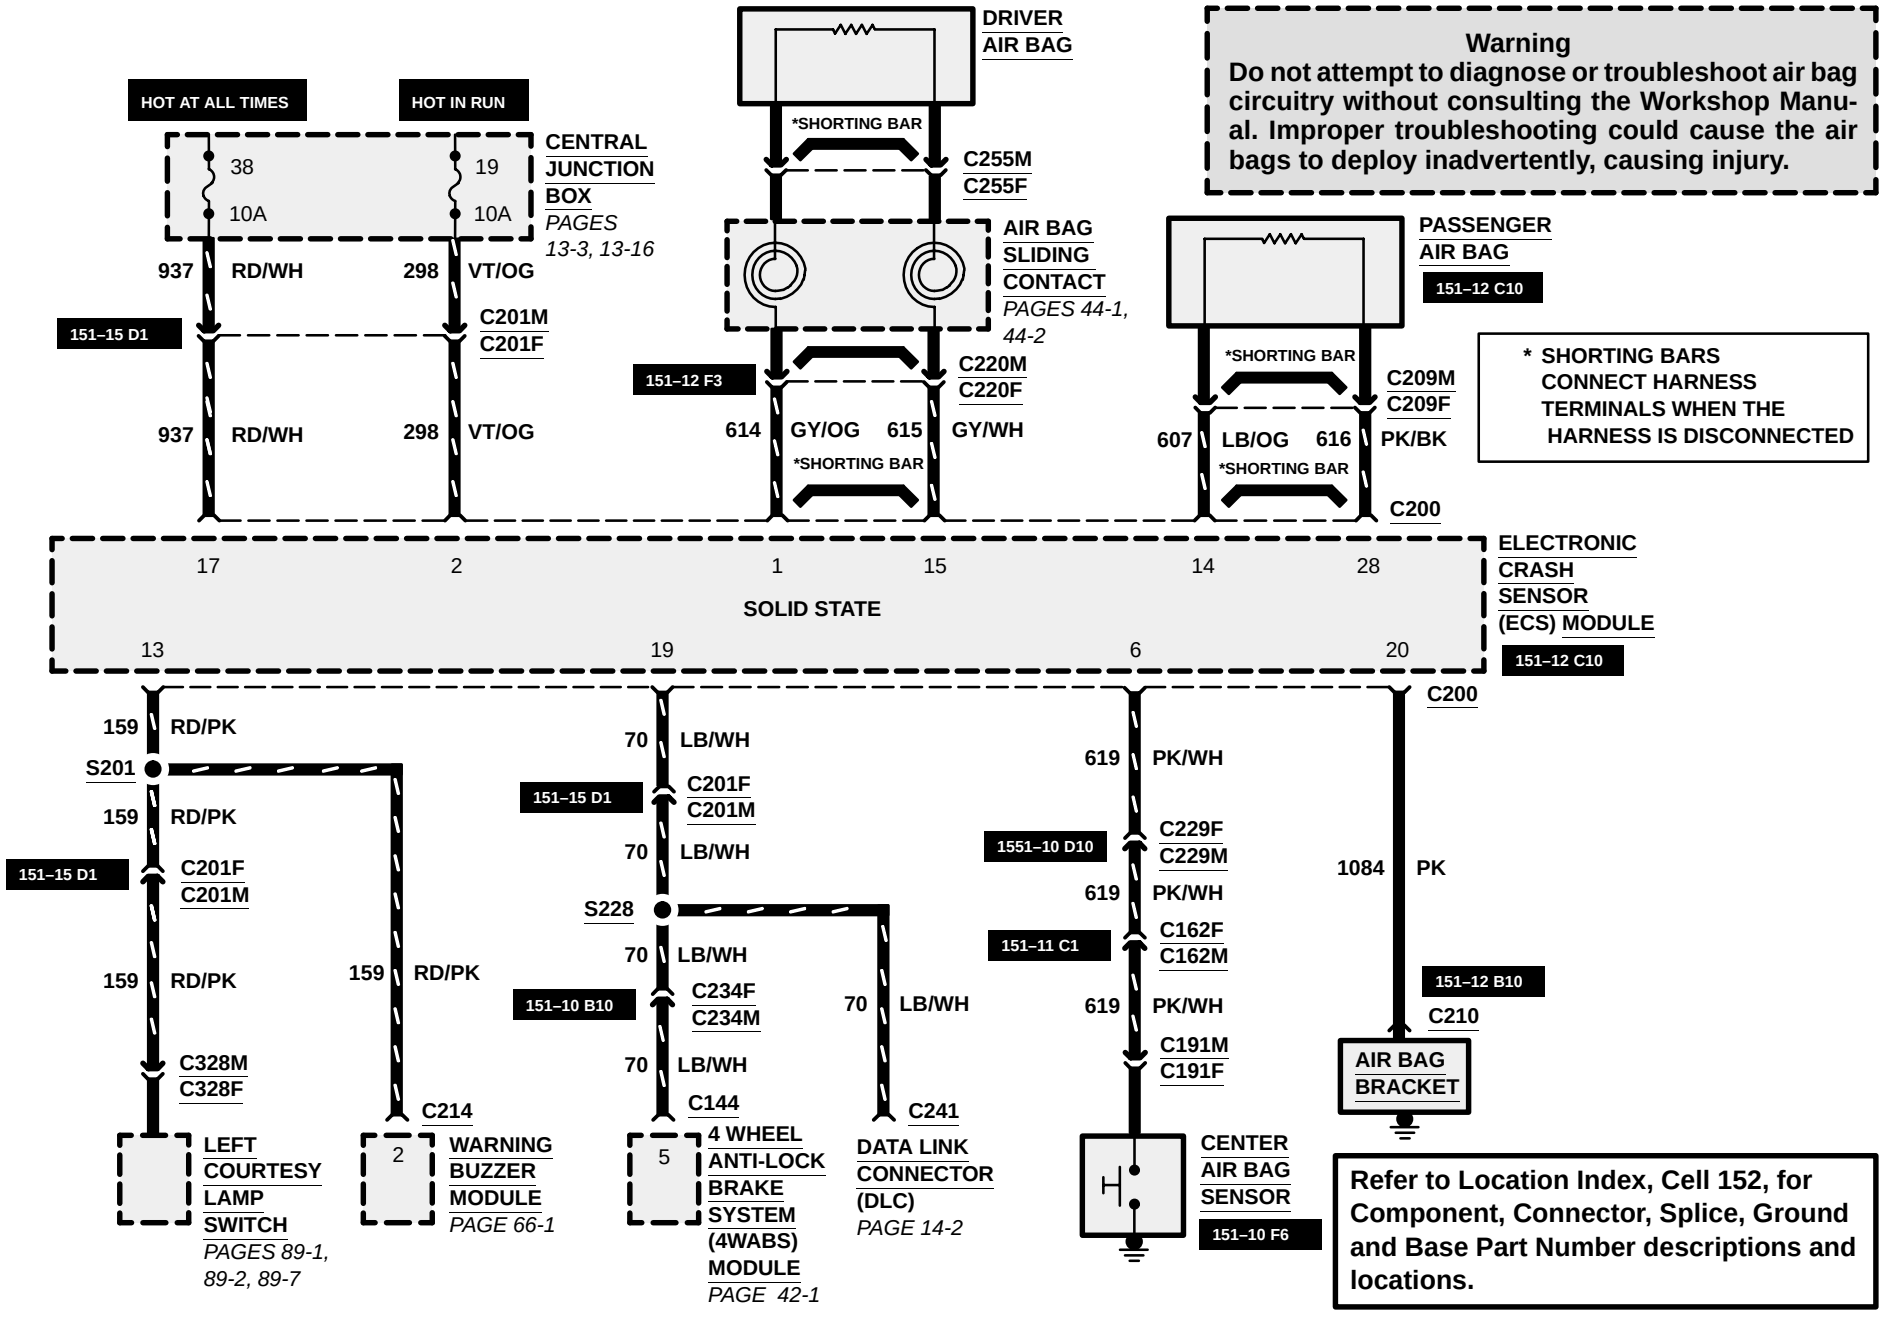
Warning
Do not attempt to diagnose or troubleshoot air bag circuitry without consulting the Workshop Manual. Improper troubleshooting could cause the air bags to deploy inadvertently, causing injury.
HOT AT ALL TIMES
HOT IN RUN
CENTRAL JUNCTION BOX
PAGES 13-3, 13-16
38
10A
19
10A
937 RD/WH
298 VT/OG
151–15 D1
C201M
C201F
937 RD/WH
298 VT/OG
DRIVER AIR BAG
*SHORTING BAR
C255M
C255F
AIR BAG SLIDING CONTACT
PAGES 44-1, 44-2
151–12 F3
C220M
C220F
614 GY/OG
615 GY/WH
*SHORTING BAR
PASSENGER AIR BAG
151–12 C10
*SHORTING BAR
C209M
C209F
607 LB/OG
616 PK/BK
*SHORTING BAR
C200
* SHORTING BARS CONNECT HARNESS TERMINALS WHEN THE HARNESS IS DISCONNECTED
17
2
1
15
14
28
SOLID STATE
ELECTRONIC CRASH SENSOR (ECS) MODULE
151–12 C10
13
19
6
20
C200
159 RD/PK
S201
159 RD/PK
151–15 D1
C201F
C201M
159 RD/PK
C328M
C328F
LEFT COURTESY LAMP SWITCH
PAGES 89-1, 89-2, 89-7
159 RD/PK
C214
2
WARNING BUZZER MODULE
PAGE 66-1
70 LB/WH
151–15 D1
C201F
C201M
70 LB/WH
S228
70 LB/WH
151–10 B10
C234F
C234M
70 LB/WH
C144
5
4 WHEEL ANTI-LOCK BRAKE SYSTEM (4WABS) MODULE
PAGE 42-1
70 LB/WH
C241
DATA LINK CONNECTOR (DLC)
PAGE 14-2
619 PK/WH
1551–10 D10
C229F
C229M
619 PK/WH
151–11 C1
C162F
C162M
619 PK/WH
C191M
C191F
CENTER AIR BAG SENSOR
151–10 F6
1084 PK
151–12 B10
C210
AIR BAG BRACKET
Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.