C897

14K733

N21
Engine compartment switch

F02005

Pin	Circuit	Circuit Function
1	31S-GJ7 (BK/YE)	Ground, switched
2	31-GL7 (BK)	Ground

C900

14014

A195
Fuel pump driver module

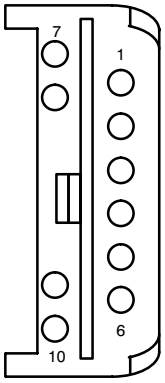

F10009

Pin	Circuit	Circuit Function
1	91S-RH5 (BK/BU)	Ground, switched
2	31-RE31 (BK)	Ground
3	9-RE31 (BN/YE)	Sensor signal return (reference/ground)
4	–	not used
5	–	not used
6	–	not used
7	15S-RE16 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected), switched
8	–	not used
9	15S-RG2 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected), switched
10	8-RE31 (WH/BK)	Sensor signal

C901

9H589

B225
Fuel rail pressure transducer sensor

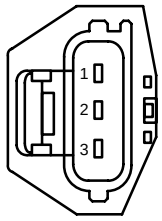

F03124

Pin	Circuit	Circuit Function
1	8-RJ11 (WH/GN)	Sensor signal
2	9-RJ11 (BN/GN)	Sensor signal return (reference/ground)
3	7-RJ11 (YE/GN)	Voltage D.C. supplied at all times (sensor)

C902

14K024

K237
Tailgate ajar relay 1

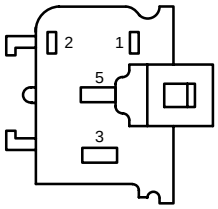

F04010

Pin	Circuit	Circuit Function
1	15-DA5 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected)
2	31S-GE11A (BK/WH)	Ground, switched
3	31S-LC1 (BK/BU)	Ground, switched
5	31-LC29D (BK)	Ground