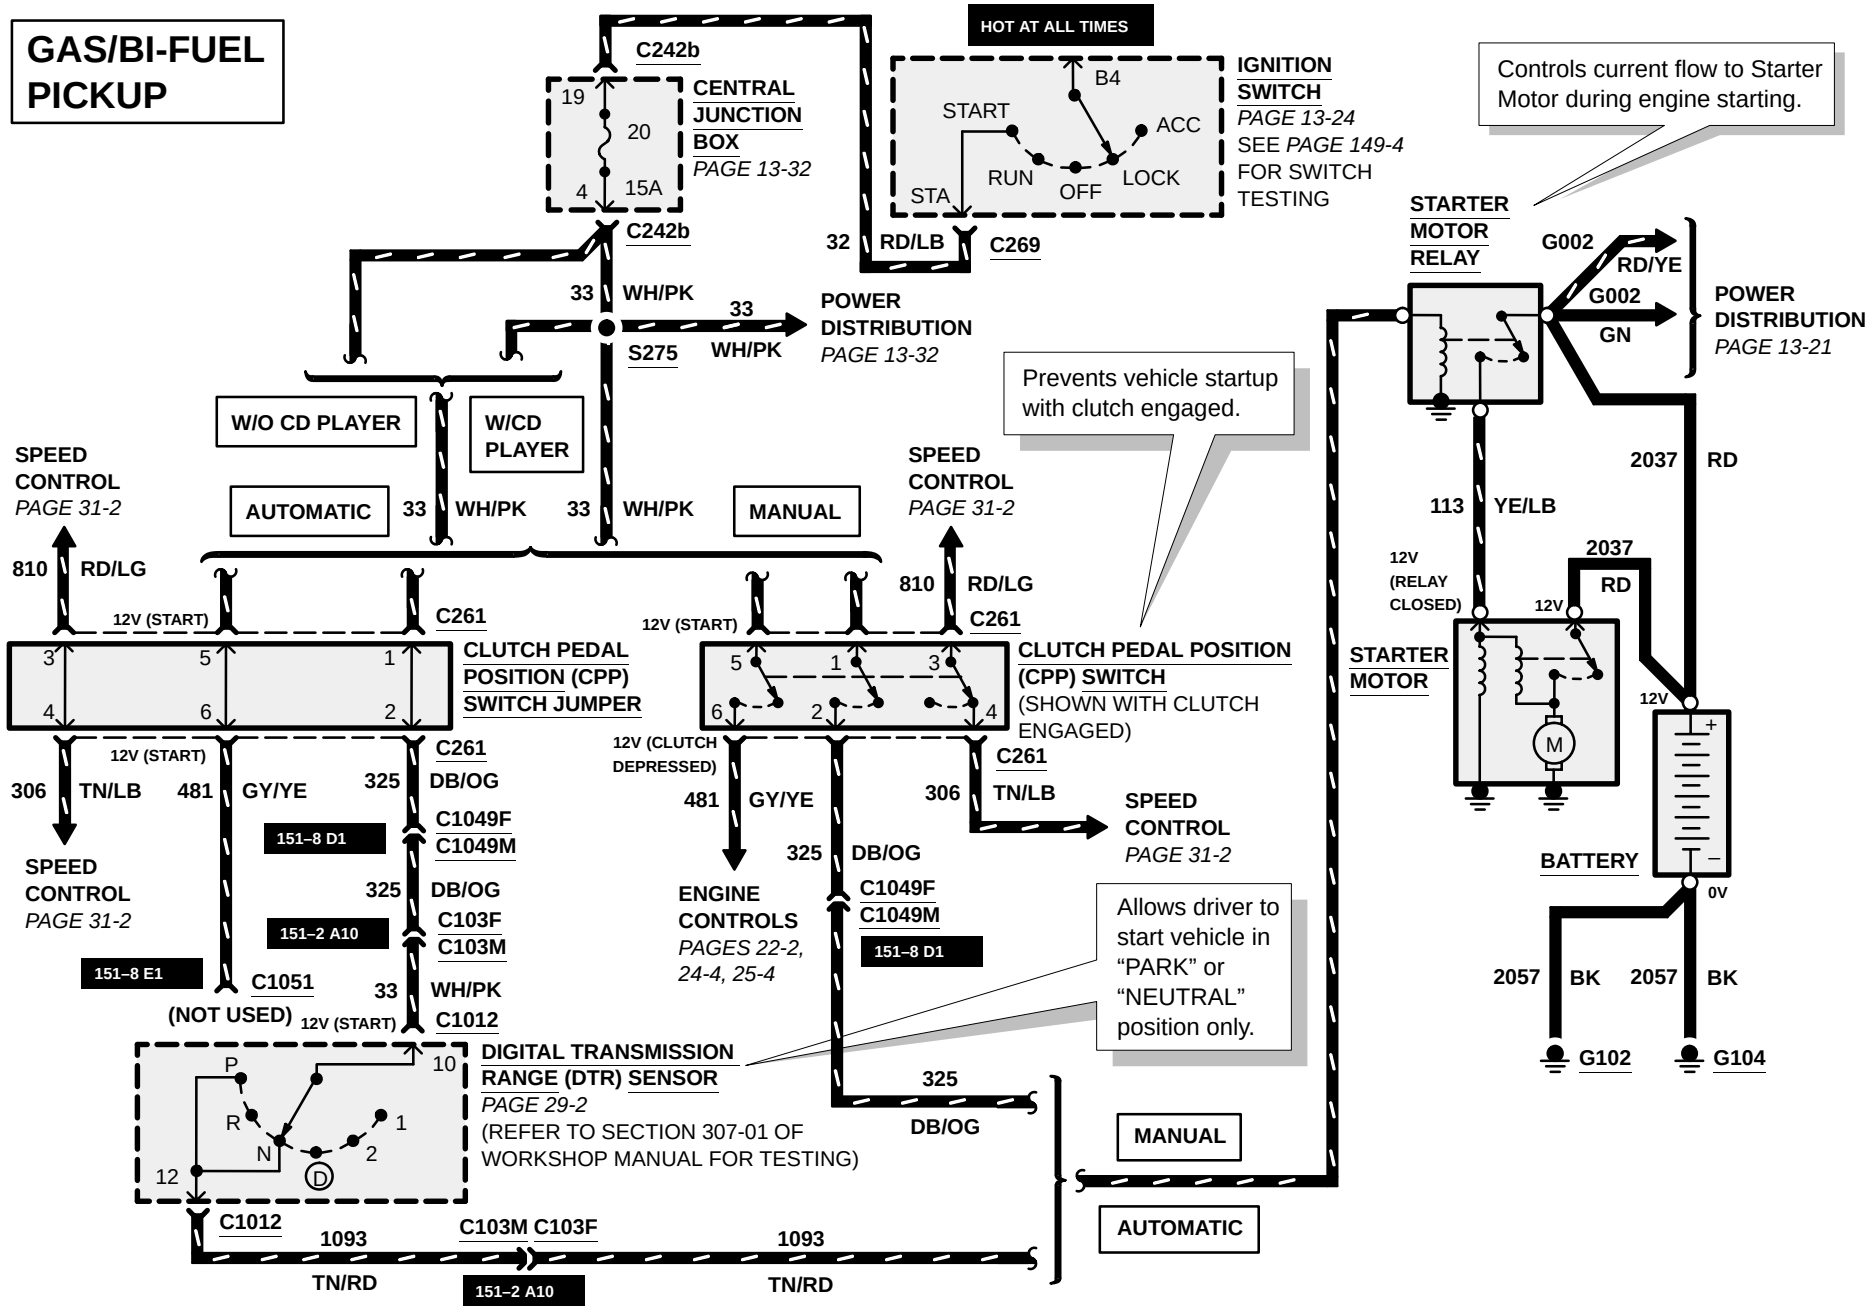
GAS/BI-FUEL PICKUP
HOT AT ALL TIMES
C242b
CENTRAL JUNCTION BOX
PAGE 13-32
19
20
4
15A
IGNITION SWITCH
PAGE 13-24
SEE PAGE 149-4 FOR SWITCH TESTING
START
B4
ACC
RUN
OFF
LOCK
STA
32 RD/LB
C269
Controls current flow to Starter Motor during engine starting.
STARTER MOTOR RELAY
G002
RD/YE
G002
GN
POWER DISTRIBUTION
PAGE 13-21
33 WH/PK
S275
33 WH/PK
POWER DISTRIBUTION
PAGE 13-32
Prevents vehicle startup with clutch engaged.
W/O CD PLAYER
W/CD PLAYER
AUTOMATIC
MANUAL
SPEED CONTROL
PAGE 31-2
33 WH/PK
33 WH/PK
SPEED CONTROL
PAGE 31-2
2037 RD
113 YE/LB
2037 RD
12V (RELAY CLOSED)
12V
STARTER MOTOR
M
12V
BATTERY
0V
810 RD/LG
12V (START)
C261
810 RD/LG
12V (START)
C261
CLUTCH PEDAL POSITION (CPP) SWITCH JUMPER
3
5
1
4
6
2
CLUTCH PEDAL POSITION (CPP) SWITCH
(SHOWN WITH CLUTCH ENGAGED)
5
1
3
6
2
4
12V (START)
C261
12V (CLUTCH DEPRESSED)
C261
306 TN/LB
481 GY/YE
325 DB/OG
C1049F
C1049M
151–8 D1
481 GY/YE
306 TN/LB
SPEED CONTROL
PAGE 31-2
SPEED CONTROL
PAGE 31-2
325 DB/OG
C103F
C103M
151–2 A10
325 DB/OG
C1049F
C1049M
151–8 D1
ENGINE CONTROLS
PAGES 22-2, 24-4, 25-4
151–8 E1
C1051
(NOT USED)
33 WH/PK
C1012
12V (START)
Allows driver to start vehicle in “PARK” or “NEUTRAL” position only.
DIGITAL TRANSMISSION RANGE (DTR) SENSOR
PAGE 29-2
(REFER TO SECTION 307-01 OF WORKSHOP MANUAL FOR TESTING)
P
R
N
D
1
2
10
12
325 DB/OG
MANUAL
AUTOMATIC
C1012
1093 TN/RD
C103M C103F
151–2 A10
1093 TN/RD
2057 BK
2057 BK
G102
G104