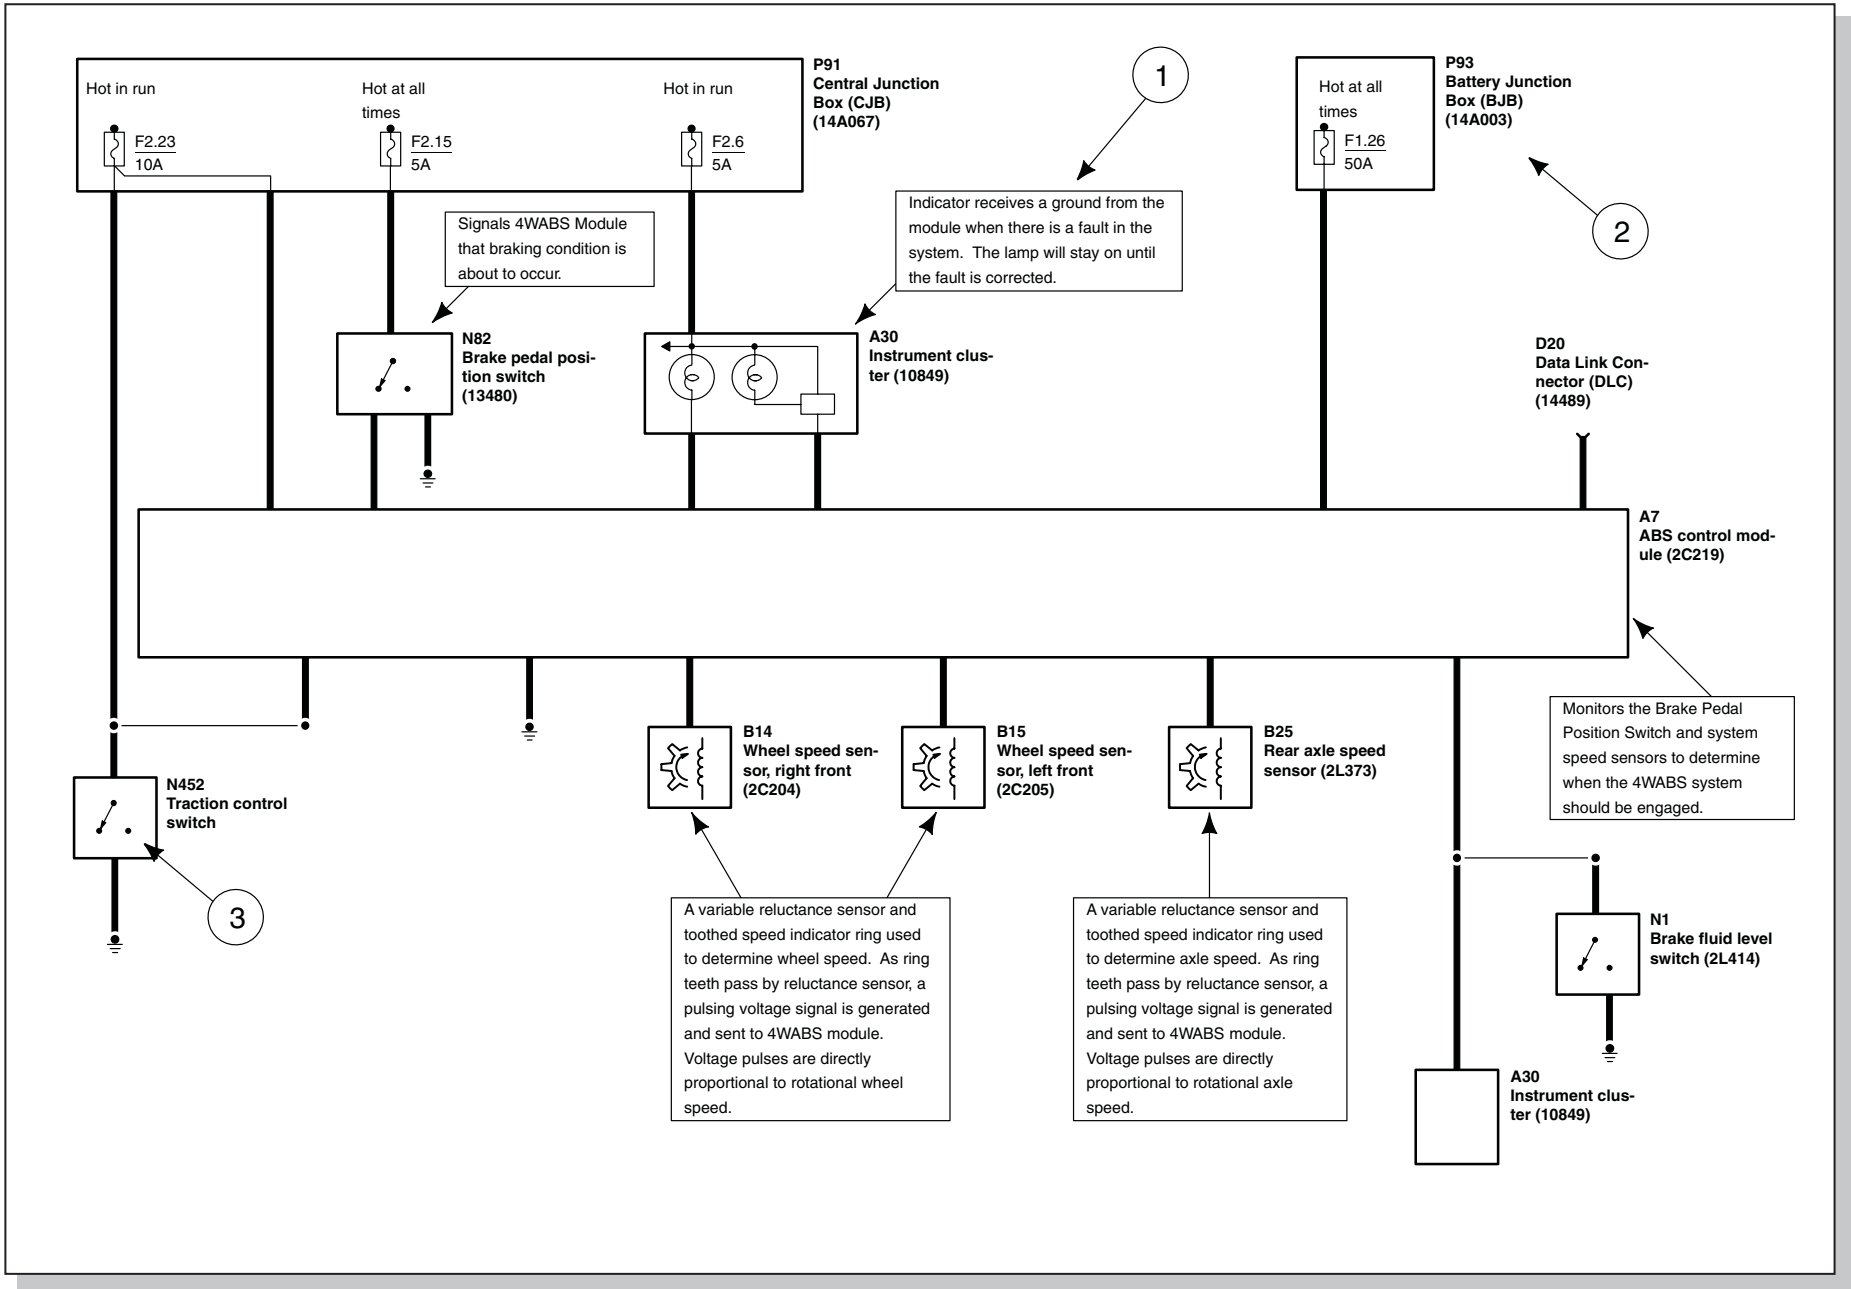
Hot in run
F2.23
10A
Hot at all times
F2.15
5A
Hot in run
F2.6
5A
P91
Central Junction Box (CJB)
(14A067)
1
Hot at all times
F1.26
50A
P93
Battery Junction Box (BJB)
(14A003)
2
Signals 4WABS Module that braking condition is about to occur.
Indicator receives a ground from the module when there is a fault in the system. The lamp will stay on until the fault is corrected.
N82
Brake pedal position switch (13480)
A30
Instrument cluster (10849)
D20
Data Link Connector (DLC)
(14489)
A7
ABS control module (2C219)
Monitors the Brake Pedal Position Switch and system speed sensors to determine when the 4WABS system should be engaged.
N452
Traction control switch
3
B14
Wheel speed sensor, right front (2C204)
B15
Wheel speed sensor, left front (2C205)
B25
Rear axle speed sensor (2L373)
A variable reluctance sensor and toothed speed indicator ring used to determine wheel speed. As ring teeth pass by reluctance sensor, a pulsing voltage signal is generated and sent to 4WABS module. Voltage pulses are directly proportional to rotational wheel speed.
A variable reluctance sensor and toothed speed indicator ring used to determine axle speed. As ring teeth pass by reluctance sensor, a pulsing voltage signal is generated and sent to 4WABS module. Voltage pulses are directly proportional to rotational axle speed.
N1
Brake fluid level switch (2L414)
A30
Instrument cluster (10849)