C360

14B719

N216
Seat adjust switch,
driver side front
(14A701)

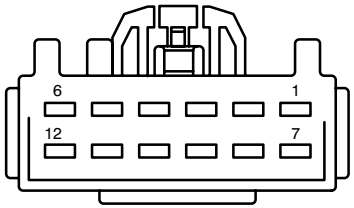

F12107

Pin	Circuit	Circuit function
1	91-AH35 (BN)	Ground
	31-AH35 (BK)	Ground
2	–	not used
3	8-AH83 (WH/GN)	Sensor signal
	32-AH37 (WH/GN)	Switched between: Battery voltage, Ground or Open
4	8-AH84 (WH/BK)	Sensor signal
	33-AH38 (YE/BK)	Switched between: Battery voltage, Ground or Open
5	10-AH84 (GY/BK)	Signal 2 (Y–direction, reverse, downward)
	32-AH38 (WH/BK)	Switched between: Battery voltage, Ground or Open
6	29-AH35 (OG/YE)	Voltage supplied at all times (overload protected)
	30-AH35 (RD)	Voltage supplied at all times (not overload protected)

Pin	Circuit	Circuit function
7	8-AH82 (WH/RD)	Sensor signal
	33-AH36 (YE/RD)	Switched between: Battery voltage, Ground or Open
8	8-AH85 (WH/VT)	Sensor signal
	32-AH41 (WH/VT)	Switched between: Battery voltage, Ground or Open
9	10-AH85 (GY/WH)	Signal 2 (Y–direction, reverse, downward)
	33-AH41 (YE/VT)	Switched between: Battery voltage, Ground or Open
10	–	not used
11	10-AH83 (GY/OG)	Signal 2 (Y–direction, reverse, downward)
	33-AH37 (YE/GN)	Switched between: Battery voltage, Ground or Open
12	10-AH82 (GY/RD)	Signal 2 (Y–direction, reverse, downward)
	32-AH36 (WH/RD)	Switched between: Battery voltage, Ground or Open