C1017

14290

K22
Starter relay (11450)

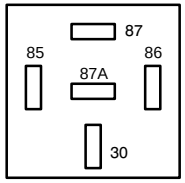

F05051

Pin	Circuit	Circuit function
30	1050 (LG/VT)	Voltage supplied at all times (overload protected)
85	1419 (LG/YE)	Starter relay circuit,control
86	33 (WH/PK)	switched power, to starter solenoid
87	113 (YE/LB)	Starter motor (11002) to Starter relay (11450)
87a	–	not used

C1018

14290

V34
PCM power diode



F02287

Pin	Circuit	Circuit function
1	175 (BK/YE)	Voltage supplied at all times (overload protected)
2	1140 (VT)	PCM power relay, Switched, Power (Start or Run)

C1021

14290

E1
Headlamp, left
(13008)

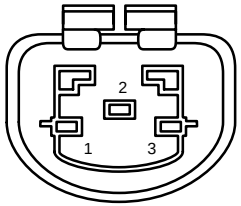

F03169

Pin	Circuit	Circuit function
1	1337 (VT/YE)	High beam lamp, left front, control
2	1450 (YE/RD)	Fused battery feed
3	1338 (WH)	Low beam lamp, left front, control

C1025

14290

N249
Brake pressure
switch (2B264)

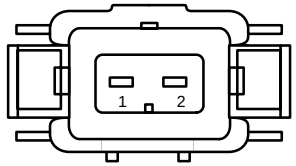

F02203

Pin	Circuit	Circuit function
1	1040 (RD/BK)	Voltage in Run (overload protected)
2	535 (LB/RD)	to, Brake differential pressure switch

C1035

14290

P93
Battery Junction
Box (BJB) (14A003)


F01115

Pin	Circuit	Circuit function
1	2037 (RD)	Battery cable +

C1041

14290

E7
Headlamp, right
(13008)

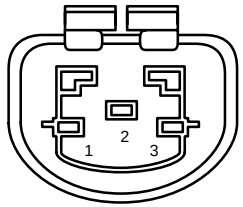

F03169

Pin	Circuit	Circuit function
1	1335 (YE/WH)	High beam lamp, left front, control
2	1453 (LG/RD)	Fused battery feed
3	1336 (LG/WH)	Low beam lamp, right front, control