C523

14631

Y28
Speaker, left front

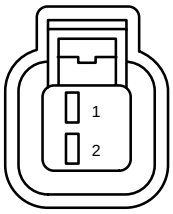

F02069

Pin	Circuit	Circuit Function
1	176 (PK/LG)	Tweeter, left front, to, Speaker, left front +
	804 (OG/LG)	Speaker, left front +
2	179 (OG/RD)	Tweeter, left front, to, Speaker, left front -
	813 (LB/WH)	Speaker, left front -

C524

14631

M80
Power window motor, driver side front

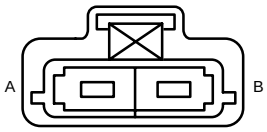

F02311

Pin	Circuit	Circuit Function
A	903 (RD)	Window motor, feed, Down
B	992 (WH/BK)	Master window adjust switch, feed, Up

C525

14631

A172
Door lock unit, driver side front

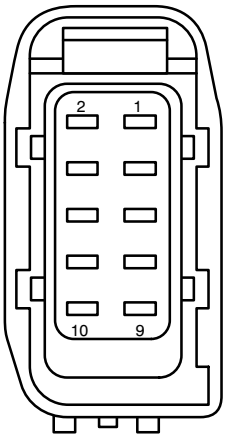

F10089

Pin	Circuit	Circuit Function
1	-	not used
2	117 (PK/BK)	Door lock, output
3	-	not used
4	-	not used
5	1317 (DB/LG)	Driver front door lock switch, Door unlock, input
6	57 (BK)	Ground
7	1316 (WH/VT)	Driver front door lock switch, Door lock, input
8	1312 (LG/BK)	Door ajar switch, driver side front
9	-	not used
10	163 (RD/OG)	Door unlock, output