C4109b

19B113/14A005

Y263
Subwoofer amplifier, rear

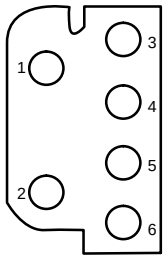

Pin	Circuit	Circuit function
1	173 (DG/VT)	Radio (18806) – Subwoofer, High, mute
	174 (GY/BK)	Radio (18806) – Subwoofer, Low, mute
2	–	not used
3	167 (BN/OG)	Radio (18806) – Subwoofer, High, +
	169 (LG/BK)	Radio (18806) – Subwoofer, Low, +
4	168 (RD/BK)	Radio (18806) – Subwoofer, High, –
	172 (LB/RD)	Radio (18806) – Subwoofer, Low, –
5	–	not used
6	–	not used

C4110

19B113

Y264
Package tray assembly, rear



F04271

Pin	Circuit	Circuit function
1	822 (BK/LG)	Subwoofer amplifier, rear, to Subwoofer, +
2	822 (BK/LG)	Subwoofer amplifier, rear, to Subwoofer, +
3	287 (BK/WH)	Subwoofer amplifier, rear, to Subwoofer, –
4	287 (BK/WH)	Subwoofer amplifier, rear, to Subwoofer, –

C4112

13410

E273
Park/stop/turn lamp 1, left rear

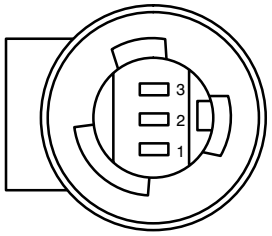

F03113

Pin	Circuit	Circuit function
1	1205 (BK)	Ground
2	14 (BN)	Power, Exterior lamps
3	9 (LG/OG)	Turn lamps, feed, left rear

C4113

13410

E274
Park/stop/turn lamp 2, left rear

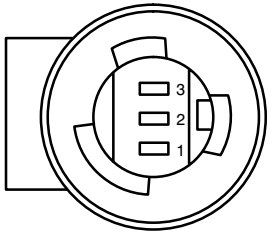

F03113

Pin	Circuit	Circuit function
1	1205 (BK)	Ground
2	14 (BN)	Power, Exterior lamps
3	9 (LG/OG)	Turn lamps, feed, left rear

C4114

13407

E275
Park/stop/turn lamp 1, right rear

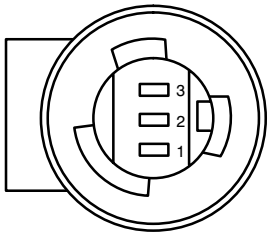

F03113

Pin	Circuit	Circuit function
1	1205 (BK)	Ground
2	14 (BN)	Power, Exterior lamps
3	5 (OG/LB)	Turn lamps, feed, right rear