C240b

14401

A220
Audio unit (18808)

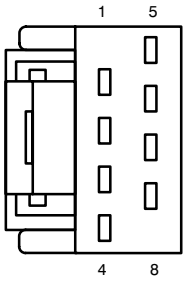

F08167

Pin	Circuit	Circuit Function
1	2-MD19 (GY/RD)	Subwoofer audio output (–)
2	1-MD19 (WH/RD)	Subwoofer audio output (–)
3	48-MD15	Drain wire – Subwoofer Shield
4	7-MD19 (YE/RD)	Subwoofer Amplifier enable output
5	2-MD12 (GY)	Center image speaker, left (–)
6	1-MD12 (WH)	Center image speaker, left (+)
7	48-MD12	Drain wire
8	7-MD12 (YE)	Center image amplifier output