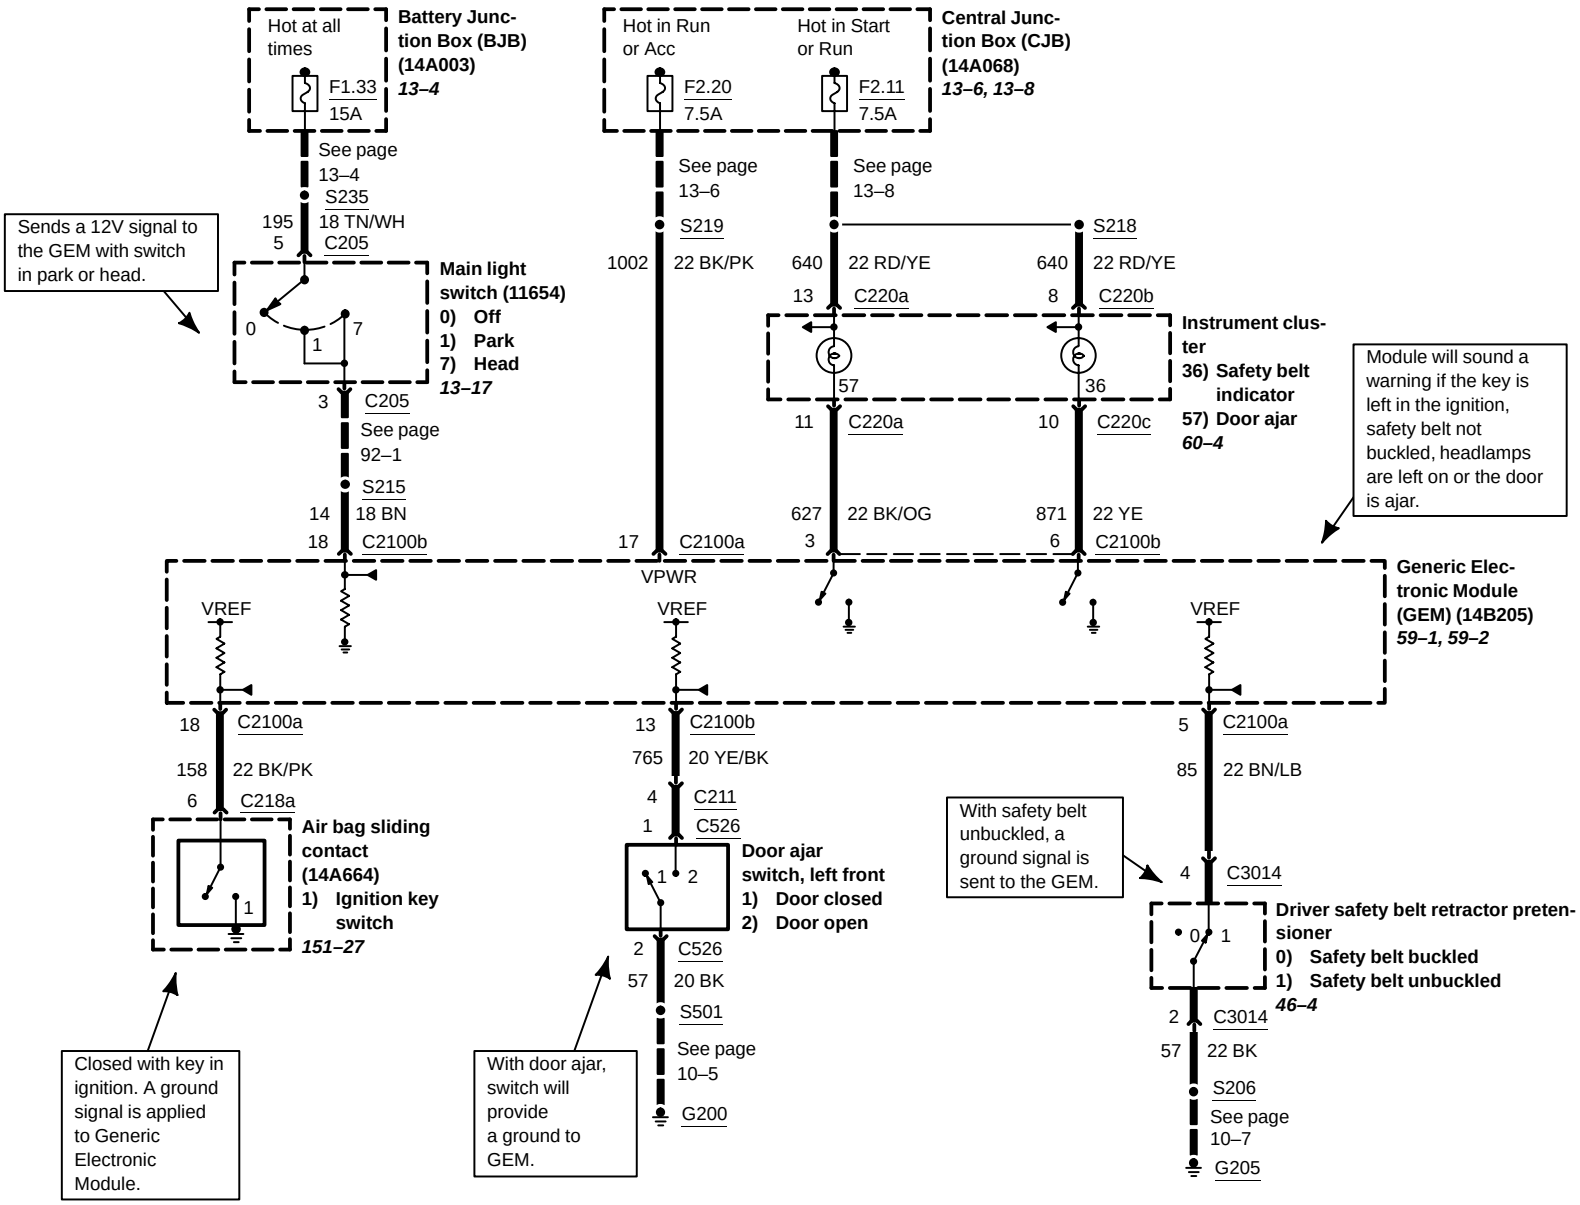
Hot at all times
Battery Junction Box (BJB) (14A003) 13–4
F1.33
15A
See page 13–4
S235
195
5
18 TN/WH
C205
Sends a 12V signal to the GEM with switch in park or head.
Main light switch (11654)
0) Off
1) Park
7) Head
13–17
3
C205
See page 92–1
S215
14
18 BN
18
C2100b
Hot in Run or Acc
Hot in Start or Run
Central Junction Box (CJB) (14A068) 13–6, 13–8
F2.20
7.5A
F2.11
7.5A
See page 13–6
See page 13–8
S219
1002
22 BK/PK
17
C2100a
S218
640
22 RD/YE
13
C220a
640
22 RD/YE
8
C220b
Instrument cluster
36) Safety belt indicator
57) Door ajar
60–4
57
36
11
C220a
10
C220c
627
22 BK/OG
3
871
22 YE
6
C2100b
VPWR
Module will sound a warning if the key is left in the ignition, safety belt not buckled, headlamps are left on or the door is ajar.
Generic Electronic Module (GEM) (14B205) 59–1, 59–2
VREF
VREF
VREF
18
C2100a
158
22 BK/PK
6
C218a
Air bag sliding contact (14A664)
1) Ignition key switch
151–27
Closed with key in ignition. A ground signal is applied to Generic Electronic Module.
13
C2100b
765
20 YE/BK
4
C211
1
C526
Door ajar switch, left front
1) Door closed
2) Door open
2
C526
57
20 BK
S501
See page 10–5
G200
With door ajar, switch will provide a ground to GEM.
5
C2100a
85
22 BN/LB
With safety belt unbuckled, a ground signal is sent to the GEM.
4
C3014
Driver safety belt retractor pretensioner
0) Safety belt buckled
1) Safety belt unbuckled
46–4
2
C3014
57
22 BK
S206
See page 10–7
G205