Marauder

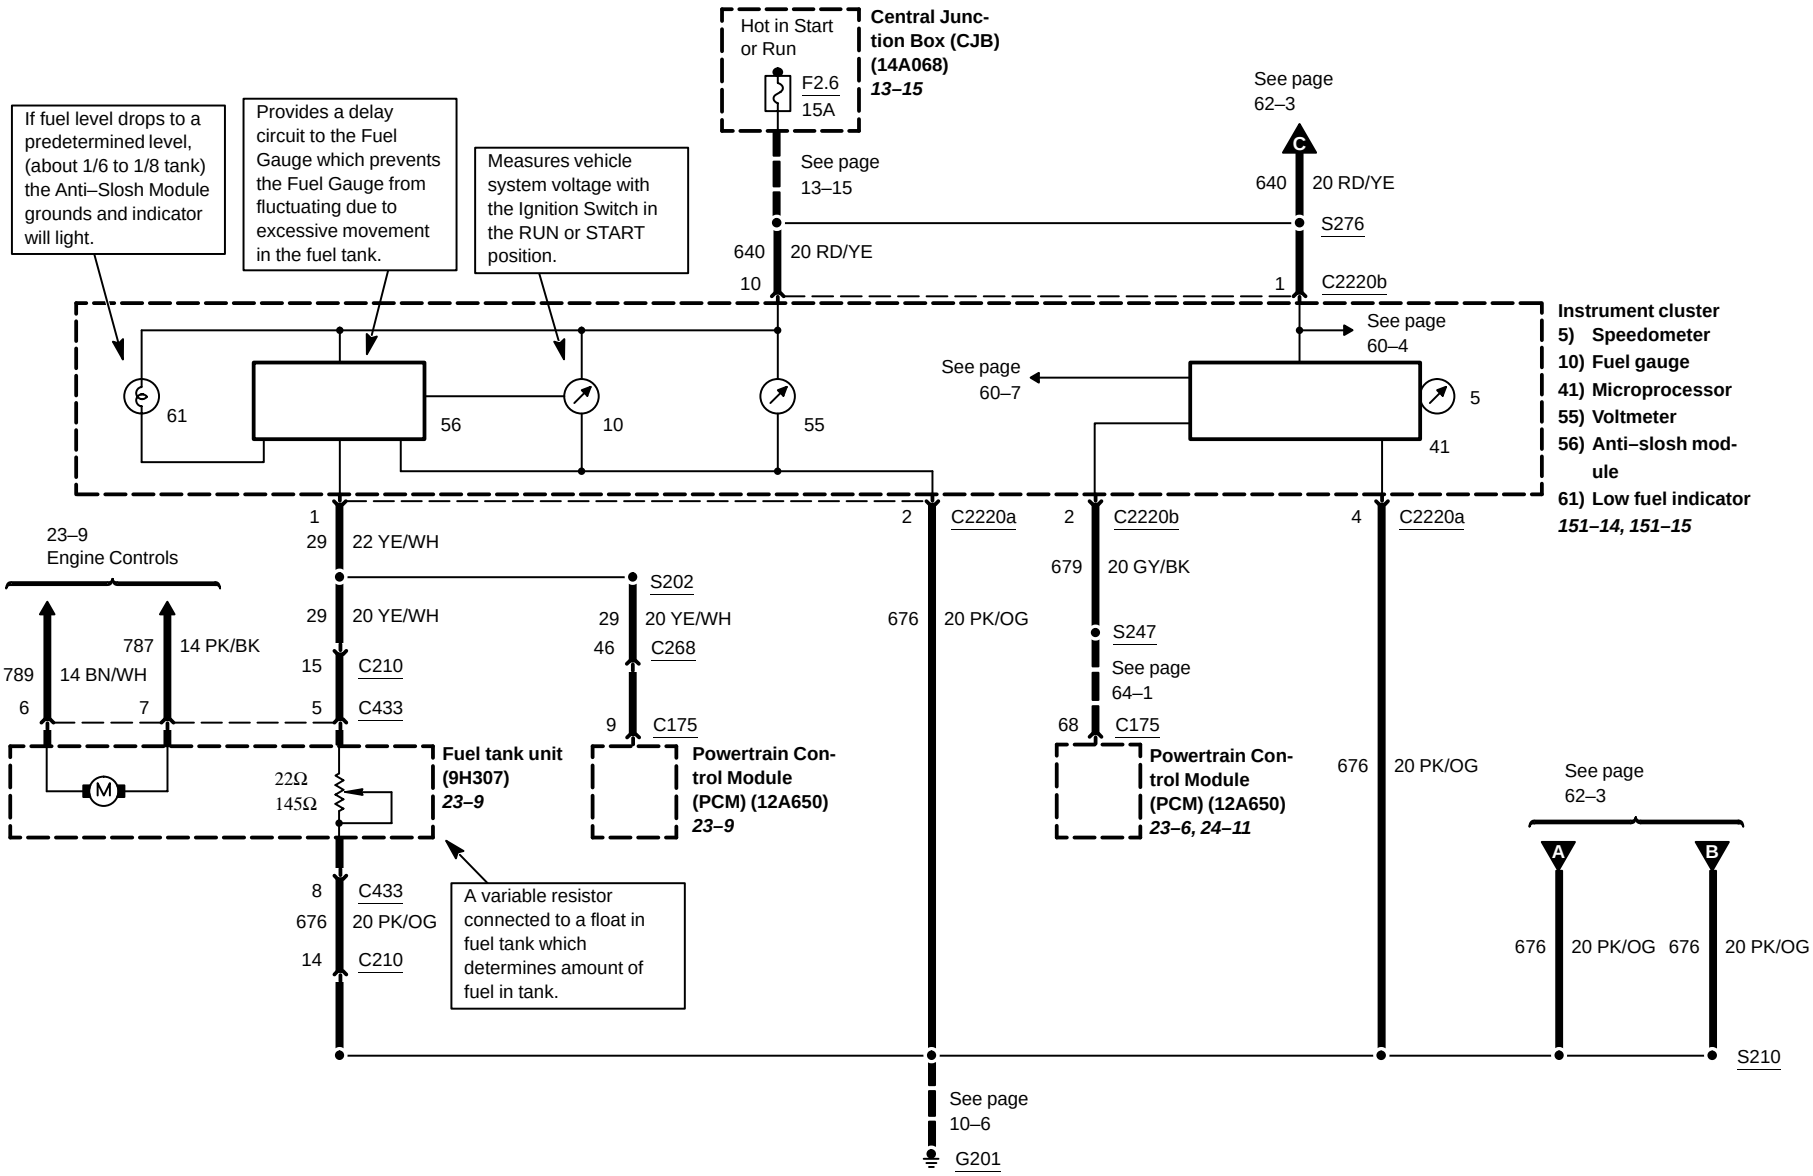
Hot in Start or Run
F2.6
15A
Central Junction Box (CJB) (14A068)
13–15
See page 13–15
640 20 RD/YE
10
If fuel level drops to a predetermined level, (about 1/6 to 1/8 tank) the Anti–Slosh Module grounds and indicator will light.
Provides a delay circuit to the Fuel Gauge which prevents the Fuel Gauge from fluctuating due to excessive movement in the fuel tank.
Measures vehicle system voltage with the Ignition Switch in the RUN or START position.
See page 62–3
C
640 20 RD/YE
S276
1 C2220b
See page 60–4
See page 60–7
Instrument cluster
5) Speedometer
10) Fuel gauge
41) Microprocessor
55) Voltmeter
56) Anti–slosh module
61) Low fuel indicator
151–14, 151–15
61
56
10
55
5
41
1
29 22 YE/WH
2 C2220a
2 C2220b
4 C2220a
679 20 GY/BK
23–9
Engine Controls
S202
29 20 YE/WH
29 20 YE/WH
676 20 PK/OG
S247
See page 64–1
787 14 PK/BK
789 14 BN/WH
15 C210
46 C268
6
7
5 C433
9 C175
68 C175
Fuel tank unit (9H307)
23–9
22Ω
145Ω
Powertrain Control Module (PCM) (12A650)
23–9
Powertrain Control Module (PCM) (12A650)
23–6, 24–11
676 20 PK/OG
See page 62–3
A
B
8 C433
676 20 PK/OG
14 C210
A variable resistor connected to a float in fuel tank which determines amount of fuel in tank.
676 20 PK/OG 676 20 PK/OG
S210
See page 10–6
G201