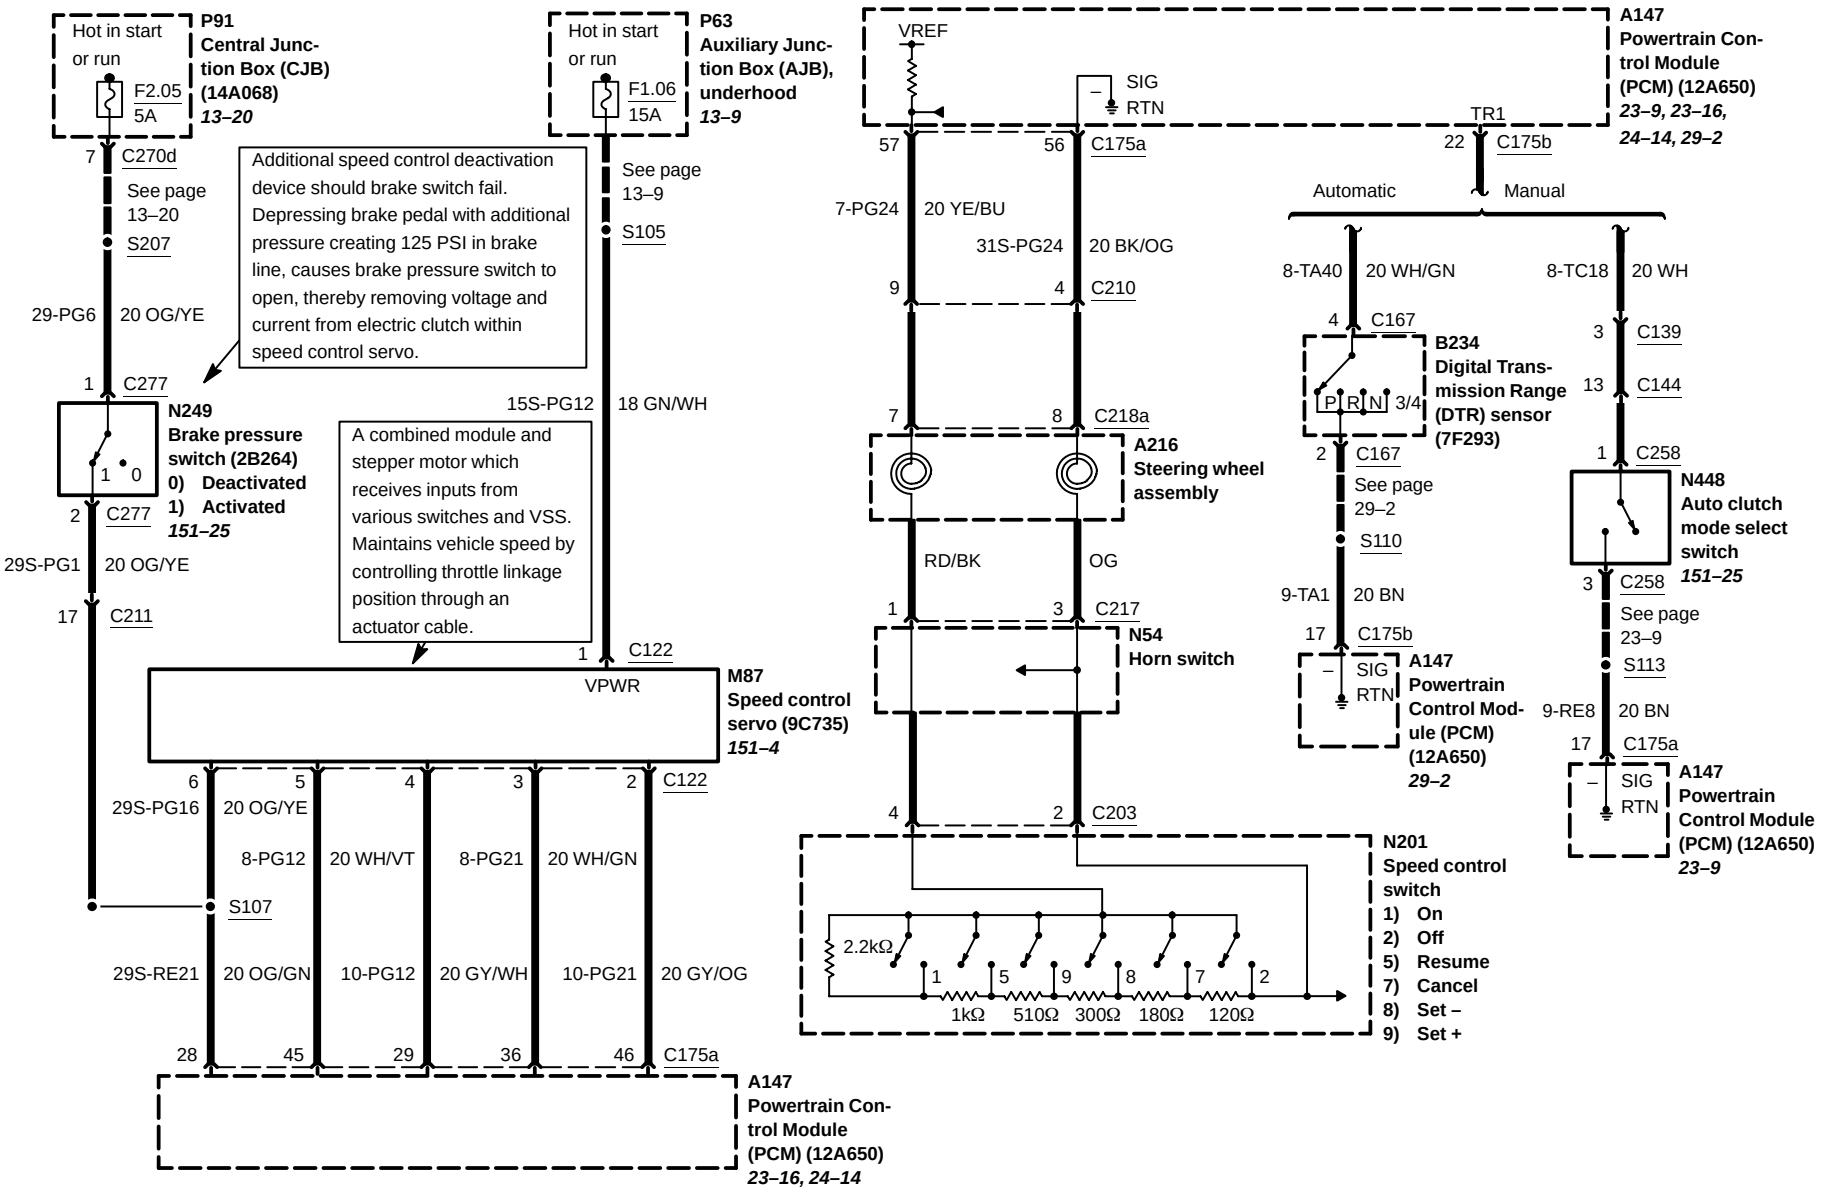
Hot in start or run
F2.05 5A
P91 Central Junction Box (CJB) (14A068) 13–20
7 C270d
See page 13–20
S207
29-PG6 20 OG/YE
1 C277
N249 Brake pressure switch (2B264) 0) Deactivated 1) Activated 151–25
2 C277
29S-PG1 20 OG/YE
17 C211
Additional speed control deactivation device should brake switch fail. Depressing brake pedal with additional pressure creating 125 PSI in brake line, causes brake pressure switch to open, thereby removing voltage and current from electric clutch within speed control servo.
A combined module and stepper motor which receives inputs from various switches and VSS. Maintains vehicle speed by controlling throttle linkage position through an actuator cable.
Hot in start or run
F1.06 15A
P63 Auxiliary Junction Box (AJB), underhood 13–9
See page 13–9
S105
15S-PG12 18 GN/WH
1 C122
VPWR
M87 Speed control servo (9C735) 151–4
6 5 4 3 2 C122
29S-PG16 20 OG/YE
8-PG12 20 WH/VT
8-PG21 20 WH/GN
S107
29S-RE21 20 OG/GN
10-PG12 20 GY/WH
10-PG21 20 GY/OG
28 45 29 36 46 C175a
A147 Powertrain Control Module (PCM) (12A650) 23–16, 24–14
VREF
SIG RTN
A147 Powertrain Control Module (PCM) (12A650) 23–9, 23–16, 24–14, 29–2
57 56 C175a
7-PG24 20 YE/BU
31S-PG24 20 BK/OG
9 4 C210
7 8 C218a
A216 Steering wheel assembly
RD/BK OG
1 3 C217
N54 Horn switch
4 2 C203
N201 Speed control switch 1) On 2) Off 5) Resume 7) Cancel 8) Set – 9) Set +
2.2kΩ
1kΩ 510Ω 300Ω 180Ω 120Ω
TR1
22 C175b
Automatic
Manual
8-TA40 20 WH/GN
4 C167
B234 Digital Transmission Range (DTR) sensor (7F293)
P R N 3/4
2 C167
See page 29–2
S110
9-TA1 20 BN
17 C175b
SIG RTN
A147 Powertrain Control Module (PCM) (12A650) 29–2
8-TC18 20 WH
3 C139
13 C144
1 C258
N448 Auto clutch mode select switch 151–25
3 C258
See page 23–9
S113
9-RE8 20 BN
17 C175a
SIG RTN
A147 Powertrain Control Module (PCM) (12A650) 23–9