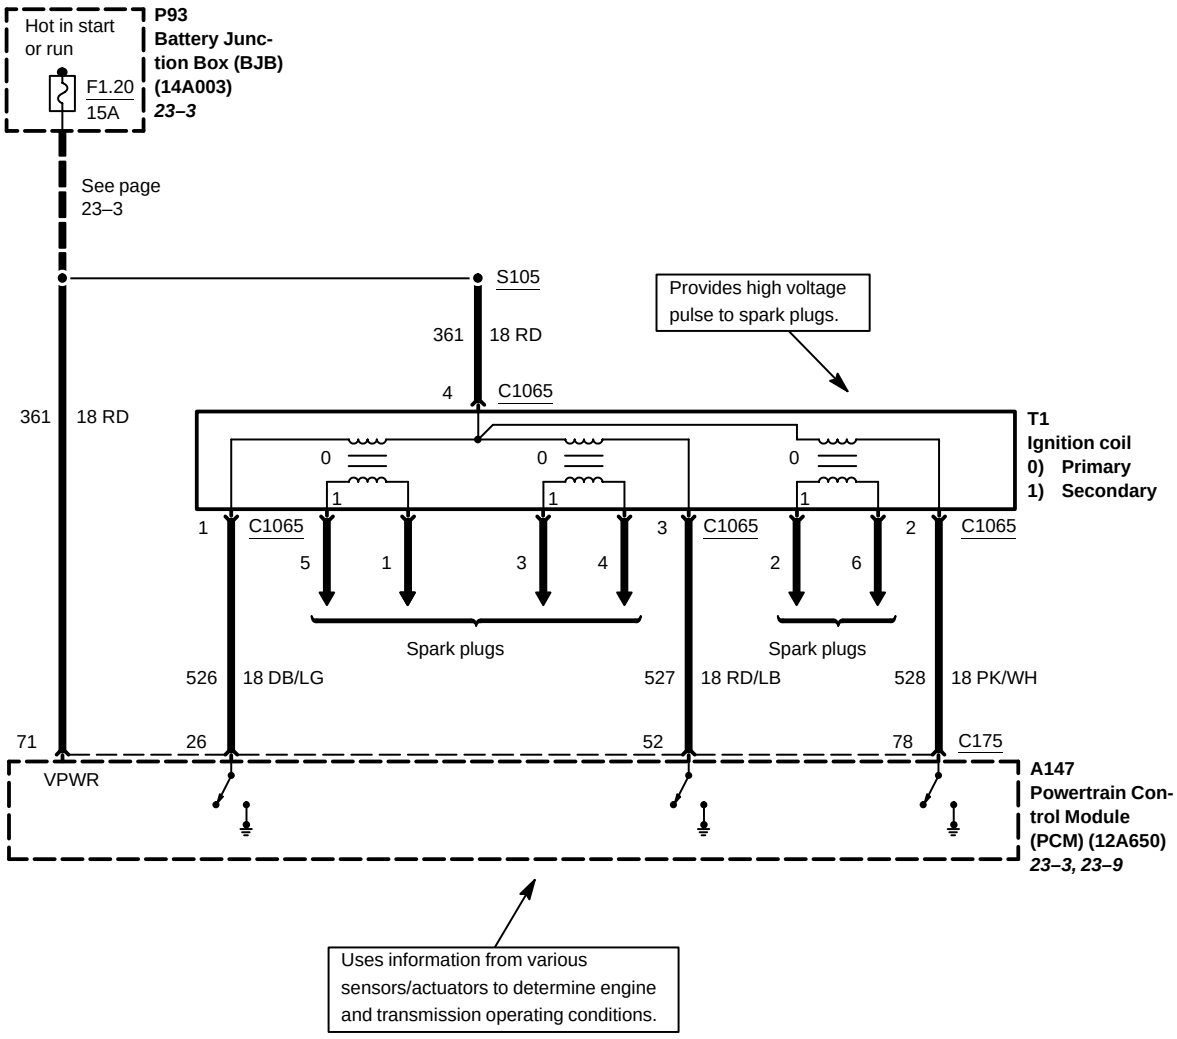
Hot in start or run
F1.20
15A
P93
Battery Junction Box (BJB)
(14A003)
23–3
See page 23–3
S105
361 18 RD
4 C1065
Provides high voltage pulse to spark plugs.
361 18 RD
T1
Ignition coil
0) Primary
1) Secondary
0
1
1 C1065 5 1
3 4
3 C1065
2 6
2 C1065
Spark plugs
Spark plugs
526 18 DB/LG
527 18 RD/LB
528 18 PK/WH
71 VPWR
26
52
78 C175
A147
Powertrain Control Module (PCM) (12A650)
23–3, 23–9
Uses information from various sensors/actuators to determine engine and transmission operating conditions.