C118 (BK)

12B637

Coil On Plug (COP) 8 (12A366)

F02371

Pin	Circuit	Circuit function
1	20 (WH/LB)	Voltage supplied in Start and Run (overload protected)
2	1029 (WH/RD)	Coil On Plug (COP) 8 (12029), control

C124 (BK)

14398

Brake fluid level switch (2L414)

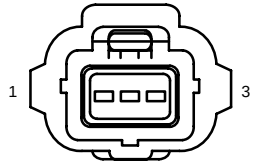

F03093

Pin	Circuit	Circuit function
1	1205 (BK)	Ground
2	512 (TN/LG)	Brake indicator, control
3	977 (VT/WH)	Brake indicator, control

C122 (BK)

14398

Speed control actuator

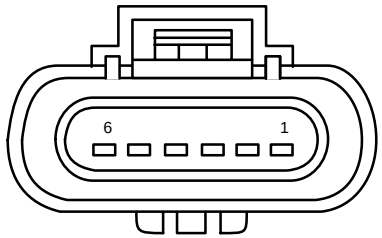

F06169

Pin	Circuit	Circuit function
1	1140 (VT)	Voltage supplied in Start and Run (overload protected)
2	203 (OG/LB)	Cruise set, indicator, control
3	203 (OG/LB)	Cruise set, indicator, control
4	203 (OG/LB)	Cruise set, indicator, control
5	133 (BK)	Speed control switch, return
6	307 (BK/YE)	Brake pressure switch (2B264), input

C126 (GY)

ABS test connector

14398

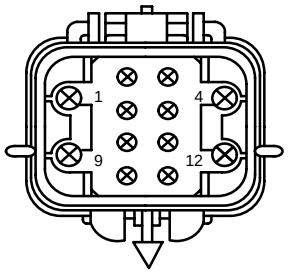

F12207

(1) –
(2) –
(3) –
(4) –
(5) 601 (LB/PK)
(6) 493 (BK/PK)
(7) –
(8) 70 (LB/WH)
(9) 534 (YE/LG)
(10) 914 (TN/OG)
(11) 915 (PK/LB)
(12) –

14398

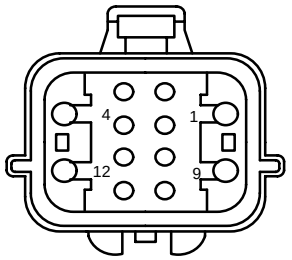

F12209

(1) –
(2) 1205 (BK)
(3) –
(4) –
(5) 601 (LB/PK)
(6) 493 (BK/PK)
(7) –
(8) 70 (LB/WH)
(9) 534 (YE/LG)
(10) 914 (TN/OG)
(11) 915 (PK/LB)
(12) –