C417 (GY)

14659

M203
Door lock actuator
assembly, liftgate

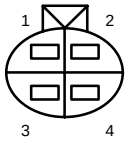

F04157

Pin	Circuit	Circuit function
1	SEE4 (BK)	Ground
2	PH32 (WH/RD)	Door unlock, output
3	SC14 (RD/BU)	Door unlock, switch sense
4	PH45 (GN/YE)	Door lock, output

C418 (GY)

14659

M218
Rear wiper motor
assembly

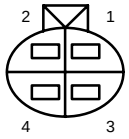

F04157

Pin	Circuit	Circuit function
1	WBE2 (BK)	Ground
2	WB01 (YE/BK)	Voltage in Run or Accessory (overload protected)
3	WB07 (BU)	Washer – Switched between: Battery voltage, Ground or Open
4	WB08 (BU/YE)	wiper – Switched between: Battery voltage, Ground or Open

C419 (GY)

14659

M218
Rear wiper motor
assembly

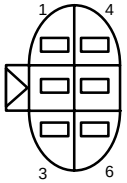

F06181

Pin	Circuit	Circuit function
1	WB07 (BU)	Washer – Switched between: Battery voltage, Ground or Open
2	WB09 (VT)	Voltage supplied at all times (overload protected)
3	WB21 (BK/YE)	Liftgate glass ajar switch
4	WB08 (BU/YE)	wiper – Switched between: Battery voltage, Ground or Open
5	WB01 (YE/BK)	Voltage in Run or Accessory (overload protected)
6	WBE2 (BK)	Ground

C420 (WH)

14659



F03121

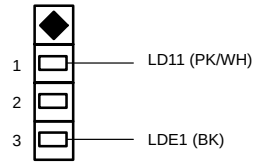

F03123