# 12-1 CHARGING SYSTEM



**For diagnostic information, refer to Section 414-00 of the Workshop Manual.**

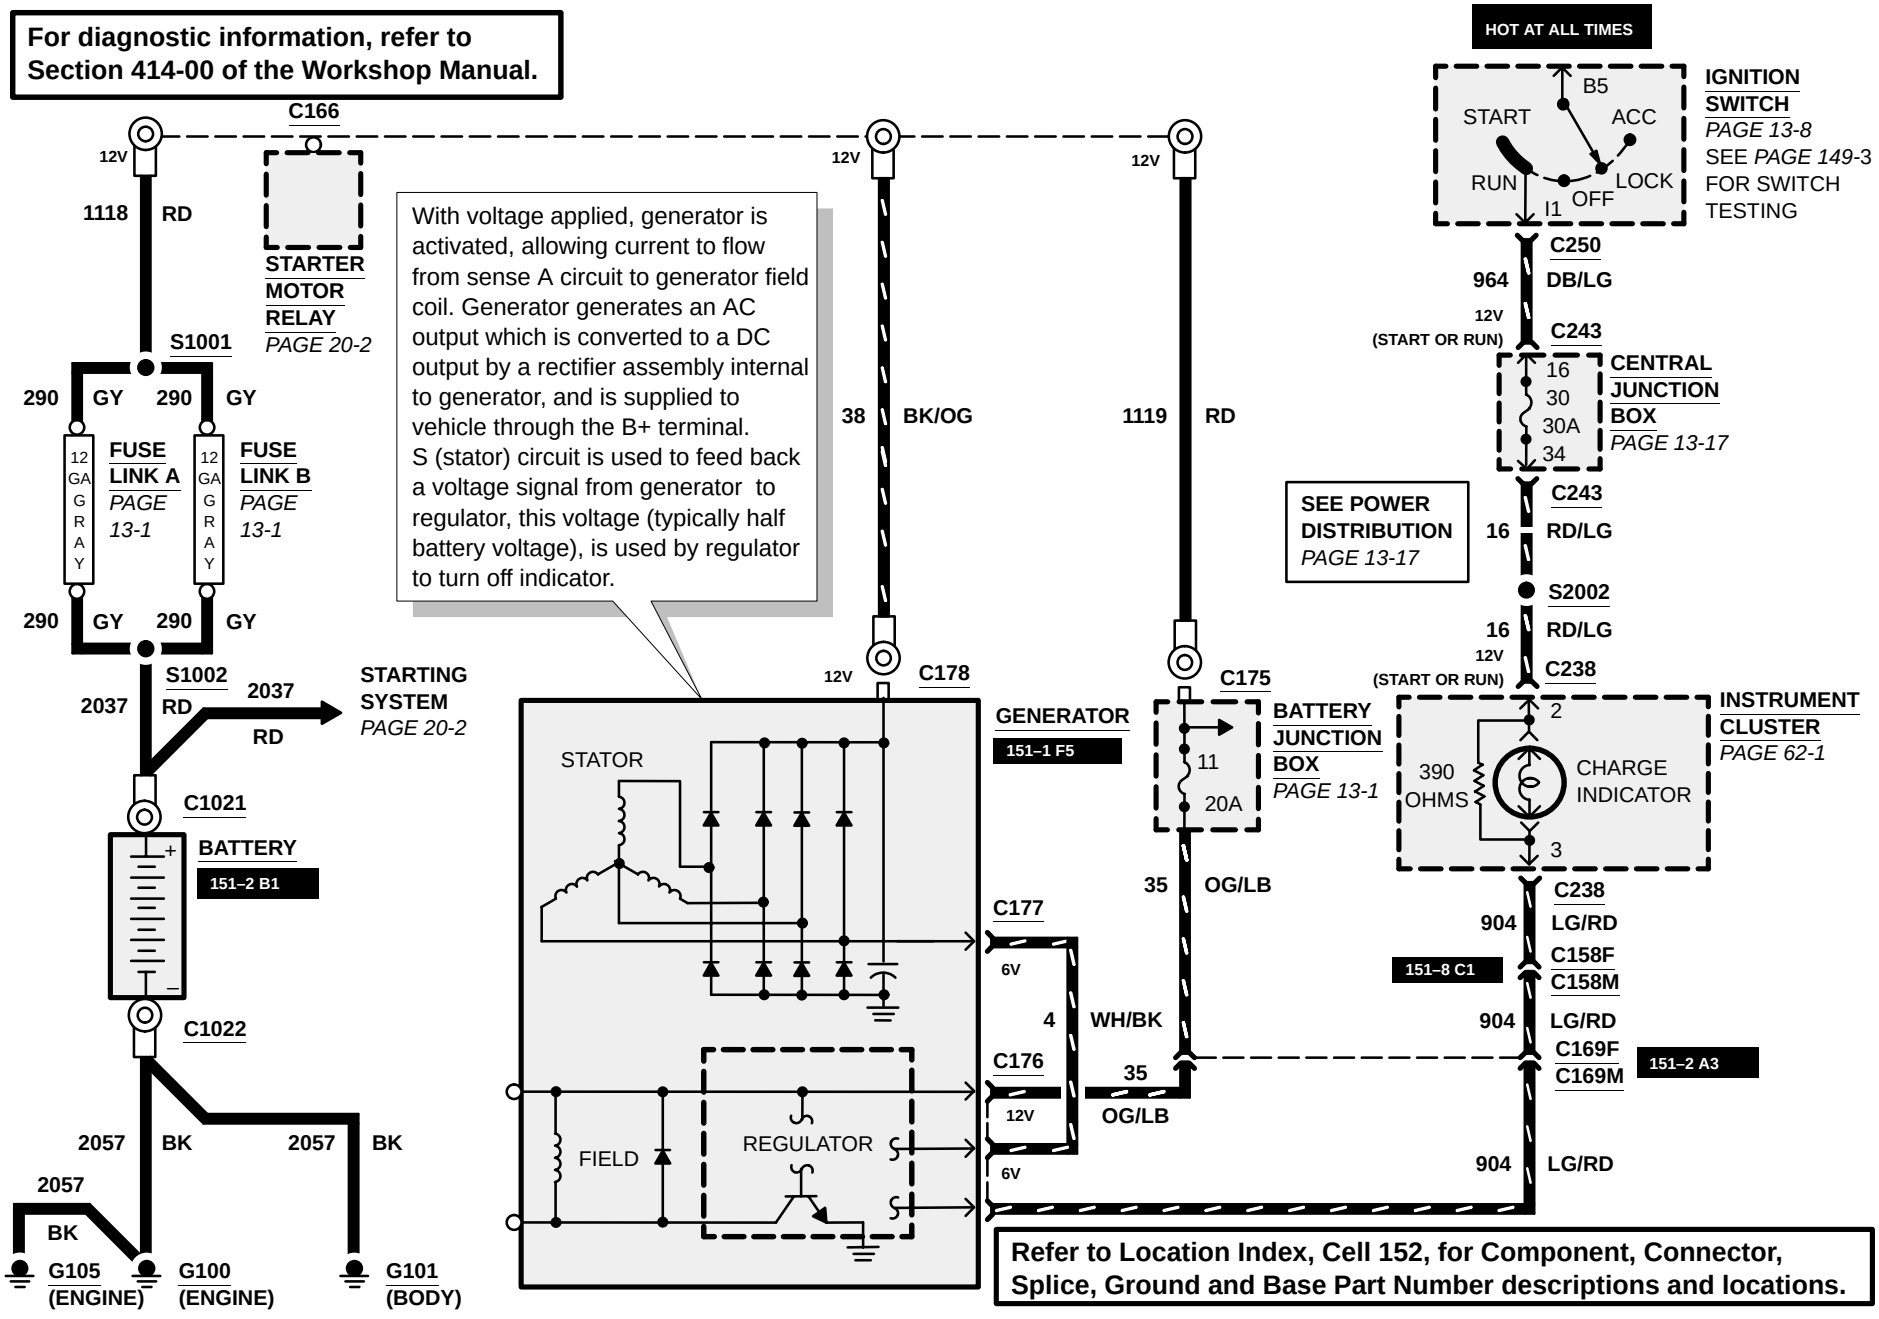


**Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.**