## C896

**14401**

P13
Clock spring

F09024

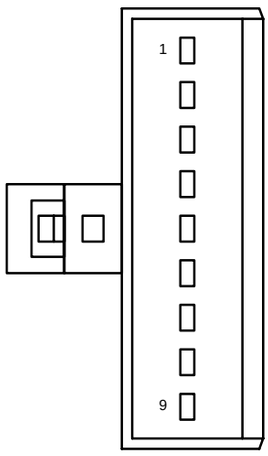


| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 15S-JA48 (GN/BK) | Voltage, ignition switch in Start or Run (not overload protected) |
| 2 | 91S-JA48 (BK/GN) | Ground, switched |
| 3 | 15-PG13 (GN/YE) | Voltage, ignition switch in Start or Run (not overload protected) |
| 4 | 9-PG13 (BN) | Sensor signal return (reference/ground) |
| 5 | 8-PG13 (WH) | Sensor signal |
| 6 | 91S-GJ7 (BK/BU) | Ground, switched |
| 7 | 91-PG30 (BK/WH) | Ground |
| 8 | 91S-JA8 (BK/OG) | Ground, switched |
| 9 | 15S-JA8 (GN/RD) | Voltage, ignition switch in Start or Run (not overload protected) |

## C897

**14K733**

N21
Engine compart-
ment switch




F02058

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 31-GL7 (BK) | Ground |
| 2 | 31S-GL7 (BK/YE) | Ground, switched |

## C899

**14335**

E18
Interior lamp, front

F01005

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 29-LC7A (OG/BU) | Voltage supplied at all times (overload protected) |

## C900

**12A522**

Y134
EVAP canister
purge valve

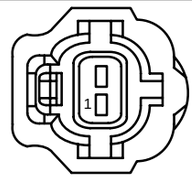


F02027

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 15-RL25 (GN/BU) | Voltage, ignition switch in Start or Run (not overload protected) |
| 2 | 31S-RL25 (BK/BU) | Ground, switched |

## C901 (BK)

**9H589**

B45
Knock sensor

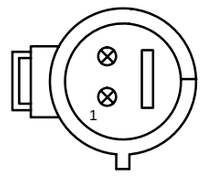


F02072

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 9-RJ18 (BN/YE) | Sensor signal return (reference/ground) |
| 2 | 8-RJ18 (WH/BK) | Sensor signal |

## C903 (BK)

**12A690**

B45
Knock sensor

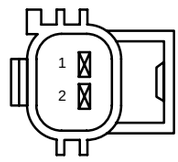


F02066

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 9-RJ18 (BN/YE) | Sensor signal return (reference/ground) |
| 2 | 8-RJ18 (WH/BK) | Sensor signal |