C240b (BK)

* without DVD player
** with DVD player

14401/19B107

Audio unit (18808)

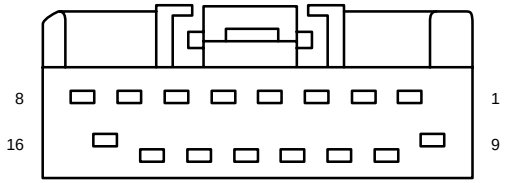

F16071

Pin	Circuit	Circuit function
1	235 (RD/BK)	Instrument illumination, input
2	1205 (BK)	Illumination, Ground
3	1003 (GY/YE)	Voltage supplied in Start (overload protected)
4	–	not used
5	802 (OG/RD)	Speaker, right rear (18808) +
6	803 (BN/PK)	Speaker, right rear (18808) –
7	805 (WH/LG)	Speaker, right front (18808) +
8	811 (DG/OG)	Speaker, right front (18808) –
9	1001 (WH/YE)	Voltage supplied at all times (overload protected)
10	1002 (BK/PK)	Accessory delay relay, switched power, output
11	*1204 (BK/OG)	Ground
	**1203 (BK/LB)	Ground
12	800 (GY/LB)	Speaker, left rear (18808) +
13	801 (TN/YE)	Speaker, left rear (18808) –
14	804 (OG/LG)	Speaker, left front (18808) +
15	813 (LB/WH)	Speaker, left front (18808) –
16	1203 (BK/LB)	Ground

C240c (BK)

14401/19B107

Audio unit (18808)

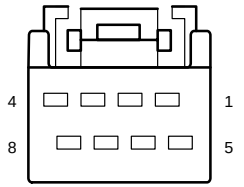

F08353

Pin	Circuit	Circuit function
1	172 (LB/RD)	Radio (18806) – Subwoofer, High –
2	167 (BN/OG)	Radio (18806) – Subwoofer, High +
3	48	Shield
4	168 (RD/BK)	Radio (18806) – Subwoofer, High, Enable
5	–	not used
6	–	not used
7	–	not used
8	–	not used