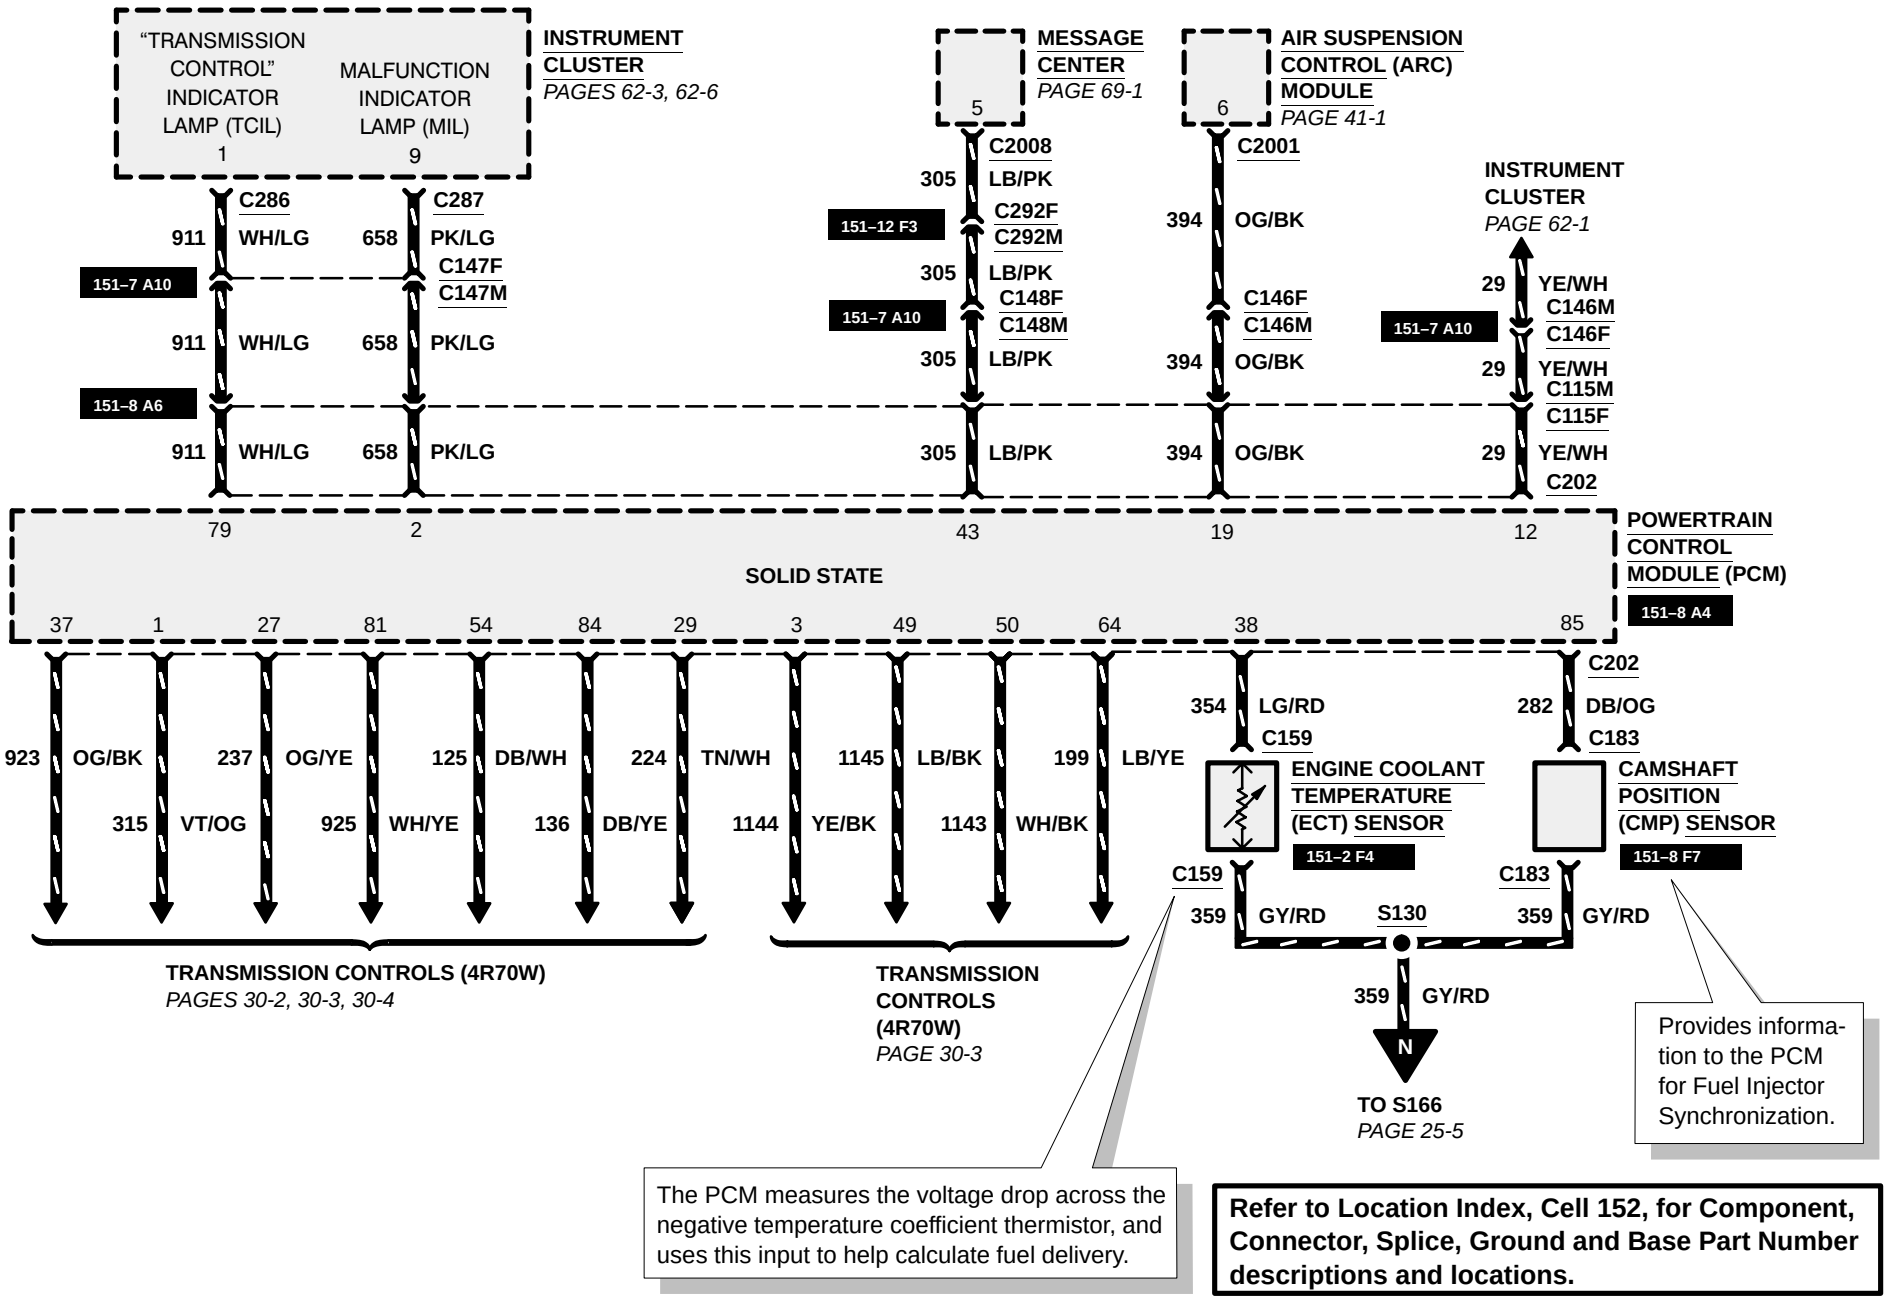
"TRANSMISSION CONTROL" INDICATOR LAMP (TCIL)
1
MALFUNCTION INDICATOR LAMP (MIL)
9
INSTRUMENT CLUSTER
PAGES 62-3, 62-6
5
MESSAGE CENTER
PAGE 69-1
6
AIR SUSPENSION CONTROL (ARC) MODULE
PAGE 41-1
INSTRUMENT CLUSTER
PAGE 62-1
C286
C287
911 WH/LG
658 PK/LG
151–7 A10
C147F
C147M
151–8 A6
C2008
305 LB/PK
151–12 F3
C292F
C292M
C148F
C148M
C2001
394 OG/BK
C146F
C146M
C115M
C115F
29 YE/WH
C146M
C146F
C202
79
2
43
19
12
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–8 A4
37 1 27 81 54 84 29 3 49 50 64 38 85
923 OG/BK
315 VT/OG
237 OG/YE
925 WH/YE
125 DB/WH
136 DB/YE
224 TN/WH
1144 YE/BK
1145 LB/BK
1143 WH/BK
199 LB/YE
354 LG/RD
C159
282 DB/OG
C183
ENGINE COOLANT TEMPERATURE (ECT) SENSOR
151–2 F4
CAMSHAFT POSITION (CMP) SENSOR
151–8 F7
359 GY/RD
S130
N
TO S166
PAGE 25-5
TRANSMISSION CONTROLS (4R70W)
PAGES 30-2, 30-3, 30-4
TRANSMISSION CONTROLS (4R70W)
PAGE 30-3
The PCM measures the voltage drop across the negative temperature coefficient thermistor, and uses this input to help calculate fuel delivery.
Provides information to the PCM for Fuel Injector Synchronization.
Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.