C461 (GY)

14A005

Reversing lamp, right (13411)

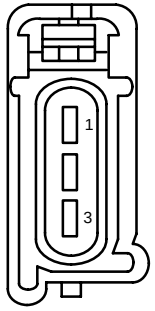

F03142

Pin	Circuit	Circuit function
1	31S-LG16 (BK/RD)	Ground, Switched, Reversing lamp, right (13411)
2	–	not used
3	29S-LG16 (OG/GN)	Switched System Power (SSP)

C466

14A005

Subwoofer amplifier (18B849)



F10009

Pin	Circuit	Circuit function
1	7-MD19 (YE/RD)	Subwoofer, Amplifier enable
2	31-MD19 (BK/BU)	Ground
3	–	not used
4	–	not used
5	30-MD19 (RD/BU)	Battery
6	–	not used
7	1-MD19 (WH/RD)	Subwoofer, audio, signal (+)
8	2-MD19 (GY/RD)	Subwoofer, audio, signal (–)
9	31-MD2 (BK)	Subwoofer, audio, signal, Shield
10	–	not used