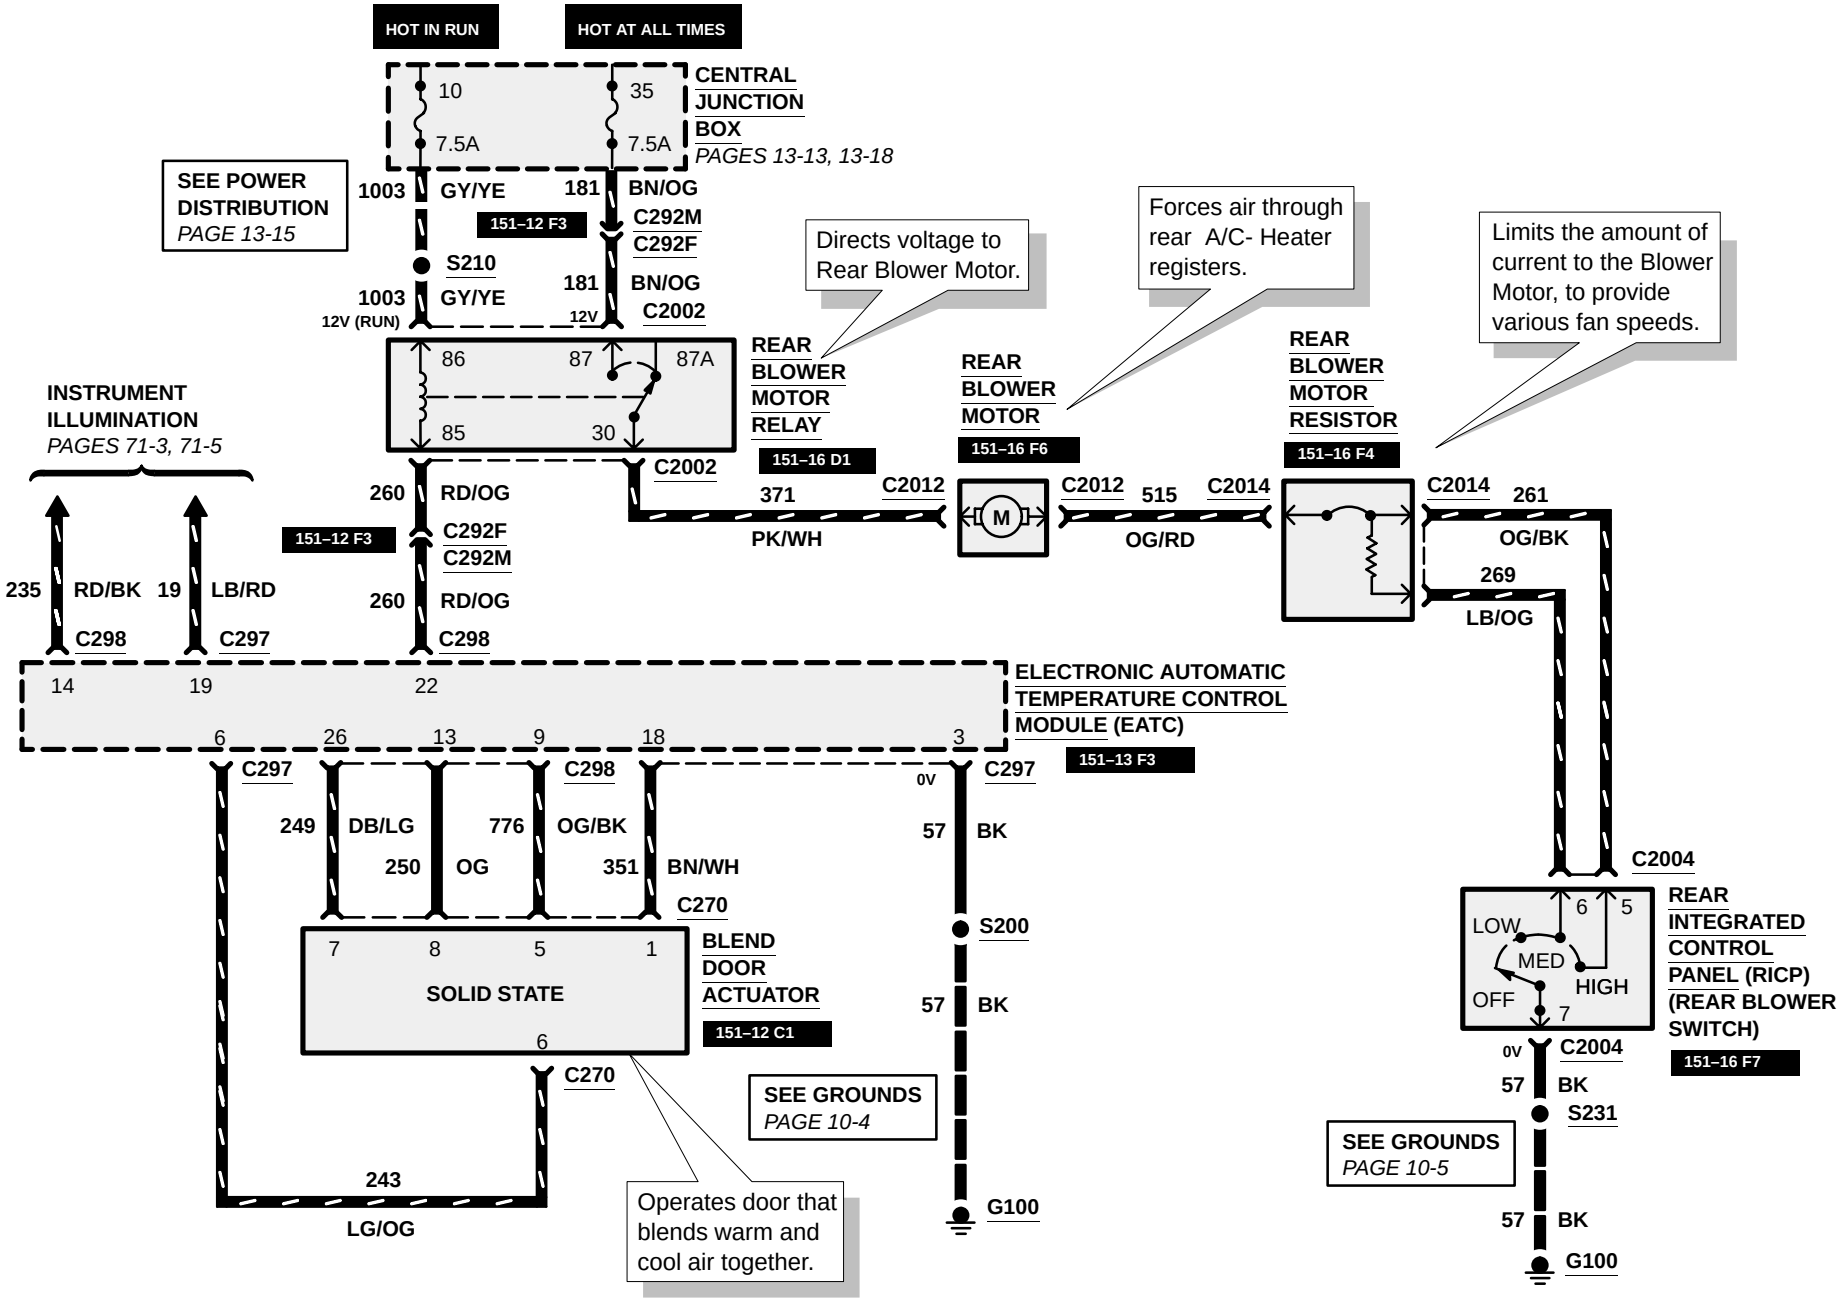
HOT IN RUN
HOT AT ALL TIMES
CENTRAL JUNCTION BOX
PAGES 13-13, 13-18
10
35
7.5A
7.5A
SEE POWER DISTRIBUTION
PAGE 13-15
1003 GY/YE
181 BN/OG
151–12 F3
C292M
C292F
S210
1003 GY/YE
12V (RUN)
181 BN/OG
12V
C2002
Directs voltage to Rear Blower Motor.
Forces air through rear A/C- Heater registers.
Limits the amount of current to the Blower Motor, to provide various fan speeds.
REAR BLOWER MOTOR RELAY
151–16 D1
REAR BLOWER MOTOR
151–16 F6
REAR BLOWER MOTOR RESISTOR
151–16 F4
86
87
87A
85
30
INSTRUMENT ILLUMINATION
PAGES 71-3, 71-5
C2002
260 RD/OG
151–12 F3
C292F
C292M
260 RD/OG
371 PK/WH
C2012
C2012
515 OG/RD
C2014
C2014
261 OG/BK
269 LB/OG
235 RD/BK
19 LB/RD
C298
C297
C298
ELECTRONIC AUTOMATIC TEMPERATURE CONTROL MODULE (EATC)
151–13 F3
14
19
22
6
26
13
9
18
3
C297
C298
C297
0V
249 DB/LG
250 OG
776 OG/BK
351 BN/WH
57 BK
C270
S200
7
8
5
1
SOLID STATE
6
BLEND DOOR ACTUATOR
151–12 C1
57 BK
C270
SEE GROUNDS
PAGE 10-4
243
LG/OG
Operates door that blends warm and cool air together.
G100
C2004
REAR INTEGRATED CONTROL PANEL (RICP) (REAR BLOWER SWITCH)
151–16 F7
LOW
MED
HIGH
OFF
6
5
7
0V
C2004
57 BK
S231
SEE GROUNDS
PAGE 10-5
57 BK
G100