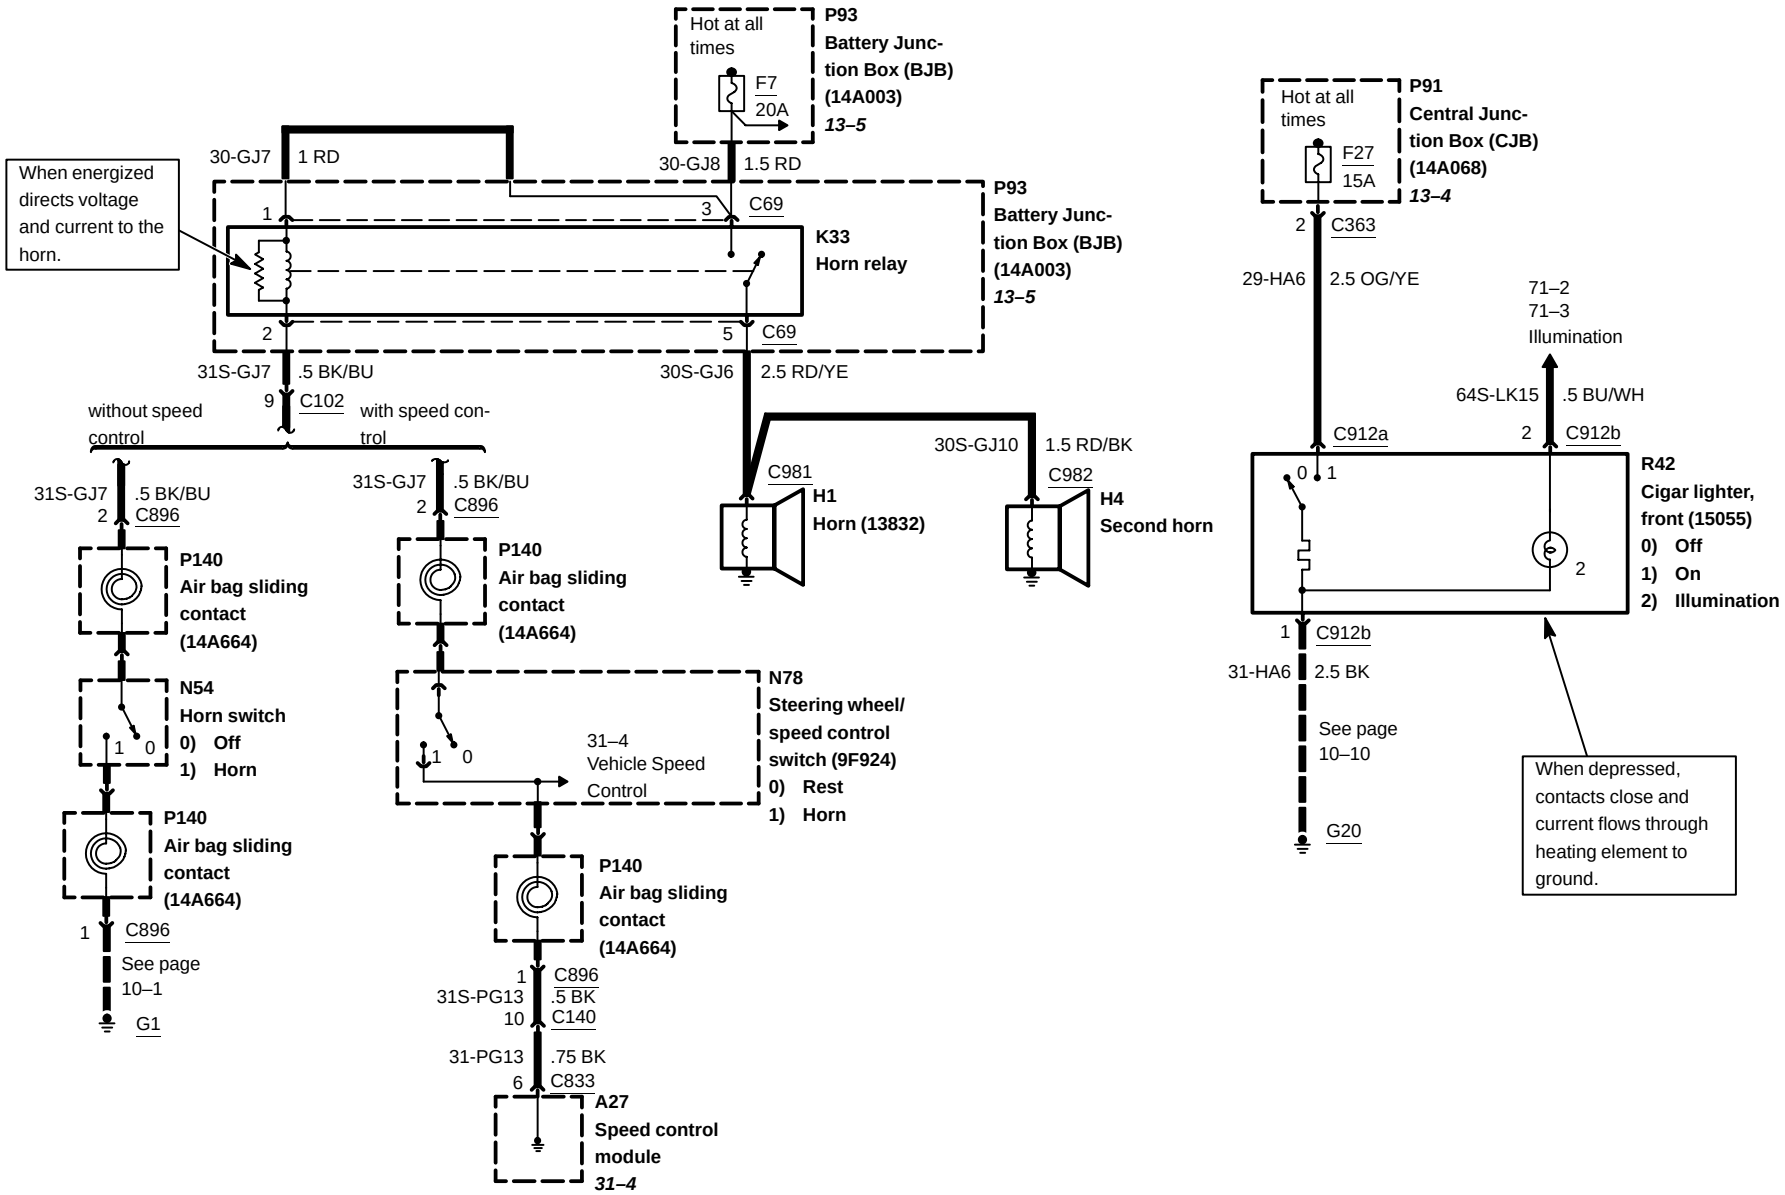
When energized directs voltage and current to the horn.
Hot at all times
P93
Battery Junction Box (BJB)
(14A003)
13–5
F7
20A
30-GJ7
1 RD
30-GJ8
1.5 RD
1
3
C69
K33
Horn relay
2
5
C69
31S-GJ7
.5 BK/BU
30S-GJ6
2.5 RD/YE
9
C102
without speed control
with speed control
31S-GJ7
.5 BK/BU
2
C896
P140
Air bag sliding contact
(14A664)
N54
Horn switch
0) Off
1) Horn
1
0
P140
Air bag sliding contact
(14A664)
1
C896
See page 10–1
G1
31S-GJ7
.5 BK/BU
2
C896
P140
Air bag sliding contact
(14A664)
N78
Steering wheel/ speed control switch (9F924)
0) Rest
1) Horn
1
0
31–4
Vehicle Speed Control
P140
Air bag sliding contact
(14A664)
1
C896
31S-PG13
.5 BK
10
C140
31-PG13
.75 BK
6
C833
A27
Speed control module
31–4
C981
H1
Horn (13832)
30S-GJ10
1.5 RD/BK
C982
H4
Second horn
Hot at all times
P91
Central Junction Box (CJB)
(14A068)
13–4
F27
15A
2
C363
29-HA6
2.5 OG/YE
71–2
71–3
Illumination
64S-LK15
.5 BU/WH
C912a
2
C912b
R42
Cigar lighter, front (15055)
0) Off
1) On
2) Illumination
0
1
2
1
C912b
31-HA6
2.5 BK
See page 10–10
G20
When depressed, contacts close and current flows through heating element to ground.