Automatic

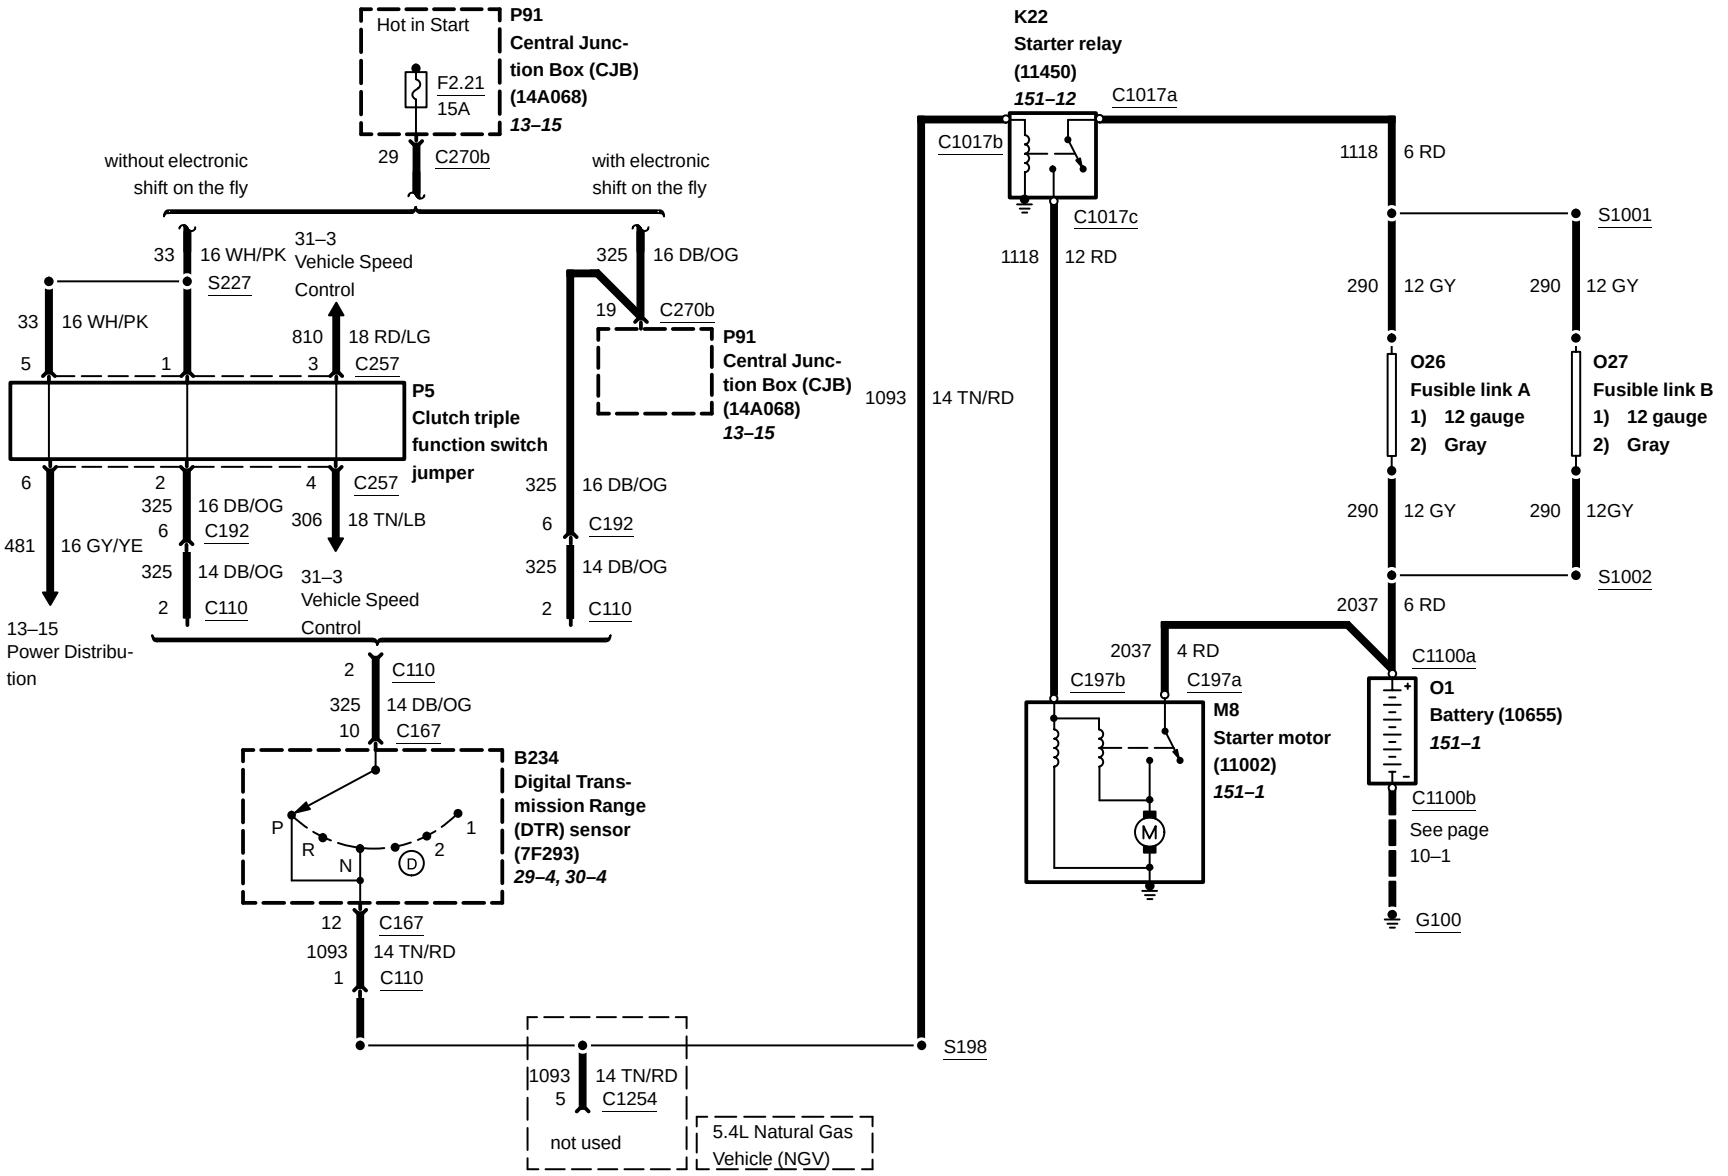
Hot in Start
P91
Central Junction Box (CJB)
(14A068)
13–15
F2.21
15A
29
C270b
without electronic shift on the fly
with electronic shift on the fly
33
16 WH/PK
S227
31–3
Vehicle Speed Control
325
16 DB/OG
19
C270b
P91
Central Junction Box (CJB)
(14A068)
13–15
33
16 WH/PK
5
1
810
18 RD/LG
3
C257
P5
Clutch triple function switch jumper
6
2
4
C257
325
16 DB/OG
6
C192
306
18 TN/LB
481
16 GY/YE
325
14 DB/OG
2
C110
31–3
Vehicle Speed Control
13–15
Power Distribution
325
16 DB/OG
6
C192
325
14 DB/OG
2
C110
2
C110
325
14 DB/OG
10
C167
B234
Digital Transmission Range (DTR) sensor
(7F293)
29–4, 30–4
P
R
N
D
1
2
12
C167
1093
14 TN/RD
1
C110
S198
1093
14 TN/RD
5
C1254
not used
5.4L Natural Gas Vehicle (NGV)
K22
Starter relay
(11450)
151–12
C1017a
C1017b
C1017c
1118
6 RD
1118
12 RD
1093
14 TN/RD
S1001
290
12 GY
290
12 GY
O26
Fusible link A
1) 12 gauge
2) Gray
O27
Fusible link B
1) 12 gauge
2) Gray
290
12 GY
290
12GY
S1002
2037
6 RD
2037
4 RD
C1100a
C197b
C197a
M8
Starter motor
(11002)
151–1
O1
Battery (10655)
151–1
C1100b
See page 10–1
G100