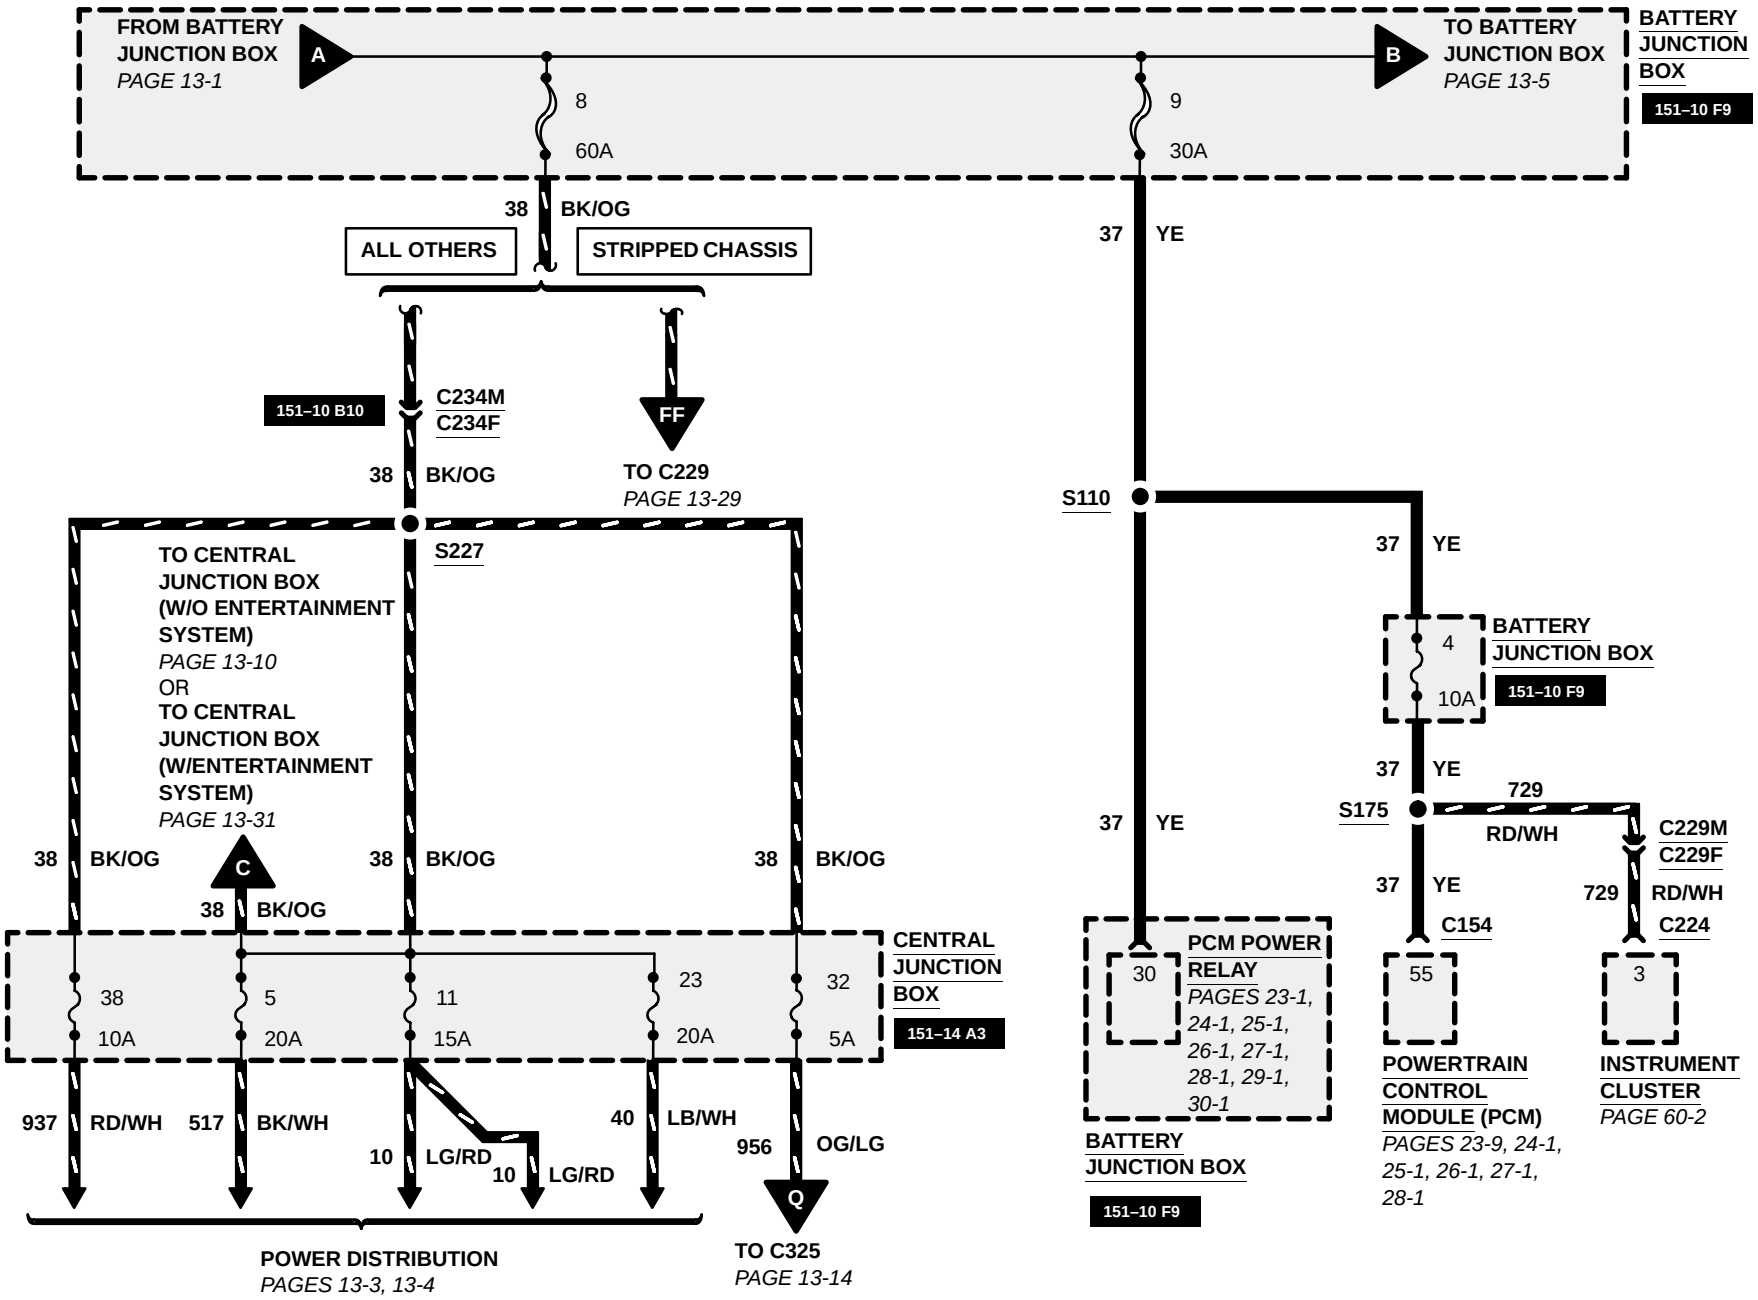
FROM BATTERY JUNCTION BOX
PAGE 13-1
A
8
60A
9
30A
B
TO BATTERY JUNCTION BOX
PAGE 13-5
BATTERY JUNCTION BOX
151–10 F9
38 BK/OG
37 YE
ALL OTHERS
STRIPPED CHASSIS
151–10 B10
C234M
C234F
FF
38 BK/OG
TO C229
PAGE 13-29
S110
S227
37 YE
TO CENTRAL JUNCTION BOX (W/O ENTERTAINMENT SYSTEM)
PAGE 13-10
OR
TO CENTRAL JUNCTION BOX (W/ENTERTAINMENT SYSTEM)
PAGE 13-31
4
10A
BATTERY JUNCTION BOX
151–10 F9
37 YE
729 RD/WH
S175
C229M
C229F
38 BK/OG
38 BK/OG
38 BK/OG
C
38 BK/OG
37 YE
37 YE
C154
729 RD/WH
C224
CENTRAL JUNCTION BOX
151–14 A3
38 10A
5 20A
11 15A
23 20A
32 5A
30
PCM POWER RELAY
PAGES 23-1, 24-1, 25-1, 26-1, 27-1, 28-1, 29-1, 30-1
55
3
937 RD/WH
517 BK/WH
10 LG/RD
10 LG/RD
40 LB/WH
956 OG/LG
Q
BATTERY JUNCTION BOX
151–10 F9
POWERTRAIN CONTROL MODULE (PCM)
PAGES 23-9, 24-1, 25-1, 26-1, 27-1, 28-1
INSTRUMENT CLUSTER
PAGE 60-2
POWER DISTRIBUTION
PAGES 13-3, 13-4
TO C325
PAGE 13-14