C213

14401

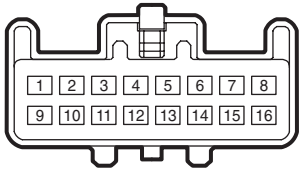

97BG-14A459-YTB (M)

19B113

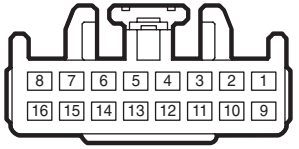

97BG-14489-YTB (F)

(1) 1205 (BK)
(2) - not used -
(3) 1203 (BK/LB)
(4) 1068 (LG/BK)
(5) 832 (LB/PK)
(6) 833 (TN)
(7) - not used -
(8) 1011 (TN/OG)
(9) 48 (Bare)
(10) 1559 (RD)
(11) 1560 (WH)
(12) 1561 (OG)
(13) 1562 (YE)
(14) - not used -
(15) - not used -
(16) 1001 (WH/YE)

C218a

14401

Air bag sliding contact

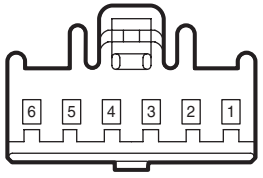

1L2T-14A464-ZA (F)

Pin	Circuit	Circuit Function
1	1011 (TN/OG)	Pulse width dimmer module-fused feed
2	3056 (TN/LG)	System on (climate control)
3	595 (LB/RD)	Radio receiver to redundant radio control
4	151 (LB/BK)	Speed control on-off switch to amplifier
5	848 (DG/OG)	Speed control switch to amplifier
6	460 (YE/LB)	Horn switch feed

C218b

14401

Air bag sliding contact

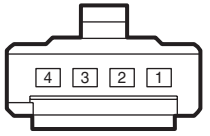

YF1T-14A464-JA (F)

Pin	Circuit	Circuit Function
1	1517 (RD/OG)	Driver airbag return 2
2	1516 (YE/WH)	Driver airbag feed 2
3	615 (GY/WH)	Air bag driver return
4	614 (GY/OG)	Air bag driver feed monitor

C220a

14401

Instrument cluster, inboard

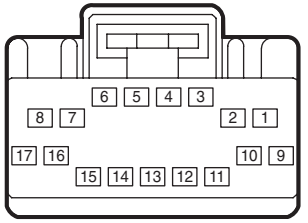

XW4T-14A464-ZA (F)

Pin	Circuit	Circuit Function
1	3049 (BK/LG)	Cluster power
2	1203 (BK/LB)	Electronic module logic ground (type 2 ground)
3	81 (RD/LG)	Windshield washer fluid level sensor
4	1009 (OG/YE)	Heated backlight output to relay
5	1004 (LB/RD)	Delayed accessory output to relay
6	1005 (VT/OG)	Battery saver output to relay
7	489 (PK/BK)	Electronic cluster ignition run feed
8	1411 (GY/OG)	Message center sw to I/C module: message center switch input
9	1435 (DG/VT)	Reverse park aid module: on/off switch input
10	53 (BK/LB)	Courtesy lamp switch to courtesy lamp
11	1034 (BK/WH)	Dome lamp switch to module
12	1404 (YE)	Courtesy lamp mode sw to I/C module: dome lamps
13	1390 (DB)	Instrument cluster module: air bag tone request signal
14	162 (LG/RD)	Parking brake warning lamp to parking brake switch
15	688 (GY/LB)	Heated backlite switch to time delay relay
16	1392 (LG/OG)	Multi function sw to instrument cluster module: right turn sw input
17	—	not used