C380

14A200

N251
Power point
(19N236)

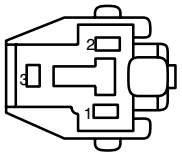

F03163

Pin	Circuit	Circuit function
1	131 (VT/OG)	Cigar lighter, feed
2	–	not used
3	57 (BK)	Ground

C398

14014

N430
Sliding door ajar
switch, right



F03135

Pin	Circuit	Circuit function
1	53 (BK/LB)	Interior lamp relay, switched power, output
2	–	not used
3	54 (LG/YE)	Voltage supplied at all times (overload protected)

C384

14014

N432
Sliding door contact
switch, right



F04229

Pin	Circuit	Circuit function
1	802 (OG/RD)	Speaker, right rear (18808) +
2	117 (PK/BK)	Door lock, output
3	118 (PK/OG)	Door unlock, output
4	803 (BN/PK)	Speaker, right rear (18808) –

C405

14405

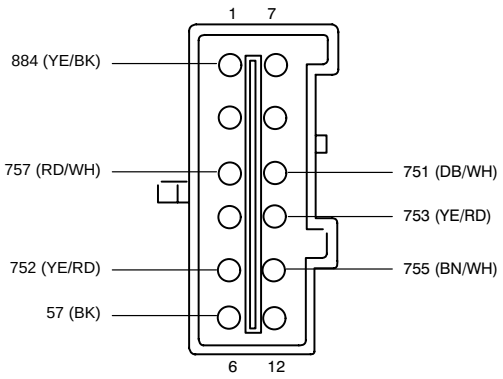

F12149

19949

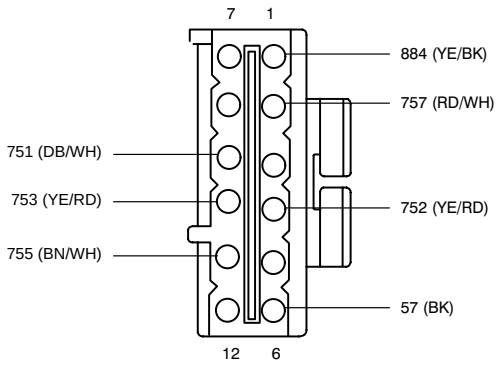

F12151