C960

14335

A269
Video display

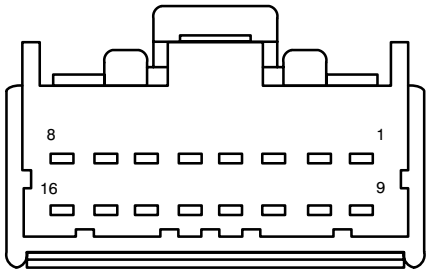

F16119

Pin	Circuit	Circuit function
1	1563 (LG)	Accessory delay
2	694 (BK/LG)	Ground
3	1807 (WH)	VCP video +
4	1808 (BK)	VCP video Drain wire
5	99 (LG/BK)	Audio signal positive, Left
6	76 (LG/WH)	Blue, Drain wire, Left
7	891 (RD/BK)	Audio signal positive, Right
8	1402 (RD/WH)	Audio signal negative, Drain wire, Right
9	1540 (DG)	VCP IR data +
10	1541 (DB)	VCP IR data –
11	48	VCP video, Drain wire
12	–	not used
13	–	not used
14	–	not used
15	–	not used
16	–	not used

C970

15A404
17C712

E16
Roof marker lamp,
left

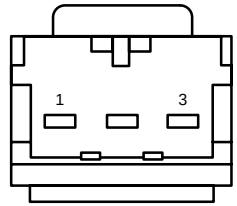

F03235

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	–	not used
3	14 (BN)	Power, Exterior lamps

C971

15A404
17C712

E266
Roof marker lamp,
left center

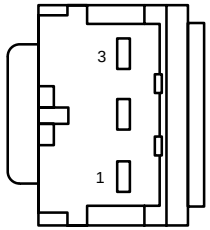

F03235

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	–	not used
3	14 (BN)	Power, Exterior lamps

C972

15A404
17C712

E267
Roof marker lamp,
center

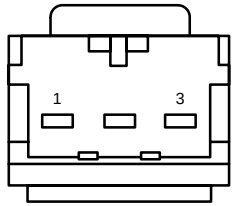

F03235

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	–	not used
3	14 (BN)	Power, Exterior lamps